ID No.
CH 16734
- RETURN TO -
INSTRUMENT CONTROL
SYLVANIA SES -- West
second manual

EXACT

ELECTRONICS, INC.

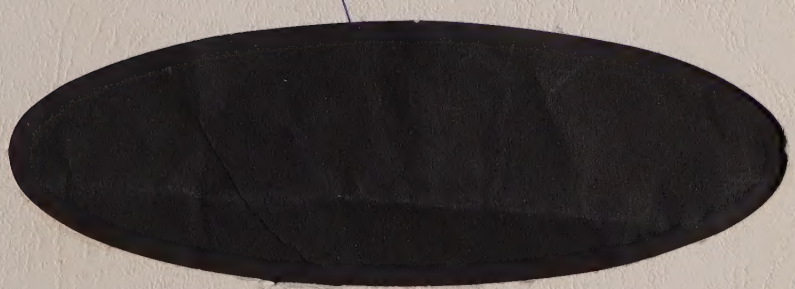

ID No.
CH 16734
- RETURN TO -
INSTRUMENT CONTROL
SYLVANIA SES -- West

second manual

S/N 0053

INSTRUCTION MANUAL

MODELS 500, 503, 504 and 505 B

FUNCTION GENERATORS

EXACT ELECTRONICS INC.
455 S.E. 2nd Avenue, Hillsboro, Oregon 97123 • TEL: (503) 648-6661

Copyright @ 1962 by EXACT ELECTRONICS, INC., Hillsboro, Oregon. Printed in the U.S.A. All rights reserved. Contents of this publication may not be reproduced in any form without permission of the copyright owner.

IF YOUR INSTRUMENT DOES NOT OPERATE

PLEASE

1. Check operating procedure in manual for proper setup.

2. Check fuse and power supply voltages.

3. Call your Exact representative or factory. Instruments returned to the factory will be accepted only if they are sent freight prepaid, unless Exact or factory representative has authorized otherwise.

CLAIM FOR DAMAGED SHIPMENT

The instrument should be inspected as soon as received. If damage has occurred, a claim should be made with the carrier. The claim agent should receive a complete report of damage and a copy sent to Exact. After receiving this report, Exact will advise you of the dispostion of the instrument and arrange for its repair or replacement.

WARRANTY

Exact warrants its instruments to be free from defects in material and workmanship under normal use for a period of twelve months from the original date of shipment. Exact's obligation is limited to repair or replacement.

All repairs and replacements made under this warranty are f.o.b. Exact's factory or designated service depot unless otherwise authorized by Exact. This warranty is made on condition that prompt notice of defect is given to Exact, in writing, within the warranty period and that Exact shall have the sole right to determine whether in fact a defect exists.

This warranty does not apply to any instrument which has been repaired or altered by other than Exact's own service representative so as, in Exact's judgment, to adversely affect it, nor which has been subject to misuse, negligence or accident or which has been operated contrary to sound practice or operating instructions.

CONTENTS

SECTION 1	INDEX
SECTION 2	CHARACTERISTICS, SPECIFICATIONS
SECTION 3	FRONT PANEL CONTROLS, OPERATING INSTRUCTIONS, FIRST TIME OPERATION
SECTION 4	CIRCUIT DESCRIPTION
SECTION 5	CALIBRATION
SECTION 6	PARTS LIST
SECTION 7	CIRCUIT DIAGRAMS
SECTION 8	REPRESENTATIVES, DISTRIBUTORS
SECTION 9	ADDENDA

1.0.0 . . . . . INDEX

4.2.0 CIRCUIT THEORY OF OPERATION

4.2.1 Power Supply
4.2.2 Integrator
4.2.3 X10 Amp
4.2.4 Level Detector
4.2.5 Sine Shaper
4.2.6 Square Amplifier
4.2.7 Square Selector Switch S810
4.2.8 Amp 1 (non inverting)
4.2.9 Amp 2 (inverting)
4.2.10 VCF Amp
4.2.11 Lockout Amplifier

5.0.0 . . . . . CALIBRATION AND MAINTENANCE

5.1.0 FAILURE TO OPERATE

5.2.0 FAILURE TO MEET FACTORY SPECIFICATIONS

5.3.0 CALIBRATION PROCEDURE

5.3.1 Power Supply
5.3.2 Integrator Balance
5.3.3 Level Detector Balance
5.3.4 Level Detector Positive and Negative Reference Adj.
5.3.5 ±16V Adjust (Model 504)
5.3.6 VCF Preliminary Adjustment (Models 503 and 505)
5.3.7 Multiplier Dial Adjust
5.3.8 Timing
5.3.9 VCF Mode Calibrate (Models 503 and 505)
5.3.10 Square Amp
5.3.11 Amp 1
5.3.12 Amp 2
5.3.13 Symmetry Modes
5.3.14 Offset Modes
5.3.15 Sine Shaper
5.3.16 Lockout Amp
5.3.17 External Trigger Out Check

6.0.0 . . . . . PARTS LIST

1.0.0 . . . . . INDEX

2.0.0 . . . . . CHARACTERISTICS

2.1.0 SPECIFICATIONS

3.0.0 . . . . . .OPERATING INSTRUCTIONS

3.1.1 FRONT PANEL FAMILIARITY

3.1.1 Location and Function of Controls

3.2.0 FIRST TIME OPERATION

3.2.1 Control Settings
3.2.2 Procedure for producing Bi-Polar Square
3.2.3 Procedure for producing Positive Square
3.2.4 Procedure for producing Negative Square
3.2.5 Procedure for producing Bi-Polar Square Pulses
3.2.6 Procedure for producing Positive Square Pulses
3.2.7 Procedure for producing Negative Square Pulses
3.2.8 Procedure for producing Sine Waveform
3.2.9 Procedure for producing Triangle Waveform
3.2.10 Procedure for producing Ramp Waveform
3.2.11 Procedure for producing Reverse Ramp Waveform
3.2.12 Procedure for Push-Pull Operation
3.2.13 VCF Operation (Models 503 and 505 only)
3.2.14 Gating, Triggering (Models 504 and 505 only)

4.0.0 . . . . . CIRCUIT DESCRIPTION AND THEORY

4.1.1 CIRCUIT DESCRIPTION

4.1.1 Block Diagram
4.1.2 Power Supply
4.1.3 Integrator
4.1.4 X10 Amp
4.1.5 Level Detector
4.1.6 Timing and Feedback Circuitry
4.1.7 Sine Shaper
4.1.8 Amp 1 (non-inverting)
4.1.9 Amp 2 (inverting)
4.1.10 Square Amplifier
4.1.11 VCF Amplifier
4.1.12 Lockout Amplifier

1.0.0 . . . . . INDEX

7.0.0 . . . . . CIRCUIT DIAGRAMS

Block Diagram, Model 505	Dwg 505-100
Assembly P.C. Board, Model 505	Dwg 505-200
Power Supply, Models 503, 504 and 505	Dwg 505-103
Sine Shaper, Square Amplifier, Amplifier 1 and Amplifier 2, Models 503, 504 and 505	Dgw 505-102
Level Detector, VCF and Lockout, Model 505	Dgw 505-101
Level Detector and Lockout, Model 504	Dgw 503-101
Integrator, Level Detector and VCF, Model 503	Dgw 504-101

8.0.0 . . . . . REPRESENTATIVES DISTRIBUTORS

9.0.0 . . . . . ADDENDA

SECTION 2

CHARACTERISTICS, SPECIFICATIONS

EXACT electronics, inc.

Function Generators • Waveform Synthesizers

MODELS 503, 504 and 505 FUNCTION GENERATORS

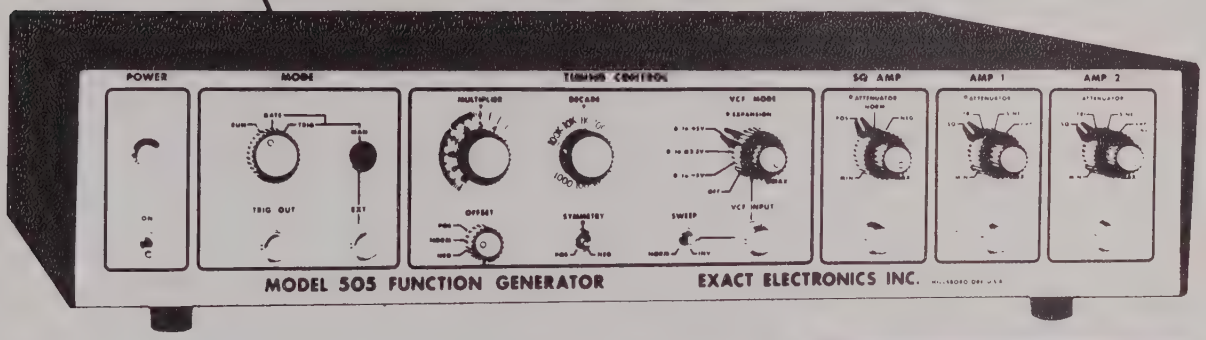

503, 504 and 505 — **Take these signals:**

503, 504 and 505 — **push-pull them:**

504 and 505 — **single-shot or gate them:**

503 and 505 — **add VCF at 50:1**

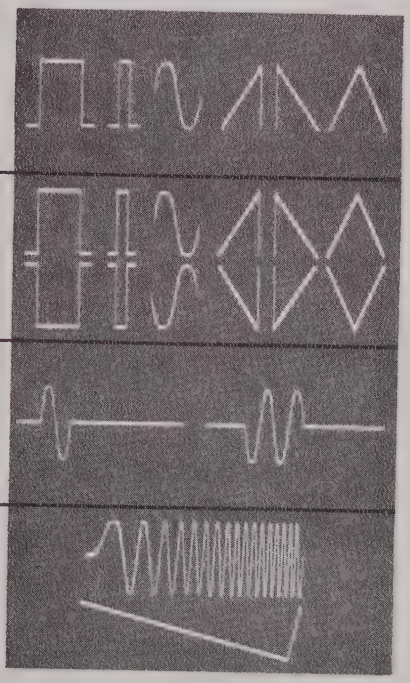

503	$525
504	$525
505	$595

Prices effective 1 April 1968

Prices and specifications subject to change without notice.

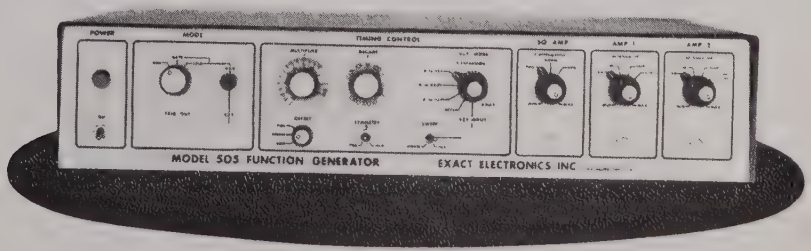

You can have all this in our 505

EXACT Electronics, Inc

EXACT ELECTRONICS INC.
455 S.E. 2nd Avenue, Hillsboro, Oregon 97123 • TEL: (503) 648-6661

503, 504 AND 505

OUTPUTS: Three selectable, continuously variable

SQ. AMP

Square: 25V P-P into 600 ohms, 50nsec risetime
Positive square: 0 to 13V P, 50nsec risetime
Negative square: 0 to −13V P, 50nsec risetime

AMP 1

Triangle: 25V P-P into 600 ohms
Sine: 25V P-P into 600 ohms
Ramp: 25V P-P into 600 ohms
Square: 25V P-P into 600 ohms, 50nsec risetime

Positive triangle, square or ramp: 0 to 13V P into 600 ohms
Negative triangle, square or ramp: 0 to −13V P into 600 ohms

AMP 2

Same outputs as AMP 1 with 180° phase shift. Also has provision to put AMP 1 and AMP 2 in phase. Square wave risetime out of AMP 2 is 100nsec.

All three amplifiers are short circuit proof and will drive 50 ohms at reduced amplitudes, approximately 5 volts peak to peak.

FREQUENCY RANGE: .0001Hz to 1MHz in ten decade ranges

FREQUENCY ACCURACY: .0001Hz to 1MHz ±3% of dial reading

FREQUENCY STABILITY: ±0.025% short term (10 min.)
±0.2% long term (24 hr.)

AMPLITUDE STABILITY: ±0.1% short term (10 min.)
±0.25% long term (24 hr.)

DC REFERENCE STABILITY: ±0.05% short term (10 min.)
±0.5% long term (24 hr.)

DC REFERENCE: Amp 1 and Amp 2 0 volts ±50mv
Sq. Amp 0 volts ±75mv

SINE DISTORTION: Less than 1% to 100K, Less than 2% to 1MHz

AMPLITUDE FREQUENCY RESPONSE: ±0.1db .0001Hz to 100KHz
±0.5db 100KHz to 1MHz

TRIANGLE, RAMP LINEARITY: 99% to 10KHz, 98% to 1MHz – Ramp to 100KHz

VCF RANGE (503, 505 only): 50:1

VCF LINEARITY (503, 505 only): 20:1 ±0.1%, 50:1 ±2%

The VCF input will accept three different inputs: 0 to +5V, 0 to −5V, 0 to ±2½V.

504, 505 ONLY:

GATE TRIGGER INPUT: Manual or External, +5V turn ON, approx. +2V turn OFF. Gate D.C. coupled, trigger A.C. coupled.

Trigger Mode requires a pulse of at least 1 usec rise-time to trigger on.

PHYSICAL SIZE: 16¾" wide, 3½" high, 14¾" deep

SECTION 3

FRONT PANEL CONTROLS, OPERATING INSTRUCTIONS, FIRST TIME OPERATION

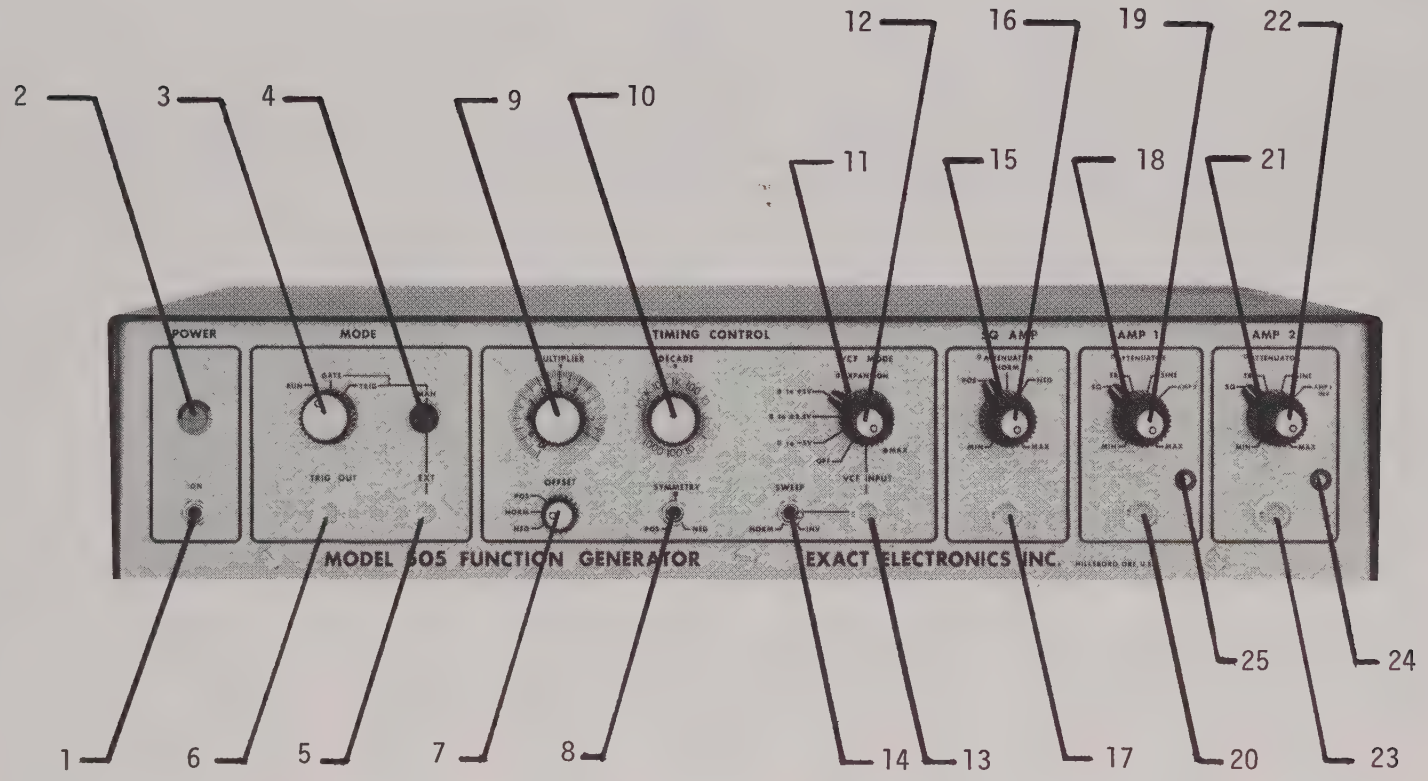
POWER
MODE
TIMING CONTROL
SQ AMP
AMP 1
AMP 2
MODEL 505 FUNCTION GENERATOR
EXACT ELECTRONICS INC.
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25

3.0.0 . . . . . OPERATING INSTRUCTIONS

3.1.0 FRONT PANEL FAMILIARITY

3.1.1 Location and Function of Controls

1. Power on/off switch
2. Power ON light indicator
3. Gate/Trigger/Free Run mode selector switch.
4. Manual Gate/Trigger pushbutton
5. External Gate/Trigger input jack
6. External Trigger output jack for triggering external equipment
7. Offset control - provides either positive or negative offset from ground for triangle, ramp or sine out of amplifiers 1 and 2.
8. Symmetry switch - used to convert triangle into a ramp or square wave into a pulse
9. Multiplier dial - multiplies decade frequency
10. Decade selector switch - selects any one of ten decade ranges.
11. VCF input mode selector - selects one of three voltage controlled frequency inputs. Selection depends on what type of voltage is available.
12. VCF expansion control - variable sweeping range adjustment. Full maximum gives 50:1 sweep with +5V, -5V or ±2½V ramp VCF input.
13. VCF input jack
14. VCF sweep direction selector - selects direction of sweep with any given input voltage. Example, in Norm position with a plus ramp input, generator will sweep down in frequency from dial setting. In the Inv position with same plus input voltage, generator will sweep from low end of sweep range (50:1 lower than dial setting) up to expansion ratio set by expansion control. Refer to section 3.3.13 for sweep control characteristics when VCF mode selector switch is in the 0 to -5V and 0 to ±2½V positions.

3.1.1 Location and Function of Controls (continued)

15. Square amp selector - selects bi-polar square, positive square, negative square. Also selects bi-polar pulse, positive pulse and negative pulse if Sym switch is either Pos or Neg.

16. Square Amp attenuator - attenuates output from max amplitude down to approximately 0. Below 100mv refer to Section 2, Amplitude Adjustment.

17. Square Amp output connector

18. Amplifier 1 selector - selects square, triangle, sine or Amplifier 2. Also selects ramp, reverse ramp and pulse if SYM switch is positive or negative. Amp 1 selector to Tri for ramp, square for pulse.

19. Amplifier 1 attenuator - attenuates outputs from maximum amplitude down to approximately zero volts.

20. Amplifier 1 output

21. Amplifier 2 selector - selects square, triangle, sine or Amp 1 inverted. Also selects ramp, reverse ramp and pulse if Sym switch is Pos or Neg. Amp 1 selector to Tri for ramp or square pulse.

22. Amplifier 2 attenuator - attenuates output from maximum amplitude down to approximately zero volts.

23. Amplifier 2 output connector

3.2.0 FIRST TIME OPERATION

3.2.1 A. Set all function generator controls as follows

POWER	ON
MODE	RUN
OFFSET	NORM
SYMMETRY	OFF
MULTIPLIER	X10
DECADE	1K
SWEEP	NORM
VCF MODE	0 to +5V
VCF EXPANSION	MAX
SQ AMP	NORM
AMP 1	SQ
AMP 1 ATTEN	MAX
SQ AMP ATTENUATOR	MAX

3.2.1 A. Function Generator controls (continued)

AMP 2	SQ
AMP 2 ATTEN	MAX
TRIG OUT	Connect trig out jack to monitor oscilloscope external trigger input. Use coaxial cable.

B. Set oscilloscope as follows.

VERTICAL SENSITIVITY	5V/CM
INPUT COUPLING	DC
SWEEP TIME	100μSEC/CM
TRIGGER	EXTERNAL POS

3.2.2 Procedure for producing bi-polar square

A. Same settings as in 3.2.1.

B. Monitor square amp output. Bi-polar square waves are also available from Amp 1 and Amp 2 outputs.

3.2.3 Procedure for producing positive square

A. Same settings as in 3.2.1 with exception of SQ AMP selector which should be POS.

B. Monitor Sq Amp output. A positive square is also available out of Amp 1, negative square from Amp 2.

3.2.4 Procedure for producing negative square.

A. Same settings as in 3.2.1 with exception of SQ AMP selector which should be NEG.

B. Monitor Sq Amp output. A negative square is also available out of Amp 1, positive square from Amp 2.

3.2.5 Procedure for prouducing bi-polar square pulses

A. Same settings as in 3.2.1 with exception of SYMMETRY switch which should be POS or NEG.

B. Monitor Sq Amp output. Bi-polar square pulse is also available from Amp 1 and Amp 2 outputs.

3.2.6 Procedure for producing positive square pulses

A. Same settings as in 3.2.1 with exception of SYMMETRY switch which should be POS or NEG and SQ AMP selector to POS.

B. Monitor Sq Amp output. Positive square pulse is also available from Amp 1 and Amp 2 outputs.

3.2.7 Procedure for producing negative square pulses

A. Same settings as in 3.2.1 with exception of SYMMETRY switch which should be POS or NEG and SQ AMP selector to NEG.

B. Monitor Sq Amp output. Negative square pulse is also available from Amp 1 and Amp 2 outputs.

3.2.8 Procedure for producing sine waveform

A. Same settings as in 3.2.1 with exception of Amp 1 and Amp 2 selectors which are set to SINE.

B. Monitor Amp 1 or Amp 2 output. Amp 2 sine will be 180° out of phase with Amp 1.

3.2.9 Procedure for producing triangle waveform

A. Same settings as in 3.2.1 with exception of Amp 1 and Amp 2 selectors which are set to TRIANGLE.

B. Monitor Amp 1 or Amp 2 output. Amp 2 triangle will be 180° out of phase with Amp 1.

3.2.10 Procedure for producing ramp waveforms

Same procedure and settings as in 3.2.9 A-B with exception of SYMMETRY switch which should be POS.

3.2.11 Procedure for producing reverse ramp waveform.

Same procedure and settings as in 3.2.9 A-B with exception of SYMMETRY switch which should be NEG.

3.2.12 Procedure for push-pull operation

Amp 1 and Amp 2 provide push-pull outputs automatically with individual amplitude controls. When Amp 2 is in Amp INV position, you would still have a push-pull output except that amplitudes of both amplifiers can be controlled by Amp 1 attenuator.

3.2.12 Procedure for push-pull operation (continued)

Amp 2 amplitude attenuator is used for balance. For example, if Amp 1 were set to Sine and Amp 2 set to Amp 1 INV, the unit will produce a push-pull sine output. Amp 1 produces sine at zero degrees while Amp 2 produces sine output at 180 degrees. The attenuator for Amp 2 is now used to match the amplitude of sine waveform out of Amp 1. Adjusting attenuator of Amp 1 will now control amplitude of both waveforms.

3.2.13 VCF Operation (Models 503 and 505 only)

A VCF Mode selector switch provides a selection of input voltages depending on what is available. They are 0 to +5V, 0 to -5V and 0 to ±2½. INPUT MUST MATCH VCF MODE SELECTOR. When used in conjunction with the sweep switch, the user has a choice of sweeps; he may sweep up in frequency or down in frequency, or up and down about a center frequency in the ±2½V position. Center frequency will be approximately one-half dial setting.

Sweep direction vs input voltage:

1. 0 to +5V position - With sweep switch in NORM position and a 0 to plus input voltage, generator will sweep from dial frequency down to low end of sweeping range set by expansion control. In INV position generator frequency will drop to 1/50th of dial setting, then sweep up to a frequency to a point set by expansion control. With expansion control fully CW, generator will sweep up to a dial frequency. The INV position requires an external frequency counter to determine exact frequency settings.

2. 0 to -5V position - With sweep switch to NORM the generator will initially drop to approximately 1/50th of dial setting with zero volts input. Precise frequency must be determined with an external frequency counter. When a 0 to minus voltage is applied, the generator will sweep up in frequency to an upper frequency which is set by expansion control. Again, an external frequency counter is required to determine upper frequency.

   With sweep switch to INV position, generator will sweep from dial setting down to a frequency set by the expansion control.

3.2.13 VCF Operation (continued)

3. 0 to ±2½V position - when VCF mode switch is set to ±2½V with zero volts input, the generator frequency will drop to approximately one-half of dial setting. With sweep switch set to NORM and a ramp input starting at -2½v, the generator will drop in frequency from the center frequency to the low end of the sweeping range, approximately 1/50th of dial setting. As ramp goes positive, generator frequency will increase at a linear rate until the input reaches the +2½V peak, at which time the generator will be at approximately dial setting. When the sweep switch is set to INV the reverse will happen. Exact frequency settings must be determined with an external counter.

3.2.14 Gating, triggering (single shot) 504 and 505

NOTE: LOCKOUT CIRCUITRY WILL NOT FUNCTION PROPERLY WHEN THE OFFSET SWITCH IS IN THE NEG POSITION.

A. Gating operation (D.C. coupled)

1. Switch mode selector to Gate.

2. Monitor any output.

3. Push manual Gate/Trig button and observe output continues as long as depressed.

4. Once button is released, observe that last cycle is completed before locking out.

5. Using external +5 volts feeding Ext gate input, observe that generator free runs as long as input is applied.

B. Trigger (single shot) operation (A.C. coupled)

1. Switch mode selector to Trig.

2. Monitor any output.

3. Push manual Gate/Trig button and observe that a single pulse is generated each time button is depressed.

4. Using external pulse source of +5 volts with a 1±sec risetime or faster, feed Ext input, observing that a single pulse is generated for each external trigger input pulse.

SECTION 4

CIRCUIT DESCRIPTION

4.1.0 CIRCUIT DESCRIPTION

4.1.1 BLOCK DIAGRAM (refer to drawing 505-100, Section 7).

4.1.2 POWER SUPPLY

The regulated power supply produces all operating voltages required by the instrument. It includes regulated ±18V and unregulated ±30V. The power supply is short circuit protected.

4.1.3 INTEGRATOR

The purpose of the integrator is basically to integrate a square waveform into a linear triangle waveform.

4.1.4 X10 AMP

The X10 Amp is an operational amplifier with a gain variable from 10 to 1. The triangle from the integrator is passed through this amplifier.

This variable gain amplifier causes the triangle amplitude to vary, thus allowing the frequency to be changed.

4.1.5 LEVEL DETECTOR

The function of the Level Detector is to produce a square waveform which is used to connect the + and - VCF supply to the integrator to obtain the triangle waveform.

4.1.6 TIMING AND FEEDBACK CIRCUITRY

The purpose of the timing and feedback circuitry is to connect the integrator and level detector together to make a free-running generator producing square and triangle waveforms plus a method for varying the frequency simultaneously.

The timing circuitry connects the level detector to the integrator circuit. The combination of these circuits produces a free-running oscillator, producing a square waveform and a triangle waveform. The timing circuitry also provides a method of controlling and varying the frequency of the free-running oscillator circuit.

4.1.7 SINE SHAPER

The sine shaper is basically an amplifier utilizing the non-linear characteristics of semiconductor

4.1.7 SINE SHAPER (continued)

diodes to cause the amplifier gain to vary non-linearly. The triangle waveform is fed into the sine shaper and the resultant sine waveform is produced.

4.1.8 AMP 1 (non inverting)

Amp 1 is basically a high-gain, wide bandwidth amplifier with negative feedback.

Any of four inputs (square, triangle, sine or the output of the other amplifier) may be selected. The selected waveform is amplified and applied to the output.

The amplifier will drive 600 ohms at greater than 25V P-P and is short-circuit protected. Output amplitude will vary with load.

4.1.9 AMP 2

Amp 2 is essentially identical to Amp 1 but is inverting.

4.1.10 SQUARE AMPLIFIER

The square amplifier is basically an electronic switch. It is driven BY the square wave from the level detector. The use of such a circuit produces a good square wave with relatively fast rise and fall times.

Overshoot, ringing and droop are limited by peak clamping of both negative and positive extremes. This amplifier will drive a 600-ohm load at 25V P-P and a 50-ohm load at a lower amplitude. This amplifier is short circuit protected.

4.1.11 VCF AMPLIFIER

The purpose of the VCF Amp is to provide an equal positive and negative voltage which can be varied simultaneously by the application of an external VCF input voltage (voltage controlled frequency).

4.1.12 LOCKOUT AMPLIFIER

The purpose of the lockout amplifier is to enable the generator to lock out (stop running). Two lockout modes are provided, gate and trigger. In the gate mode, the generator can be externally or manually gated on as long as signal is applied. In

4.1.12 LOCKOUT AMPLIFIER (continued)

the trigger mode the generator will produce one complete cycle each time a signal is received.

4.2.0 CIRCUIT THEORY OF OPERATION

4.2.1 POWER SUPPLY (refer to drawing 505-103)

The power supply produces ±18V and ±30V to the instrument and consists of two basically identical series regulators which produce a low ripple ±18V from an unregulated ±30V source.

Line voltage is applied to transformer T100 through the ON/OFF switch S100 and fuse F100. The transformer produces 30 volts AC which is fed to rectifier assembly D100 which produces the unregulated ±30V. Capacitors C100 and C110 provide filtering of the unregulated +30V.

Because both the +18V and the -18V regulators are basically identical, only the positive regulator will be discussed here. Q100 is basically a current source. The maximum current is limited by resistor R101.

REGULATOR OPERATION (+18V supply)

A reference voltage of approximately +9V is applied to one side of differential amplifier Q160 and Q180. The reference zener D162 is connected through D121 and voltage divider R123 and R122 to apply approximately +8V on C121 initially to provide a starting voltage for the regulator.

Q160 will supply current to the base of Q120 which will in turn supply voltage to the base of Q140.

Emitter follower Q140 supplies the regulated +18V. The emitter voltage of Q140 is fed through voltage divider R182, R183 and R184.

The arm of R183 is adjustable and provides approximately +9V at the base of Q180 when Q140 emitter voltage is +18V.

If the output voltage increases due to a decrease in load or an increase in line voltage, the base voltage at Q180 will increase, causing the collector current of Q160 to decrease. The base voltage of Q160 is fixed by zener diode D162 at approximately +9V.

With a decrease in collector current of Q160, voltage at the base of Q120 will increase, causing less collector current to flow through Q120 and R124,

REGULATOR OPERATION (continued)

lowering the voltage at the base of Q140 until the emitter voltage has returned to +18V.

+18V adjust is used to calibrate the power supply to +18V ±3mv. -18V supply operates in essentially the same manner.

4.2.2 INTEGRATOR (refer to drawing 505-101)

The integrator circuit is utilized to produce a very linear output triangle by integrating the square waveform produced by the level detector and the VCF amplifier. The integrator is an operational amplifier.

The operational amplifier Q230 has a matched FET input to obtain a very high input impedance.

Q200 and Q210, matched FET's, provide an extremely high input impedance into the operational amplifier. Feedback from the output emitter follower, Q250 and Q255, is accomplished through the integrating capacitors, C201 through C206, selected by the Decade switch and is also applied to the inverting side of the operational amplifier. This provides negative feedback, forcing the summing junction to remain at virtual ground. The Int Bal control is adjusted to balance the two inputs of the differential operational amplifier.

With the positive VCF supply connected to the timing resistor, the output of the operational amplifier will try to switch negative immediately.

The positive voltage applied to the timing resistor and connected to the summing junction will allow a finite current to flow through the timing resistor. This current will be constant as the VCF voltage is constant and the summing junction is held at virtual ground due to the extremely high gain and negative feedback. Due to the negative feedback through the integrating capacitor, output must charge the integrating capacitor.

As the timing current flows from the summing junction, an equal but opposite current will be applied through the integrating capacitor in the feedback loop. This feedback current through the integrating capacitor must remain constant as the input timing current is constant. This will cause the output to rise negative charging the capacitor at a constant rate.

4.2.2 INTEGRATOR (continued)

The output is connected to the level detector through the X10 Amp. When the X10 Amp output reaches a predetermined level, the level detector will change state and invert the square waveform applied to the switching bridge. This will in turn reverse the operation described and the integrator output will reverse and start rising positively, thus producing a linear triangle waveform at the output.

By switching in different timing resistors and integrating capacitors, frequency can be changed in decade steps. By varying the Multiplier dial, the triangle amplitude applied to the integrating capacitors is changed causing a linear change in timing current and thereby changing frequency. By switching resistors and capacitors with the Decade switch and adjusting the Multiplier dial, any desired frequency from 0.0001 to 1MHz may be obtained.

The Sym switch, S560, is provided to produce non-symmetrical operation required for the various non-symmetrical waveforms such as the ramp, reverse ramp and square waveform pulses. Switch S560 enables the VCF voltage to be connected directly to the summing junction, by-passing the timing resistor.

When S560 is switched to the negative position, R575 connects the applied negative VCF voltage directly to the summing junction.

When the positive VCF voltage is connected, the timing resistor will be by-passed by R575, a 10K resistor, causing a much larger timing current to flow. The output of the integrator will rise positive much faster as a result of the increased timing current.

When the output of the X10 Amp reaches the trip point of the level detector, the VCF supply will reverse polarity as previously described. With the negative VCF supply now connected, the integrator will integrate at the same rate as in the NORM position.

4.2.3 X10 AMP (refer to drawing 505-101)

The purpose of the X10 Amp is to vary the amplitude of the triangle waveform from the output of

4.2.3 X10 AMP (continued)

the integrator. The amplitude of the triangle waveform from the integrator determines the amount of time required to charge the feedback capacitor. If the amplitude of this triangle changes, the frequency will change.

The X10 Amp is composed of Q260, Q280 and Q290. Q260 is an operational amplifier with a fixed gain of approximately 10.

The output of the X10 Amp is fed through output emitter followers Q280 and Q290 to the input of the level detector. The triangle amplitude at the input of the level detector will remain constant as this is controlled by the level detector trip points.

R261 (multiplier) and R263 form a voltage divider to the input of the operational amplifier. With the arm of the Mult control set at maximum (X10), the triangle amp at the output of the Integrator will be minimum. A .4V P-P triangle would produce a 4V P-P triangle at the X10 Amp output.

With the Mult set at minimum (X1), approximately a 4V P-P triangle waveform will be required to drive the output of the X10 amplifier to 4V P-P. It takes much longer to charge the feedback capacitor to 4V P-P than to .4V P-P. In this manner, the Mult in conjunction with the X10 Amp varies the frequency of the generator manually.

4.2.4 LEVEL DETECTOR (refer to drawing 505-103)

The level detector is used in conjunction with the integrator to produce a free-running square and triangle waveform.

The input to the level detector is connected to the output of the X10 Amp. Q300 is a constant current source for differential amplifier Q310 and Q320. Q340 and Q350 form a second differential amplifier which is connected to Q310 and Q320 to form a high-gain amplifier circuit.

The output voltage swing of Q340 and Q350 collectors are both clamped by a diode bridge to approximately ±1.5V P-P.

Positive feedback is used to obtain very fast switching.

4.2.4 LEVEL DETECTOR (continued)

With the input rising positive, Q310 will turn off and Q320 will turn on. Once Q310 is turned off, the collector voltage of Q310 will go negative. This will in turn cause Q350 base to go negative, causing Q350 to turn off and Q340 to conduct harder. Q340 collector voltage will go farther negative, causing Q320 base to go negative and Q320 to conduct harder. Positive feedback Q350 collector voltage will increase due to Q350 turning off. This in turn causes the output to switch to its positive state.

A positive input waveform causes the output to switch positive when the input trip point is reached (inverting). In this manner, the integrator, X10 Amp and the level detector create a free-running square and triangle waveform simultaneously.

Q340 collector signal is applied to the output emitter follower which drives the square amplifier and produces the trigger out signal.

4.2.5 SINE SHAPER

The sine shaper is basically a differential operational amplifier with non-linear feedback which will produce a low-distortion sine wave from a linear triangle input.

Transistors Q600, Q610 and Q620, Q630 are two differential amplifiers connected together to form a high-gain amplifier.

With the input rising at a constant slope (positive triangle), Q630 collector voltage will go negative. As the output rises negatively, the feedback network voltage divider will essentially connect smaller and smaller resistance across the fixed gain feedback resistor R674, thus causing the gain to decrease as the output voltage rises negatively.

When the input triangle changes slope, the output will simply reverse polarity and rise positive, producing the same non-linear action. The constantly changing gain of the amplifier will produce the required sine waveform.

Q640 emitter follower and Q650 constant current source provide the necessary current to drive the feedback network. Q660 and Q670 emitter followers provide the moderately low output impedance to drive the associated circuitry.

4.2.6 SQUARE AMPLIFIER

The square amplifier is essentially a high-speed switch which produces a 28V P-P output square wave at less than 50 nanosecond rise and fall times.

The square wave from the level detector is fed into the square amplifier input. With the squarewave in its positive state, Q800 will turn on, causing Q800 collector to go negative. This negative signal at Q800 causes Q810 to saturate, thus pulling the collector voltage of Q810 positive very rapidly. The positive input signal will hold Q830 off as long as the input remains positive. When the input switches negative, Q840 collector will switch negative very rapidly.

This squarewave is applied through selector switch S810 to the output emitter follower.

4.2.7 SQUARE SELECTOR SWITCH S810

When switched to the POS SQ position, a diode is in series with the squarewave being applied to the output emitter follower. This will allow signal to pass in only one direction.

When the selector switch is placed in the NEG SQ position, only the negative portion of the square waveform will pass to the emitter follower and on to the output.

4.2.8 AMP 1 (non inverting)

Amp 1 provides the selected waveform at 28V P-P into 600 ohms at the output.

The signal is applied at the input to Amp 1 (TP900). A positive signal will cause Q900 to turn on, driving Q910 collector positive. This amplified signal is applied to output buffer Q920 and Q950 which drive Amp 1 output. The gain is fixed by R941 and R931 to approximately 3.

4.2.9 AMP 2 (inverting)

Amp 2 also provides the selected waveform at 28V P-P into 600 ohms at the output (inverted).

The signal is applied to the emitters of input transistors Q700 and Q730. Q700 and Q730 bases are gounded.

A positive signal will cause Q700 to turn off.

4.2.9 AMP 2 (continued)

This will cause Q710 to turn off driving the output negative. This signal is applied to the output buffer Q720 and Q750 which drive the output of Amp 2.

The gain is fixed at approximately 3 as in Amp 1.

4.2.10 VCF AMP

The VCF Amp provides a ± voltage to the timing resistors which can be varied causing the frequency to change.

Q500 differential amplifier is connected to Q540 to form the positive VCF supply amplifier. Q530 is a constant current source for Q500. With Q500 output base grounded, a positive signal at Q500 input base will cause Q508 input transistor to turn on, driving Q540 base negative and the output positive. Negative feedback (R544, R547) fixes the gain at about 4.

With the input grounded, the output will be approximately 500mv. With a +5V signal at the input, the output will be at +16V. The negative supply is composed of transistors Q550, Q560 and Q580.

A voltage divider (R562, R563 and R581) is connected from the +16V supply to the -16V supply. Base of Q560 will set at about zero volts due to the voltage divider. +16V supply will cause Q560 to turn off driving Q580 base negative, driving output of Q580 negative. When the output reaches -16V, voltage at the base of Q560 will reach zero volts and thus maintain the negative supply at -16V as long as +16V supply remains at +16V. In this manner, the negative supply will track the positive supply and always provide an equal but opposite voltage.

As VCF input voltage varies from zero volts to +5V, VCF supply voltages will vary from ±16V to approximately ±500mv.

The VCF mode switch provides three different modes of operation so that the user may operate the VCF with virtually any signal input.

4.2.11 LOCKOUT AMPLIFIER

The lockout amplifier is composed of Q400, Q410, Q420, Q430, Q440, Q450 and Q460.

4.2.11 LOCKOUT AMPLIFIER (continued)

The output of the integrator (TP250) is connected to the input of differential amplifier Q460 and Q450. The base of Q450 is connected to ground through R443 (1K).

The summing junction of the integrator is connected to the collector of Q450 through a pair of diodes (D452, D453).

If the two diodes become forward biased, they will prevent any further timing current at the summing junction, thus causing the integrator to stop integrating.

The collector of Q450 must reach approximately +1V or greater to lock out the generator.

The signal at Q460 base is the triangle waveform from the integrator output. The triangle at this point will vary from approximately ±400mv P-P to ±4V P-P.

Q440 provides offset to Q450 base preventing lockout when in the Run mode of operation. In the Run mode, +18V is applied at Q400 base. Q400 will turn on, which in turn turns on Q440 driving the base of Q450 positive, preventing lockout.

When in the Gate mode of operation, the input of Q400 is connected to the EXT input jack.

With no signal applied at Q400 base, Q400 will turn off, which in turn causes the base of Q450 to return to ground potential. Now the generator will lock out as the triangle rises positive, turning off Q460, thus turning on Q450 and forward biasing the lockout diodes.

An input voltage of approximately +5V or greater applied at the EXT input jack will cause the generator to free run as previously explained as long as the signal is applied.

The generator can be turned on manually by depressing the manual pushbutton switch, applying +18V to the input. The generator will continue to run as long as the pushbutton is depressed.

When the Mode switch is placed in the Trig position, the input becomes AC coupled.

A positive signal applied at the input will cause

4.2.11 LOCKOUT AMPLIFIER (continued)

Q400 to turn as previously described. The Multiaction of Q410, Q420 and Q430 will cause Q410 to turn on and remain on until a positive signal is applied at Q430 base allowing Q410 to turn off and the generator to lock out.

The timing square wave is in the Neg position (-16V supply connected) when the generator locks out. The generator will lock out when the triangle rises to zero volts.

Q400 turning on will allow the generator to start running again as previously described. The triangle will continue rising positive until the positive trip point is reached at the level detector input.

The timing square will now reverse polarity (positive) and connect the +16V supply, thus reversing action. The triangle now integrates negatively until the negative trip point is reached. The -16V is again connected, causing the triangle to integrate positive.

When the timing square switched negative, the square wave at Q360, Q370 switched positive (inverted).

This square wave is connected to Q430 base through C431, a 68pf capacitor. A positive pulse will turn Q430 on and Q410 off, thus placing the lockout amplifier in a lockout condition. When the triangle reaches zero volts, lockout will occur. Thus, one complete cycle is generated each time a pulse is applied at the EXT input jack or the manual pushbutton is depressed.

NOTE: INPUT PULSE RISETIME MUST BE 100nsec OR FASTER.

SECTION 5

CALIBRATION

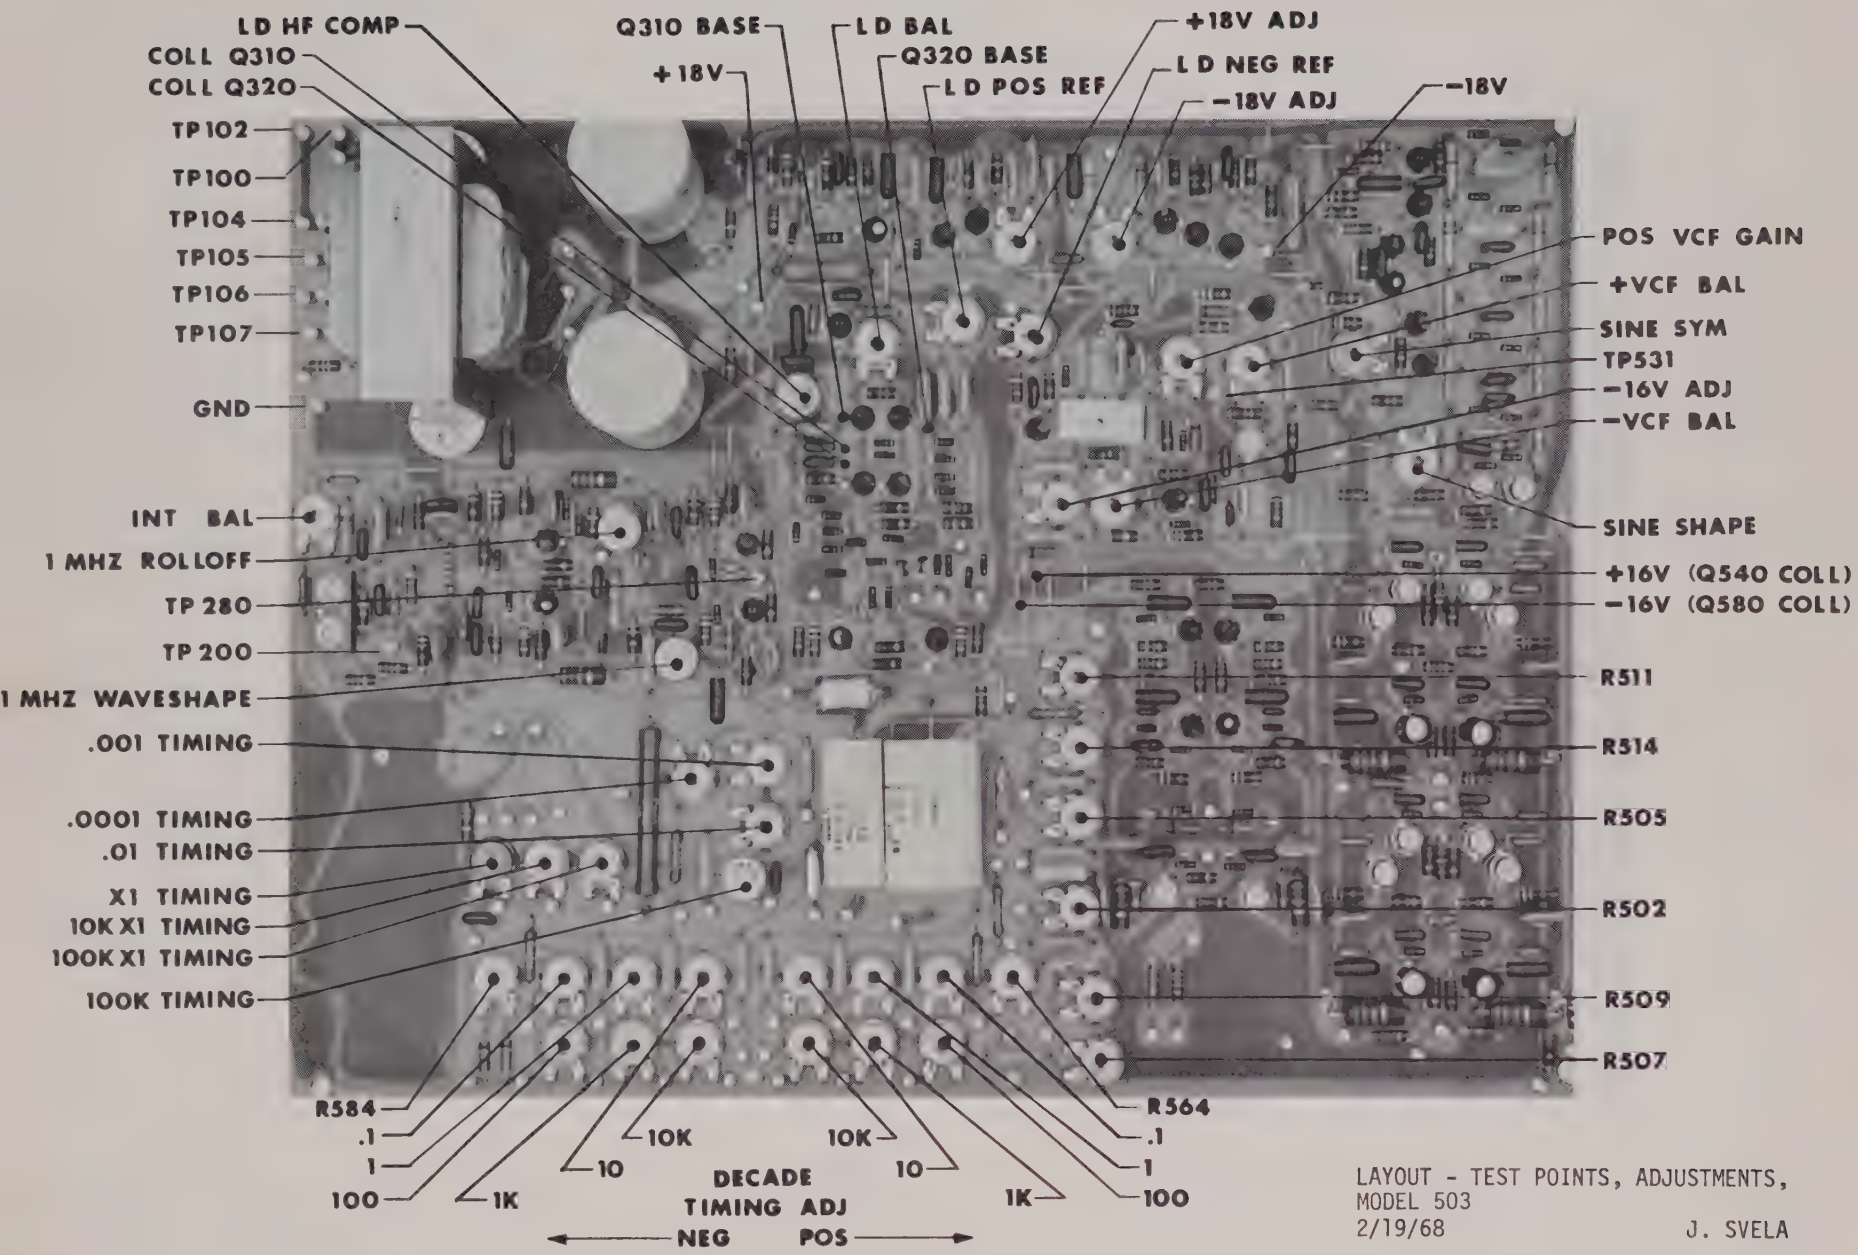

LAYOUT - TEST POINTS, ADJUSTMENTS,
MODEL 503
2/19/68 J. SVELA

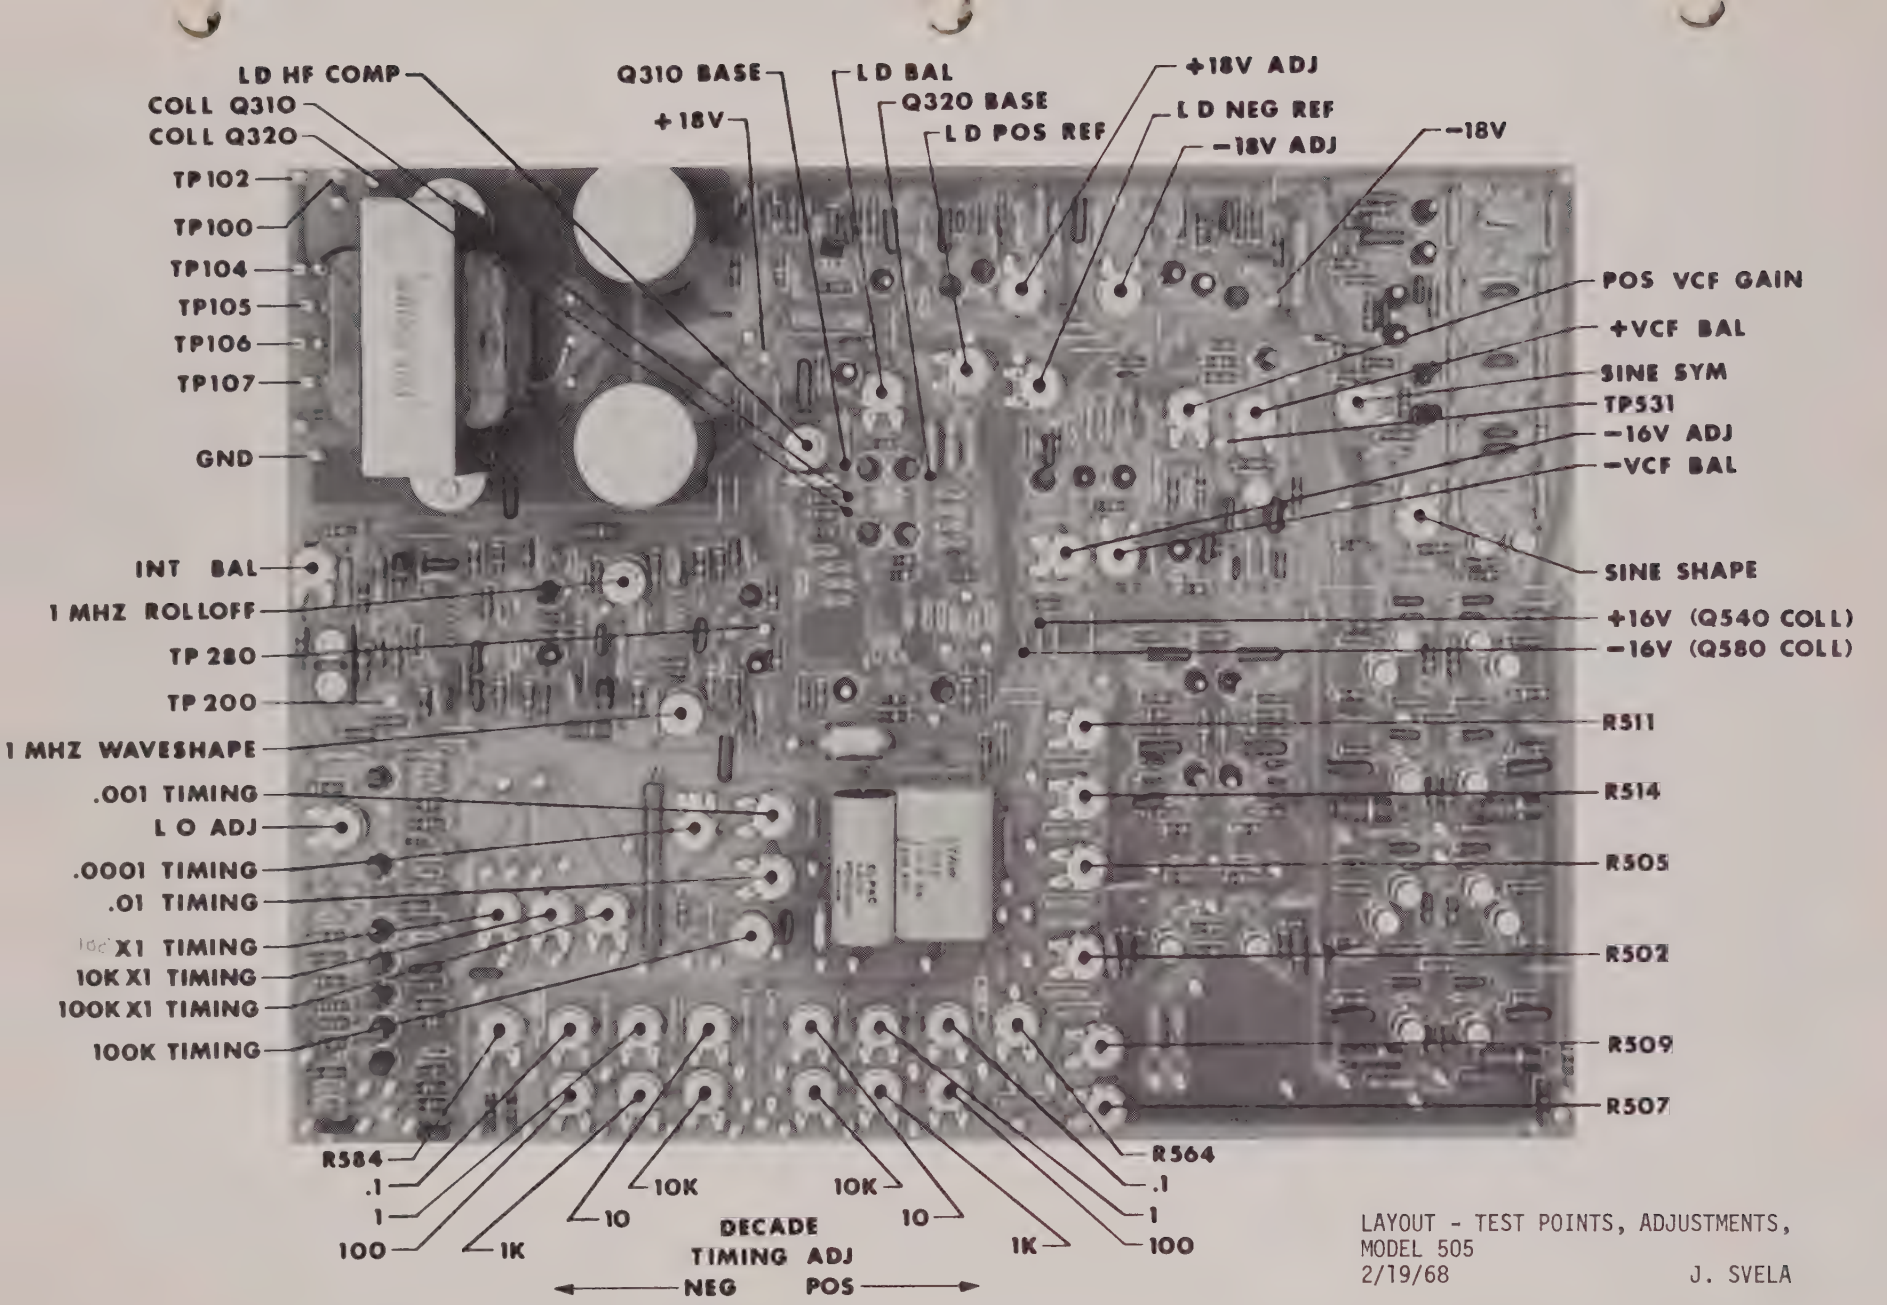

LAYOUT - TEST POINTS, ADJUSTMENTS,
MODEL 505
2/19/68 J. SVELA

5.1.0 FAILURE TO OPERATE

Read operating instructions to insure a thorough understanding of all front panel controls.

Should instrument fail to have an output from any of three amplifier outputs, check the following.

A. Unplug instrument and check 117V 3AG 1/2 amp fuse, or 3AG 1/4 amp for 220V operation, located on rear panel.

B. Remove cover and check for 117V AC between TP100 and 102. This checks power line cord.

Measure between TP104 and 107 for 117V AC. This check is for power on/off switch and associated wire. It insures that power is going into power transformer.

If trouble is not located in above steps, follow calibration procedure until trouble is located.

5.2.0 FAILURE TO MEET FACTORY SPECIFICATIONS

Check the following.

A. Proper operating instructions in Section 3 to insure a thorough understanding of all front panel controls.

B. Perform all steps of calibration procedure. If instrument still does not meet specifications, contact factory and arrange to return for a complete check-out and evaluation.

5.3.0 CALIBRATION PROCEDURE

The following test equipment or suitable equivalents of known accuracy are required for complete calibration of the Types 503, 504 and 505 function generators.

A. Oscilloscope, DC to 100MHz, Tektronix 547 with 1A1 plug-in.

B. Distortion Analyzer, Hewlett Packard 333A.

C. Variac Powerstat

D. Constant voltage DC source accurate to 1mv.

E. Frequency Counter, CMC 607A.

F. Differential voltmeter, Medistor A-50.

5.3.0 CALIBRATION PROCEDURE (test equipment continued)

G. VOM, Simpson 260

H. 600-ohm purely resistive load

NOTE: Calibration procedure applies to Models 503, 504, and 505 unless otherwise indicated.

5.3.1 POWER SUPPLY

NOTE: Instrument should be ON for at least thirty minutes before any of the following adjustments is made.

A. +18-volt calibration

1. Connect differential voltmeter to +18V test point.

2. Adjust +18V ADJ to obtain +18V ±2mv.

B. -18-volt calibration

1. Connect differential voltmeter to -18V test point.

2. Adjust -18V ADJ to obtain -18V ±2mv.

C. Line regulation check

1. Connect differential voltmeter to +18V test point.

2. Using Variac, vary line voltage from 105V to 125V while monitoring supply voltage. Supply voltage should remain constant ±10mv.

3. Connect differential voltmeter to -18V test point.

4. Using Variac, vary line voltage from 105V to 125V while observing -18V supply voltage. Supply voltage should remain constant ±10mv as in step 2.

D. Power supply ripple check

Set oscilloscope controls as follows

VERTICAL SENSITIVITY	MAX
INPUT COUPLING	AC
SWEEP TIME	10MSEC/CM
TRIGGER	LINE

5.3.1 D. (continued)

Measure 120Hz ripple content of the +18V and -18V supplies.

Ripple on each supply should be less than 5mv.

5.3.2 INTEGRATOR BALANCE

A. Using a short jumper lead, connect test point TP280 to nearest ground test point.

B. Connect a VOM to test point TP280.

C. Adjust INT BAL ADJ to obtain zero volts.

D. Remove jumper.

5.3.3 LEVEL DETECTOR BALANCE

A. Using short jumper leads, connect the base of transistors Q310 and Q320 to nearest ground.

B. Adjust L.D. BAL ADJ to obtain equal voltages ±50mv at the collectors of Q310 and Q320 (approximately -5V). Measure with VOM.

C. Remove jumpers.

5.3.4 LEVEL DETECTOR POSITIVE AND NEGATIVE REFERENCE ADJ

A. Set oscilloscope controls as follows, using a differential plug-in such as Tektronix Type W or equivalent.

VERT	MAX SENSITIVITY DIFFERENTIAL MODE
INPUT COUPLING	DC
SWEEP TIMING	.1MSEC/CM
TRIGGER	EXT POS
monitor test point 280	

B. Set function generator controls as follows

MODE	RUN
MULTIPLIER	X10
DECADE	1K
OFFSET	NORM
SYMMETRY	NORM
VCF MODE	OFF
SWEEP	NORM

C. Adjust L.D. POS REF ADJ until the positive peak of the triangle is +4 volts ±10mv as observed on oscilloscope.

5.3.4 (continued)

C. Adjust L.D. NEG REF ADJ until the negative peak of the triangle is -4 volts ±10mv as observed on oscilloscope.

5.3.5 ±16V ADJUST (Model 504)

Adjust R562 (+16V) and R582 (-16V) to obtain ±16V ±3mv.

5.3.6 VCF PRELIMINARY ADJUSTMENT (503 and 505 only)

A. Set function generator controls as follows.

MODE	RUN
MULTIPLIER	10
DECADE	100
OFFSET	NORM
SYMMETRY	NORM
VCF MODE	OFF
SWEEP	NORM

B. Using a jumper lead, connect TP531 to nearest ground.

C. Connect a voltmeter to the collector of Q540 (+16V).

D. Adjust the POS VCF BAL ADJ to obtain zero volt.

E. Remove jumper lead.

F. Set VCF GAIN ADJ and -VCF BAL ADJ to mid range.

G. Adjust +16V ADJ to obtain +16V ±3mv at Q540 collector (+16V).

H. Connect the differential voltmeter to the collector of Q580.

J. Adjust the -16V ADJ to obtain -16V ±3mv.

K. Set controls as follows

VCF MODE	0 to +5V
SWEEP	INV
EXPANSION	FULL CW
INPUT VOLTAGE	GND

L. Adjust -VCF BAL ADJ to obtain equal voltages ±2mv at Q580 and Q540 collectors (+16V and -16V supplies). Use a differential voltmeter to measure these voltages of approximately 300mv.

5.3.6 (continued)

M. Set controls as follows.

VCF MODE	OFF
SWEEP	NORM

Repeat steps G through L.

5.3.7 MULTIPLIER DIAL ADJUST

A. Set controls as follows

MODE	RUN
DECADE	100
OFFSET	NORM
SYMMETRY	NORM
VCF MODE	OFF
SWEEP	NORM

B. Remove multiplier dial control and rotate multiplier control shaft full CCW.

C. Monitor generator frequency using a frequency counter at square amp out.

D. Rotate multiplier control shaft CW until the frequency has increased approximately 5%.

E. Replace multiplier dial carefully without moving multiplier control shaft. Align the "1" on the dial skirt directly in line with index mark on the front panel. Tighten both set screws, being careful not to move multiplier control shaft.

F. With multiplier set on 10, adjust 100 TIMING ADJ controls to obtain a frequency of 1KHz ±.5% and symmetrical ±.5%.

G. Set MULT to 1.

H. Adjust 100 x 1 ADJ to obtain 100Hz ±.5%.

J. Set Multiplier on 10.

5.3.8 TIMING

A. Set controls as follows.

MODE	RUN
DECADE	1K
MULTIPLIER	10
OFFSET	NORM
SYMMETRY	NORM
VCF MODE	OFF

5.3.8 TIMING (continued)

NOTE: Steps 5.3.1 through 5.3.7 must be completed before final timing is started.

B. Connect frequency counter to monitor generator frequency at square amp output.

C. Adjust decade range timing adjustments (two per decade) to obtain the following frequencies as read on frequency counter.

Decade	Adj	To Obtain	Symmetry
1K	1K timing adj	10KHz ±.5%	±.5%
100	100 "	1KHz ±.5%	±.5%
10	10 "	100Hz ±.5%	±.5%
1	1 "	10Hz ±.5%	±.5%
.1	.1 "	1Hz ±.5%	±.5%
*.01	.01 "	.1Hz ±.5%	
*.001	.001 "	.01Hz ±.5%	
*.0001	.0001 "	.001Hz ±.5%	

* NOTE: Adjust R584 and R564 to obtain correct symmetry ±.5% before adjusting timing on lower three decades.

D. Set Multiplier to X1 and check all decade positions checked for correct frequency and symmetry as stated in specifications.

E. Set decade to 100K and multiplier to 10.

F. Set oscilloscope as follows.

VERTICAL SENSITIVITY 2V/CM
INPUT COUPLING DC
SWEEP TIMING .2MSEC/CM
TRIGGERING EXT
Monitor TP280, X10 amp output

Adjust 1MHz ROLLOFF trimmer capacitor to obtain optimum triangle waveform, free of oscillations.

G. Adjust 1MHz WAVESHAPE trimmer capacitor to obtain optimum triangle waveform linearity.

H. Adjust L.D.H.F. COMP trimmer capacitor to obtain an 8V P-P ±20mv triangle waveform.

5.3.8 TIMING (continued)

J. Adjust 100K TIMING ADJ trimmer capacitor to obtain 1MHz ±.5%.

K. Repeat steps D through J.

L. Set multiplier to 1 and adjust 10K x 1 ADJ to obtain 100KHz ±.5%.

M. Set decade on 10K and multiplier on X10.

N. Adjust 10K TIMING ADJ controls to obtain 100KHz ±.5% and symmetrical ±.5%.

P. Set multiplier to X1 and adjust 10K X 1 ADJ to obtain 10KHz ±.5%.

5.3.9 VCF MODE CALIBRATE (Models 503 and 505 only)

A. 0 to +5V mode
Set controls as follows

MODE	RUN
DECADE	1K
MULT	10
VCF MODE	0 to +5V
SWEEP	NORM
VCF INPUT VOLTAGE	+5V ±2mv*

*NOTE: VCF input voltage must be constantly monitored with a differential voltmeter as loading, etc., can effect the input voltage.

1. Connect frequency counter to monitor generator output frequency.

2. Adjust VCF expansion control (front panel) to obtain 200Hz ±1% as read on counter.

NOTE: VCF input voltage may have to be readjusted until correct frequency and input voltage are attained simultaneously.

3. Set SWEEP to INV. Readjust +5V ±3mv at input if necessary. Do not move expansion control.

4. Adjust R507 until the generator frequency is 10KHz ±.5%.

5.3.9 (continued)

B. 0 to ±2.5V mode

Set controls as follows

VCF MODE	0 to ±2.5V
SWEEP	NORMAL
EXPANSION	FULL CW
INPUT VOLTAGE	0 V (gnd)

1. Adjust R505 to obtain frequency of 5KHz ±.5%.

2. Set SWEEP switch to INV position. The frequency should be 5% to 15% higher than in Step 2 (no adjustment).

3. Apply +2.5V ±3mv at VCF input. Sweep to NORM.

4. Adjust VCF expansion control to obtain 200Hz ±1%.

5. Apply -2.5V ±3mv at VCF input. The frequency should be 10KHz ±2% (no adjustment).

6. Set SWEEP to INV.

7. Apply -2.5V ±3mv at VCF input.

8. Adjust VCF EXPANSION control to obtain 200Hz ±1%.

9. Apply +2.5V ±3mv at VCF input. The frequency should be 10KHz ±5% (no adjustment).

C. 0 to -5V mode

Set controls as follows.

VCF MODE	0 to -5V
SWEEP	INV
EXPANSION	FULL CW
INPUT VOLTAGE	0 V (gnd)

1. Adjust R509 to obtain 10KHz ±.5%

2. Apply -5V ±3mv at VCF input.

3. Adjust R502 to obtain 200Hz ±1%.

4. Set SWEEP to NORM position.

5. Adjust R511 to obtain 200Hz ±1%.

6. Apply -5V ±3mv at VCF input. The frequency should be 10KHz ±10% (no adjustment).

5.3.10 SQUARE AMP

No calibration required.

5.3.11 AMP 1

No calibration required unless circuit component is changed. R935 is selected at factory to obtain approximately 250mv to 500mv voltage drop across R942 as measured with a VOM.

5.3.12 AMP 2

No calibration required unless circuit component is changed. R705 is selected at factory to obtain approximately 250mv to 500mv voltage drop across R742 as measured with a VOM.

5.3.13 SYMMETRY MODES

NOTE: No adjustment necessary

Set function generator controls as follows.

MODE	RUN
MULTIPLIER	10
DECADE	1K
SYMMETRY	NORM
OFFSET	NORM
VCF MODE	OFF
AMP 1	TRIANGLE
AMP 1 ATTENUATOR	MAX

Set oscilloscope controls as follows.

VERTICAL SENSITIVITY	5V/CM
INPUT COUPLING	DC
SWEEP TIME	10μSEC
TRIGGER	EXT POS
Monitor Amp 1 output	

The following waveforms should be observed, depending upon the position of the symmetry switch.

SYMMETRY

POS NORM NEG



5.3.14 OFFSET MODES

NOTE: no adjustment necessary

Set oscilloscope and generator controls as in 5.3.12.

The following waveforms should be observed, depending upon the position of the offset switch.

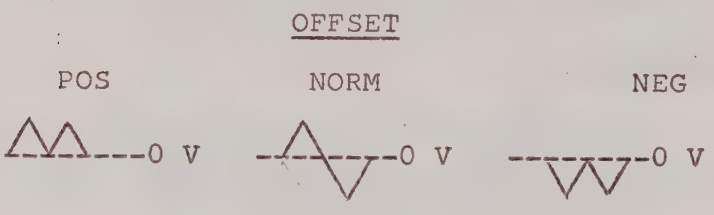

5.3.15 SINE SHAPER

A. Set generator controls as follows.

MODE	RUN
DECADE	100
MULTIPLIER	10
SYMMETRY	NORM
OFFSET	NORM
VCF MODE	OFF
AMP 1	SINE
AMP 1 ATTENUATOR	MAX

B. Set oscilloscope as follows.

VERTICAL SENSITIVITY	5V/CM
INPUT COUPLING	DC
SWEEP TIME	.2MSEC
TRIGGER	EXT POS
Monitor Amp 1 output	

C. Connect a distortion analyzer to Amp 1 output.

D. While observing waveform, adjust the SINE SHAPE and SINE SYM to obtain minimum distortion as indicated on distortion analyzer. Distortion should be less than .7%.

5.3.16 LOCKOUT AMP

NOTE: Lockout will not operate properly when the offset switch is in the negative position.

A. Set generator controls as follows.

5.3.16 LOCKOUT AMP ("A" continued)

MODE	GATE
DECADE	100
MULTIPLIER	10
SYMMETRY	NORM
OFFSET	NORM
VCF MODE	OFF
AMP 1	TRIANGLE POS
AMP 1 ATTENUATOR	MAX

B. Set oscilloscope controls as follows.

VERTICAL SENSITIVITY	5V/CM
INPUT COUPLING	DC
SWEEP TIME	.2MSEC
TRIGGER	EXT POS
Monitor TP280	

C. Connect VOM to TP280.

D. Adjust L.O. ADJ to obtain 0V ±20mv.

E. Depress manual Gate/Trig button to insure that generator free runs as long as button is depressed.

F. Switch Mode selector to Trig. Check to insure that a single pulse is generated at all outputs each time the manual Gate/Trig button is depressed. Scope triggering is very sensitive and critical in monitoring single pulse.

G. Using external voltage feeding external input, check to insure that gate function operates with a minimum of +4V input. Do not exceed 20V input or damage to the instrument may occur.

H. Using external square pulse with 100nsec rise-time or faster feeding external input, check trig function to insure that a single pulse is generated at all outputs for each input pulse of #3 volts or greater. Do not exceed 20V input voltage.

J. The operation of the gate and trigger mode is explained fully in the first time operation section.

5.3.17

Monitor trigger output and check for a .7V P differentiated square wave. No calibration required.

SECTION 6

PARTS LIST

R - resistors
C - capacitors
D - diodes
Q - transistors
SW - switches
T - transformers
F - fuses
P - pilot light

Parts are listed according to function in the instrument. However they are also in numerical order by 100, 200 etc series numbers so it is not necessary to know the function.

POWER SUPPLY

R100	68K	301-683
R101	5.6K	301-562
R111	8.2K	301-822
R121	1.6K	301-162
R122	12K	301-123
R123	4.3K	301-432
R124	9.1K	301-912
R131	7.5K	301-752
R132	1.6K	301-162
R141	100Ω 7W	308-205
R142	100Ω	301-101
R143	1K	301-102
R144	845Ω 1%	310-124
R151	100Ω	301-101
R152	150Ω 7W	308-206
R161	649Ω 1%	310-686
R171	15K	301-153
R172	20K	301-203
R173	1K	301-102
R181	2.7K	301-272
R182	8.2K	301-822
R183	1K pot	311-102
R184	4.32K 1%	310-693
R185	2.49K 1%	310-103
R186	4.99K 1%	310-566
R187	4.32K 1%	310-693
R191	7.5K	301-752
R192	200Ω MTC4	311-100
R193	7.5K 1%	310-649

C100	2500mf 35V	290-034
C110	2500mf 35V	290-034
C121	10mf 20V	290-031
C141	270pf	281-540
C161	10mv 20V	290-031
C171	270pf	281-540
C181	.01	283-005
C182	10mf 20V	290-031
C190	.01	283-005

D100	MDA920A-3	152-051
D101	1N4001	152-050
D110	1N4001	152-050
D121	1N914	152-028
D161	1N914	152-028
D162	1N935A	152-048
D181	1N4001	152-050
D191	1N4001	152-050

Q100	5193	156-5193
Q110	5190	156-5190
Q120	2N4121	156-043
Q130	MPS6543	156-050
Q140	5190	156-5190
Q150	5193	156-5193
Q160	MPS6543	156-050
Q170	2N4121	156-043
Q180	MPS6543	156-050
Q190	2N4121	156-043

F100	1/2A Slo Blo	136-003

DS100	Alco BNF-2	

T100	Sartron 4184	120-030

INTEGRATOR

R201	10K ¼W 1%	313-1002
R202	10K ¼W 1%	313-1002
R211	50K MTC4	311-104
R212	31.6K 1%	310-766
R213	500K MTC4	311-105
R214	3.16M 1%	309-274
R215	3.5M pot	311-106
R216	31.6M 1%	309-275
R217	3.48K 1%	310-140
R218	3.32K 1%	310-122
R219	1K MTC4	311-102
R220	3.32K 1%	310-122
R221	1K 1%	310-605
R222	100Ω 1%	310-619
R223	2.2K	301-222
R224	2.2K	301-222
R231	470Ω	301-471
R232	2.4K	301-242
R233	470Ω	301-471
R234	47Ω	301-470
R235	47Ω	301-470
R236	680Ω	301-681
R237	150Ω	301-151
R238	150Ω	301-151
R239	3.3K	301-332
R250	4.7K	301-472
R251	150Ω	301-151
R252	15Ω	301-150
R255	15Ω	301-150
R256	150Ω	301-151
R257	4.7K	301-472

C201	8-50pf	281-022
C202	270pf	281-540
C203	.001	283-000
C204	.01	283-005
C205	1mf	290-001
C206	10mf	290-031
C231	.01	283-005
C232	39pf	281-531
C233	47pf	281-532
C234	.01	283-005
C235	39pf	281-531
C250	.001	283-000
C251	.01	283-005
C255	.001	283-000
C256	.01	283-005

D251	1N914	152-028
D255	1N914	152-028

Q200	*F5085 selected	156-051
Q210	*F5085 selected	156-051
Q230	CA3030 RCA	157-008
Q250	MPS6543	156-050
Q255	2N4121	156-043

X10 AMP

R261	1K pot, spec.	311-107
R262	2.7K	301-272
R263	100Ω pot	311-099
R264	100Ω pot	311-099
R265	100Ω pot	311-099
R266	68.1Ω ¼W 1%	313-0681
R267	3.92K 1%	310-123
R268	47Ω	301-470
R269	47Ω	301-470
R270	33.2K 1%	310-678
R271	3.9K	301-392
R272	680Ω	301-681
R273	680Ω	301-681
R281	120 1W	303-121
R282	4.7K	301-472
R283	150Ω	301-151
R284	15Ω	301-150
R291	4.7K	301-472
R292	120 1W	303-121
R293	150Ω	301-151
R294	15Ω	301-150

X10 AMP (cont)

C261	10mf 20V	290-031
C262	3-12pf	281-036
C263	47pf	281-532
C264	.01	283-005
C265	7pf	281-536
C266	470pf	281-539
C267	.01	283-005
C268	3-12pf	281-036
C269	7pf	281-536
C270	10mf 20V	290-031
C280	.01	283-005
C281	.001	283-000
C291	.001	283-000
C292	.01	283-005
D261	1N914	152-028
D262	1N914	152-028
D263	1ZM12T5 12V	152-022
D264	1ZM12T5 12V	152-022
D281	1N914	152-028
D291	1N914	152-028
Q260	CA3030 RCA	157-008
Q280	MPS6543	156-050
Q290	2N4121	156-043

LEVEL DETECTOR

R301	12.1K ¼W 1%	313-1212
R302	1.8K	301-182
R303	100Ω MTC4	311-099
R304	3.01K ¼W 1%	313-3011
R311	1K 1%	310-605
R312	442Ω 1%	313-4420
R313	3.65K ¼W 1%	313-3651
R315	100Ω MTC4	311-099
R321	402Ω 1%	310-662
R323	3.65K ¼W 1%	313-3651
R324	500Ω MTC4	311-057
R325	4.75K 1%	310-599
R326	4.75K 1%	310-599
R327	500Ω MTC4	311-057
R341	2.7K	301-272
R342	10Ω	301-100
R351	2.7K	301-272
R352	10Ω	301-100
R353	1K	301-102
R361	150	301-151
R362	4.7K	301-472
R363	15	301-150
R364	180	301-181
R371	15	301-150
R372	4.7K	301-472
R373	150	301-151
C301	10mf 20V	290-031
C311	8-50pf	281-022
C312	68pf	281-523
C361	.001	283-000
C362	22pf	281-530
C371	.001	283-000
D311	1N914	152-0914
D312	1N914	152-0914
D321	1N914	152-0914
D322	1N914	152-0914
D323	1N914	152-0914
D324	1N914	152-0914
D341	1N914	152-0914
D342	1N914	152-0914
D343	1N914	152-0914
D345	1N914	152-0914
D350	1N914	152-0914
D351	1N914	152-0914
D352	1N914	152-0914
D353	1N914	152-0914
D354	1N914	152-0914
D355	1N914	152-0914
D356	1N914	152-0914
D357	1N752	152-031
D358	1N752	152-031
D359	TI55	152-009
D361	1N914	152-0914
D362	1N914	152-0914
D363	1N914	152-0914
D371	1N914	152-0914
Q300	2N4121	156-043
Q310	*2N4250 matched	-4250
Q320	*2N4250 matched	-4250
Q340	MPS 6543	156-050
Q350	MPS 6543	156-050
Q360	MPS 6543	156-050
Q370	2N4121	156-043

LOCKOUT

R401	1.5K	301-152
R402	2.7K	301-272
R403	10K	301-103
R404	10K	301-103
R405	10K	301-103
R411	33K	301-333
R412	3.3K	301-332
R413	10K	301-103
R421	33K	301-333
R422	3.3K	301-332
R423	10K	301-103
R431	12K	301-123
R432	1K	301-102
R433	2.2K	301-222
R441	3.3K	301-332
R442	1.8K	301-182
R443	1K 1%	310-605
R444	15K	301-153
R451	13K 1%	310-674
R452	1K MTC4	311-102
R453	13K 1%	310-674
R454	1K 1%	310-605
R455	10K	301-103
R460	3.3K	301-332
R461	10K	301-103

C401	7pf	281-536
C402	100pf	281-537
C403	47pf	281-532
C431	68pf	281-542
C451	12pf	281-543

D401	1N914	152-028
D402	1N914	152-028
D403	1N914	152-028
D441	1N914	152-028
D442	1N914	152-028
D443	1N914	152-028
D451	1N914	152-028
D452	CD1541	152-010
D453	1N914	152-028
D461	1N914	152-028
D462	1N914	152-028

Q400	MPS6543	156-050
Q410	MPS6543	156-050
Q420	MPS6543	156-050
Q430	MPS6543	156-050
Q440	2N4121	156-043
Q450	*2N4250 matched	157-4250
Q460	*2N4250 matched	157-4250

VCF AMP

R501	24.9K 1%	310-139
R502	5K pot MTC4	311-103
R503	19.1K 1%	310-1912
R504	71.5K 1%	310-131
R505	10K	301-103
R506	14.3K 1%	310-127
R507	1K pot MTC4	311-102
R508	35.7K 1%	310-130
R509	5K pot MTC4	311-103
R510	1.75M 1%	310-141
R511	3.5M pot MTC4	311-106
R512	71.5K 1%	310-131
R513	36.5K 1%	310-3652
R514	2K pot MTC4	311-115
R516	10K 1%	310-600
R517	82	301-820
R518	6.81K 1%	310-671
R519	820	301-821
R520	6.19K 1%	310-767
R521	5.62K 1%	310-126
R522	100Ω	301-101
R523	6.8M	301-685
R531	100Ω pot MTC4	311-099
R532	4.7K	301-472
R533	10K	301-103
R534	5.6K	301-562
R541	6.8M	301-685
R542	47	301-470
R543	270	301-271
R544	31.6K 1%	310-766
R545	10K	301-103
R546	1.5M	301-155
R547	1K pot MTC4	311-102
R551	6.81K 1%	310-671
R552	7.5K	301-752

VCF AMP (cont)

R553	100Ω pot MTC4	311-099
R554	100Ω	301-101
R555	6.19K 1%	310-767
R556	820Ω	301-821
R561	5.62K 1%	310-126
R562	14K 1%	310-112
R563	1K pot MTC4	311-102
R564	10K pot	311-109
R565	8.45M 1%	309-266
R566	845K 1%	310-133
R567	84.5K 1%	310-8452
R568	3.5M pot MTC4	311-106
R569	100K pot MTC4	311-110
R570	10K pot MTC4	311-109
R571	100K pot MTC4	311-110
R572	10K pot MTC4	311-109
R573	10K pot MTC4	311-109
R574	28K 1%	310-129
R575	10K	301-103
R581	14K 1%	310-112
R582	270Ω	301-821
R583	47Ω	301-470
R584	10K pot MTC4	311-109
R585	10K	301-103
R586	3.5M pot MTC4	311-106
R587	100K pot MTC4	311-110
R588	10K pot MTC4	311-109
R589	100K pot MTC4	311-110
R590	10K pot MTC4	311-109
R591	10K pot MTC4	311-109
R592	28K 1%	310-129
R593	84.5K 1%	310-132
R594	8.45M 1%	309-266
R595	845K 1%	310-133
R596	10K	301-103

C501	270pf	281-540
C541	68pf	281-542
C542	22pf	281-530
C543	.01	283-005
C551	.01	283-005
C581	68pf	281-542

D501	1N752 5.6V	152-031
D541	1N914	152-028
D542	1N914	152-028
D561	1N752 5.6V	152-031
D581	1N914	152-028

Q500	2N4045	156-054
Q530	MPS6543	156-050
Q540	2N4121	156-043
Q550	*2N4121 matched	157-4121
Q560	*2N4121 matched	157-4121
Q580	MPS6543	156-050

SINE SHAPER

R600	3.92K ¼W 1%	313-3921
R601	100Ω pot	311-099
R602	1.21K ¼W 1%	313-1211
R610	3.92K ¼W 1%	313-3921
R611	1K	301-102
R612	100Ω	30 .-101
R613	100Ω MTC4	311-099
R614	3.9K	301-392
R620	910Ω	301-911
R621	150	301-151
R622	3K	301-302
R630	150Ω	301-151
R631	3K	301-302
R640	47Ω	301-47^
R641	121Ω 1%	310-557
R642	221Ω 1%	310-648
R643	267Ω 1%	310-120
R644	100Ω	301-101
R650	750Ω	301-751
R651	1K	301-102
R652	121Ω 1%	310-557
R653	825Ω 1%	310-647
R654	221Ω 1%	310-648
R655	3.32K 1%	310-122
R656	267Ω 1%	310-120
R660	475Ω 1%	310-118
R661	562Ω 1%	310-5620
R662	100Ω	301-101
R663	15Ω	301-150
R664	30Ω	301-390
R665	33Ω	301-330
R670	3.92K 1%	310-123
R671	475Ω 1%	310-118
R672	8.25K 1%	310-604
R673	562Ω 1%	310-663
R674	2.21K 1%	310-607
R675	15Ω	301-150
R676	100	301-101
R677	82	301-820

SINE SHAPER (cont)

C620	10pf	281-529
C630	10pf	281-529
C640	82pf	281-533
C641	.05	283-010
C650	10mf 20V	290-031
C651	10pf	281-529
C652	10pf	281-529
C670	10pf	281-529
C671	10pf	281-529
C672	22pf	281-530

D640	1N935A 9V	152-048
D641	1N914	152-028
D642	1N914	152-028
D643	1N914	152-028
D650	1ZM11T5	152-023
D651	1N914	152-028
D652	1N914	152-028
D653	1N914	152-028
D661	1N914	152-028
D662	1N914	152-028
D663	1N914	152-028
D671	1N914	152-028
D672	1N914	152-028
D673	1N914	152-028

Q600	MPS6543	156-050
Q610	MPS6543	156-050
Q620	2N4121	156-043
Q630	2N4121	156-043
Q640	2N4121	156-043
Q650	2N4121	156-043
Q660	2N2905	156-019
Q670	2N2219	156-017

AMP 2

R701	5.62K 1%	310-126
R702	1K pot atten	311-102
R703	619Ω 1%	310-765
R704	22Ω	301-220
R705	*selected on initial calibration	
R711	47Ω	301-470
R712	100Ω	301-101
R721	5.62K 1%	310-126
R722	220Ω 2W	305-221

R723	22Ω	301-220
R731	5.62K 1%	310-126
R732	820Ω	301-821
R733	22	301-220
R734	619Ω 1%	310-765
R741	3.3K	301-332
R742	100Ω	301-101
R743	47Ω	301-470
R751	22Ω	301-220
R752	5.62K 1%	310-126
R753	220Ω 2W	305-221
R754	1.8K	301-182
R755	20K pot 10-turn	311-320
R756	12K ½W 5% Beckman Helitrim 78LR-20K	301-123

C701	1mf 50V	290-001
C721	1mf 50V	290-001
C722	.05	283-010
C723	6.8mf 35V	290-042
C731	1mf 50V	290-001
C751	1mf 50V	290-001
C752	.05	283-010
C753	6.8mf 35V	290-042

D701	1N914	
D721	1N914	
D731	1N914	matched 153-0003
D741	1N914	

Q700	2N2219	156-017
Q710	2N2905	156-019
Q720	2N2219	156-017
Q730	2N2905	156-019
Q740	2N2219	156-017
Q750	2N2905	156-019

SQUARE AMP

R801	2.7K	301-272
R802	150	301-151
R803	1.8K	301-182
R804	2.2K	301-222
R811	1K	301-100
R812	12K	301-123
R813	47	301-470
R814	10K	301-103
R821	4.7K	301-472
R822	120Ω 1W	303-121
R823	15Ω	301-150

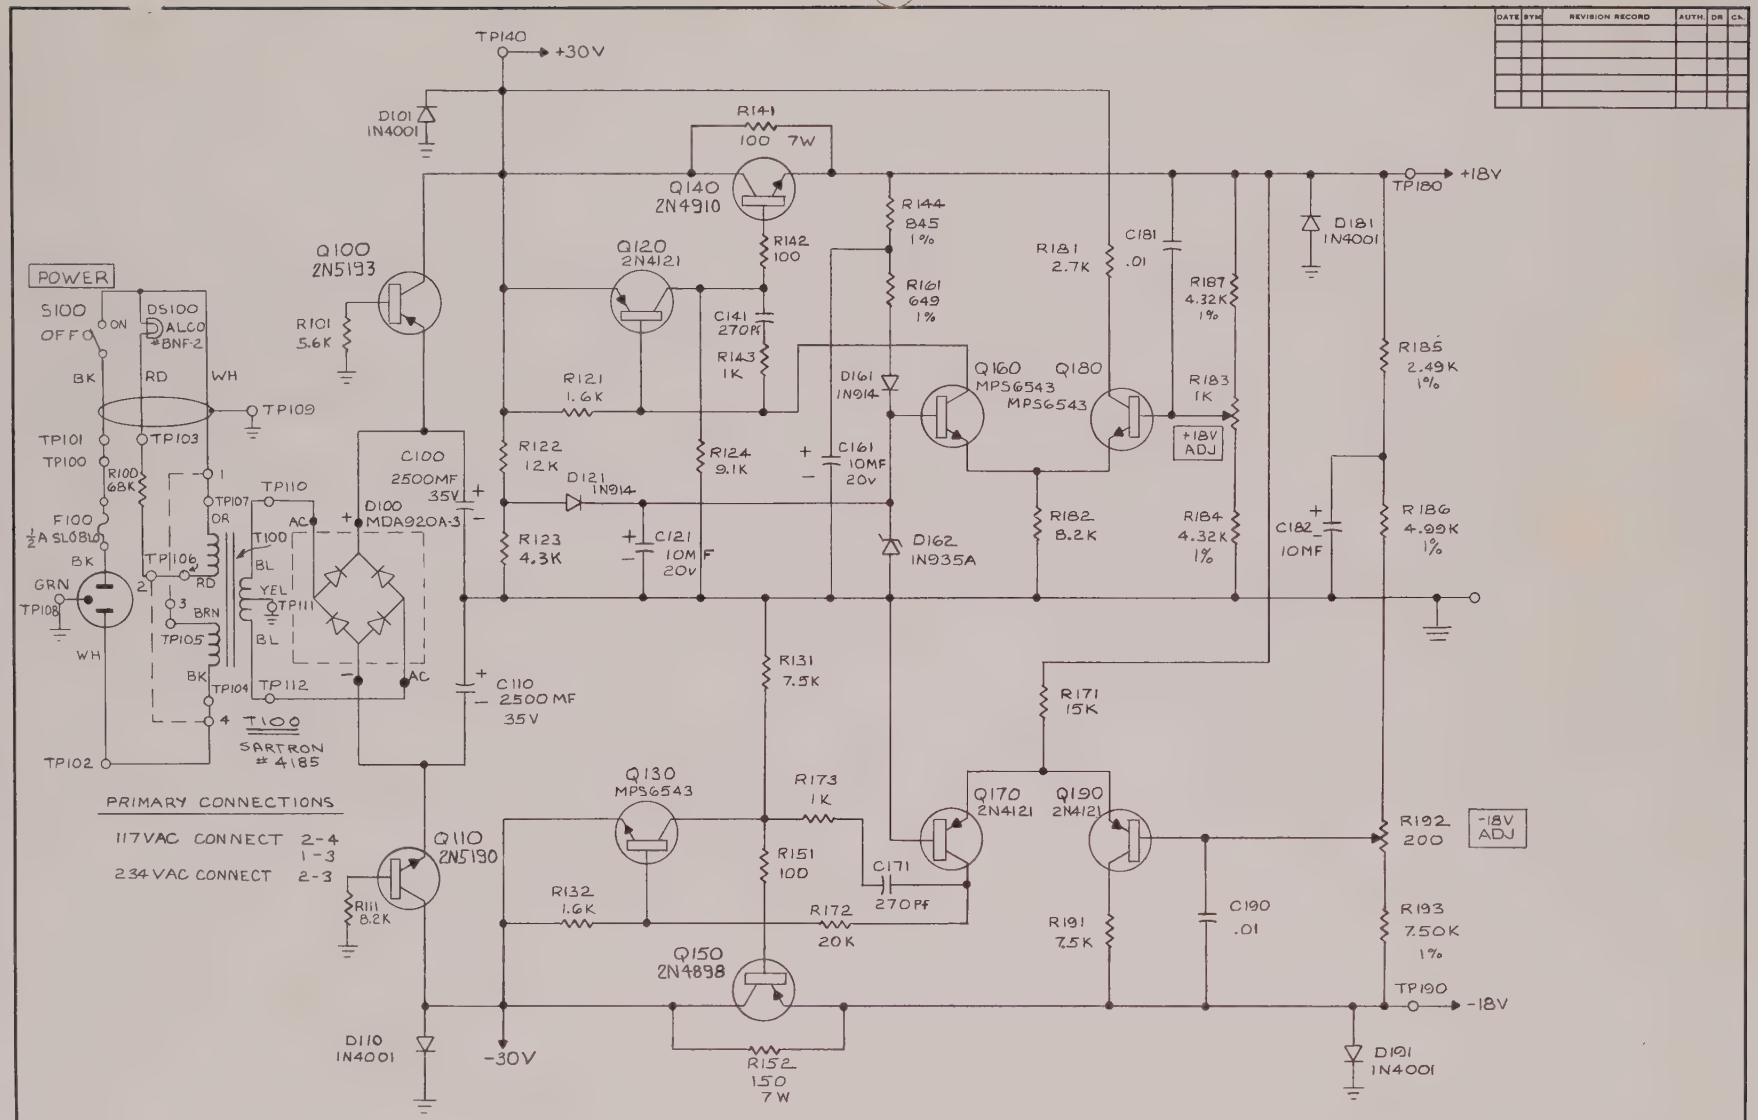

DATE	BY	REVISION RECORD	AUTH.	DR	CK.

3) ALL CAPACITORS MARKED IN MF UNLESS OTHERWISE NOTED
2 ALL RESISTORS ARE ½W 5% UNLESS OTHERWISE NOTED
1 ALL RESISTORS MARKED IN OHMS
NOTES:

TOLERANCES (EXCEPT AS NOTED)			
DECIMAL ±		SCALE	DRAWN BY J.E.
			APPROVED BY
FRACTIONAL ±	TITLE SCHEMATIC – POWER SUPPLY, MODEL 505		
ANGULAR ±	DATE 3-15-68	DRAWING NUMBER 505-103	

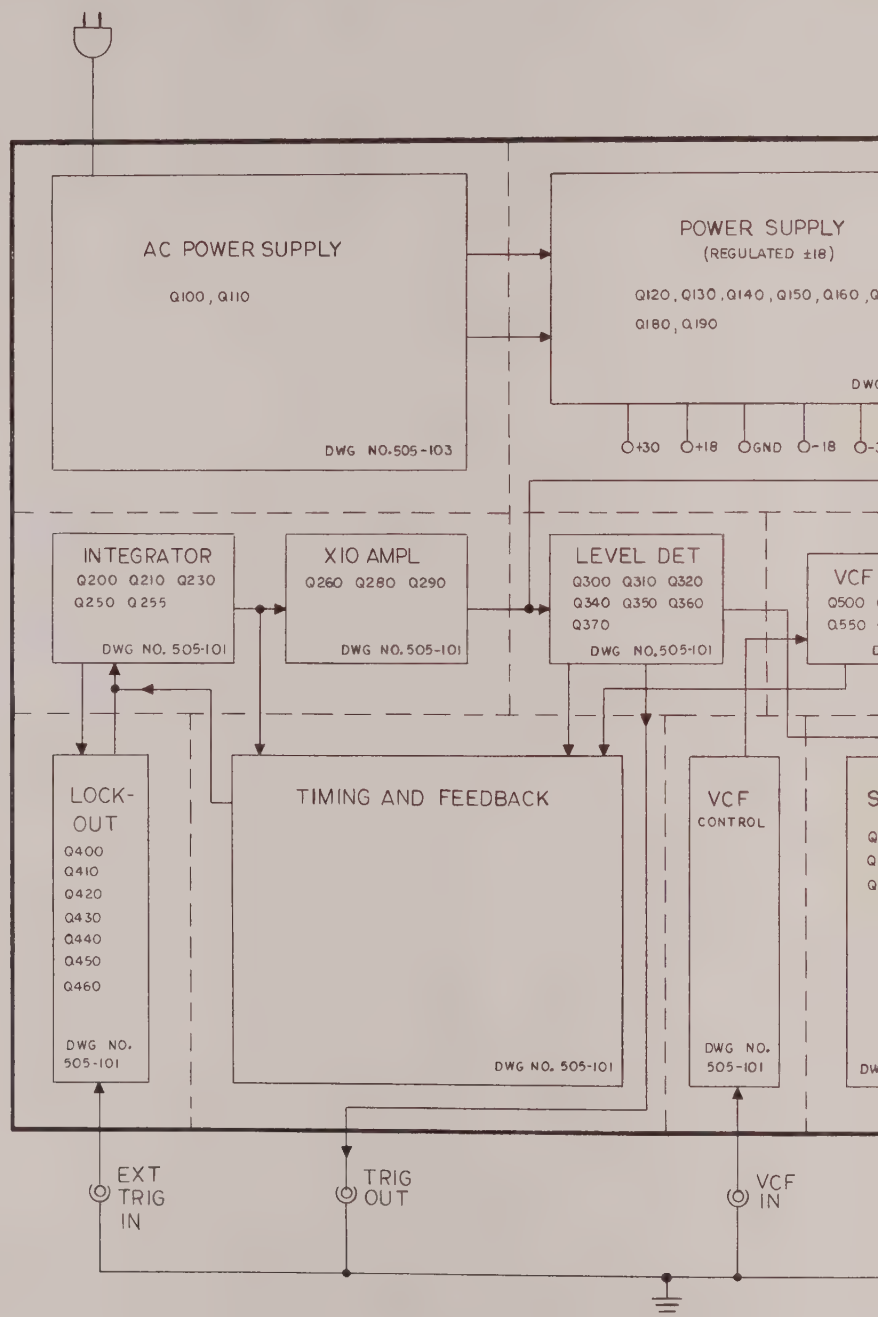
AC POWER SUPPLY
Q100, Q110
DWG NO.505-103
POWER SUPPLY
(REGULATED ±18)
Q120, Q130, Q140, Q150, Q160,
Q180, Q190
+30
+18
GND
-18
INTEGRATOR
Q200 Q210 Q230
Q250 Q255
DWG NO. 505-101
X10 AMPL
Q260 Q280 Q290
DWG NO. 505-101
LEVEL DET
Q300 Q310 Q320
Q340 Q350 Q360
Q370
DWG NO.505-101
VCF
Q500
Q550
LOCK-
OUT
Q400
Q410
Q420
Q430
Q440
Q450
Q460
DWG NO.
505-101
TIMING AND FEEDBACK
DWG NO. 505-101
VCF
CONTROL
DWG NO.
505-101
EXT
TRIG
IN
TRIG
OUT
VCF
IN

DATE	BY	REVISION RECORD	AUTH.	DR.	CK.

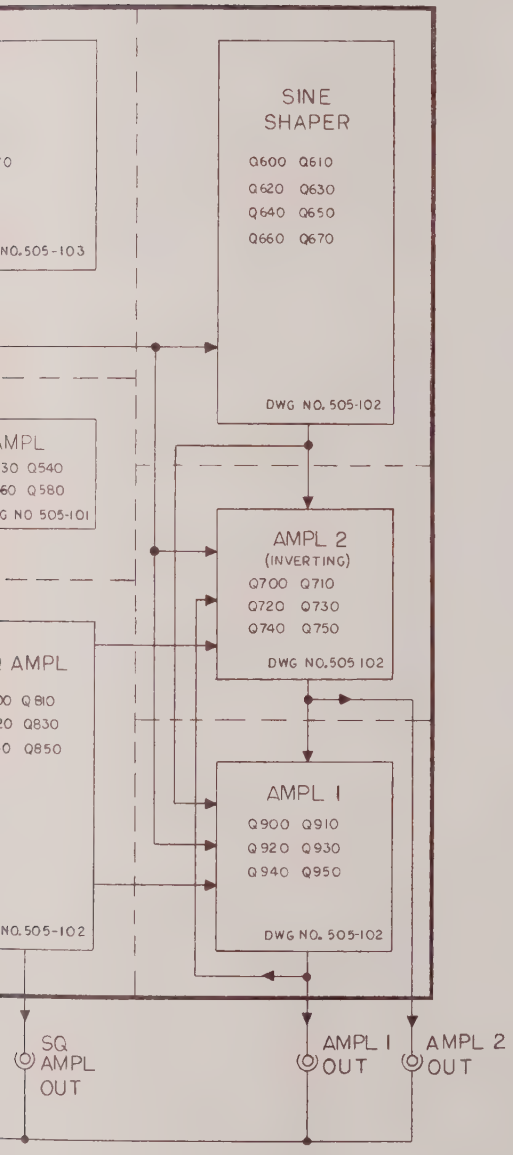

TOLERANCES (EXCEPT AS NOTED)			
DECIMAL ±		SCALE	DRAWN BY C.A. English APPROVED
FRACTIONAL ±	TITLE BLOCK DIAGRAM MODEL 505		
ANGULAR ±	DATE 17NOV67	DRAWING NUMBER 505-100	

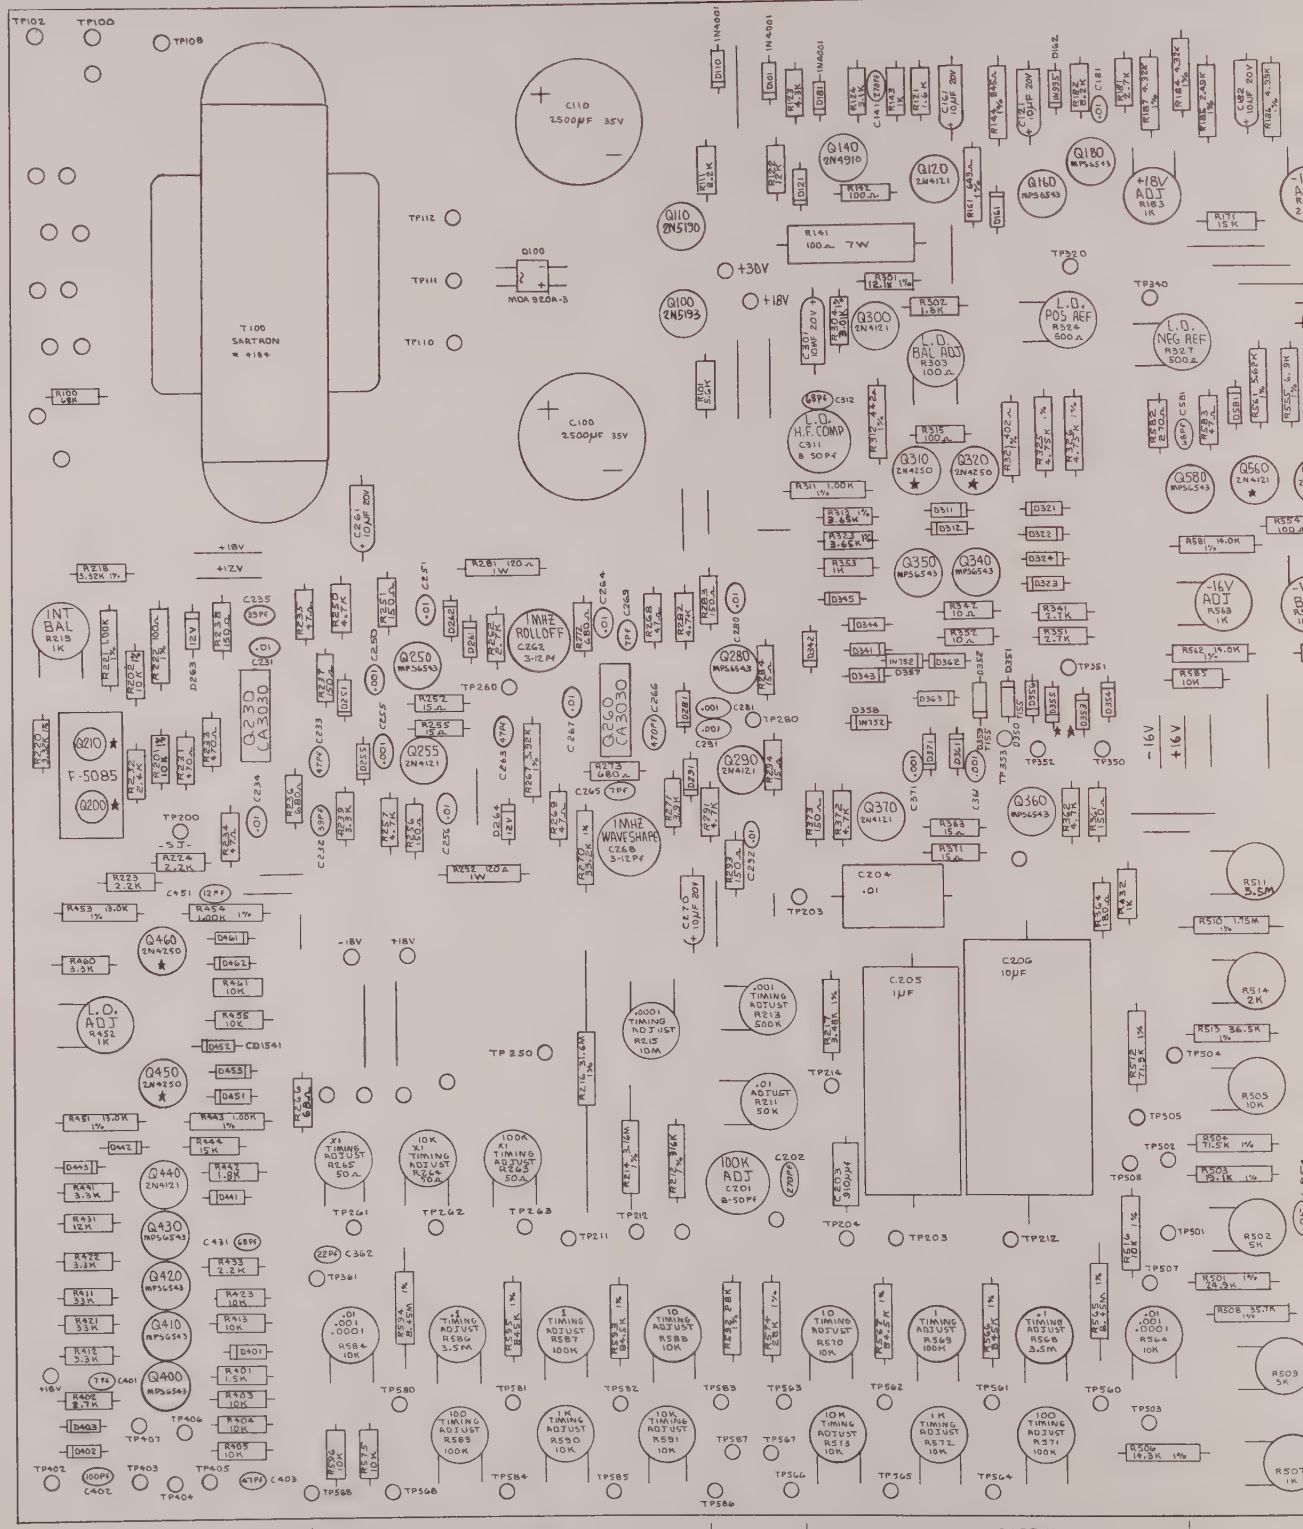

NOTES: Unless otherwise Indicated
1. ALL DIODES IN914
2. ★ INDICATES SELECTED COMPONENT

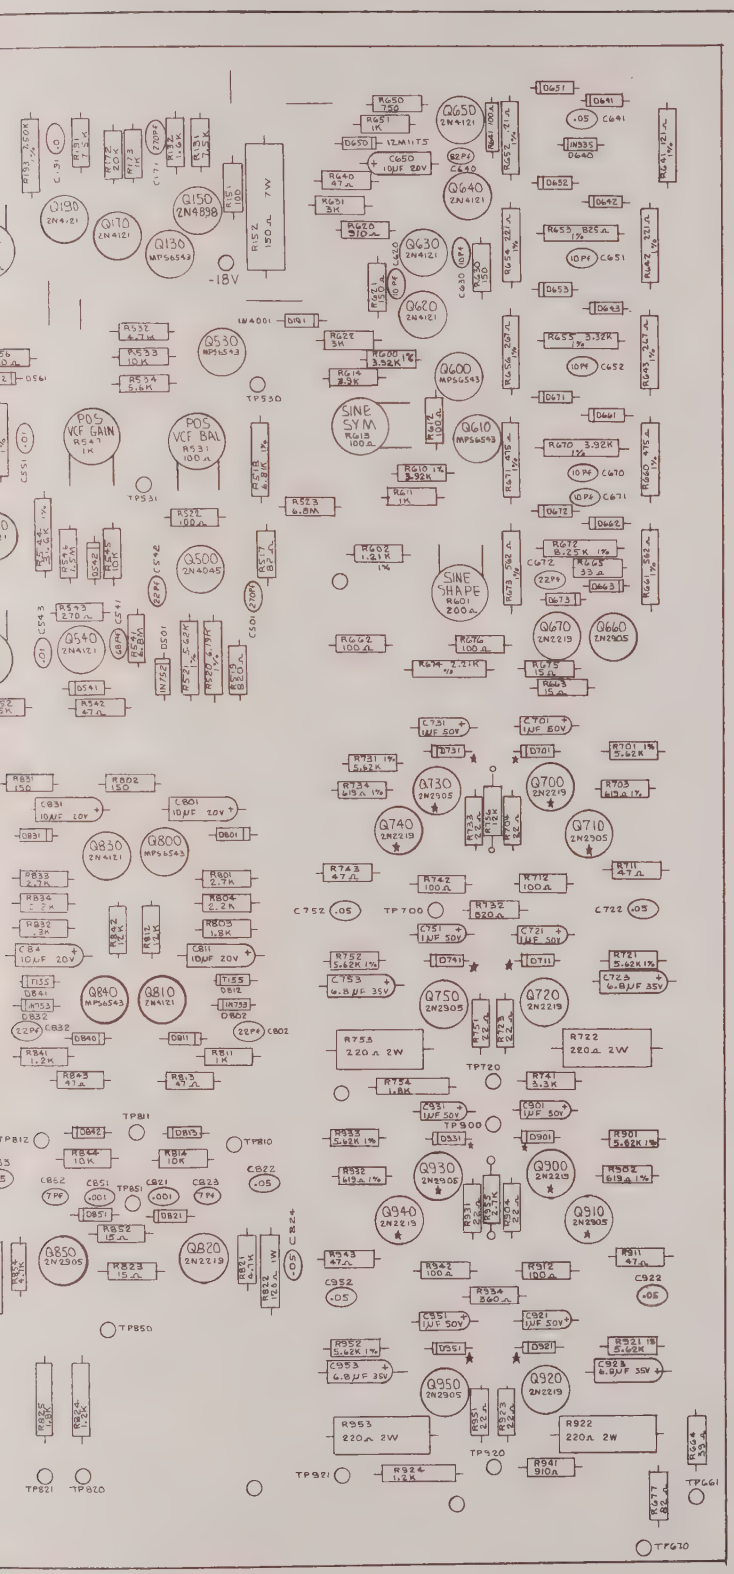

ASSEMBLY - P C BOARD, MODEL 505

505-200

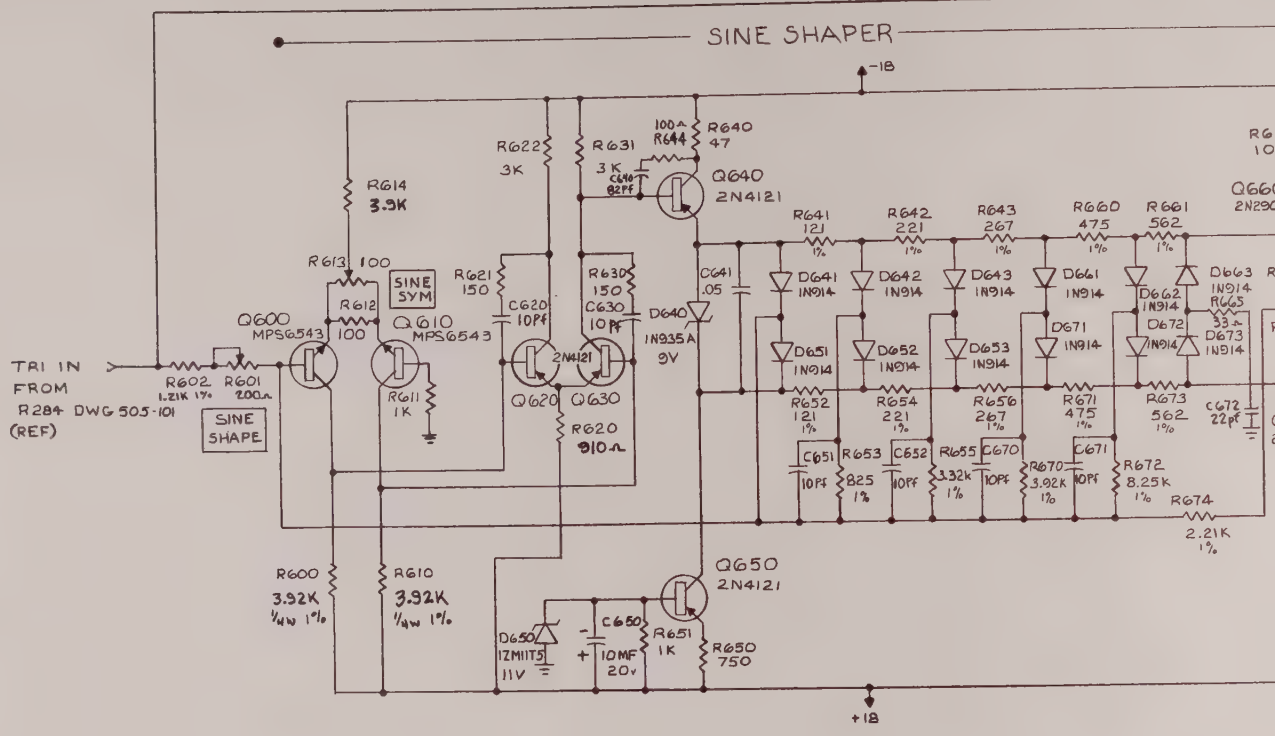

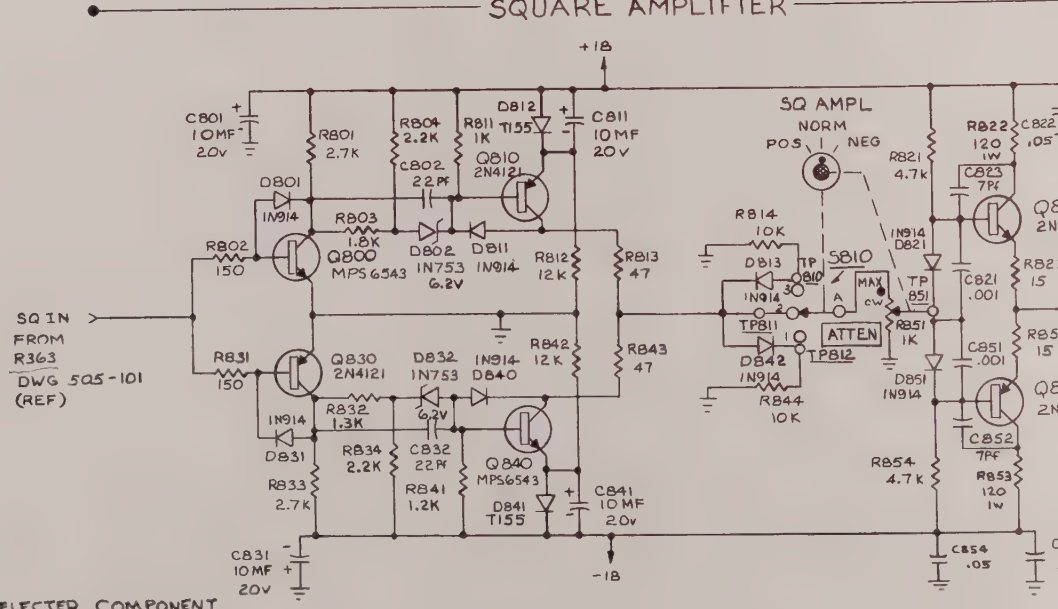

4) ★ DENOTES SELECTED COMPONENT

3) CAPACITOR VALUES MARKED IN MF UNLESS OTHERWISE NOTED

2) RESISTOR VALUES MARKED IN OHMS

1) MPS6543 BOTTOM VIEW

NOTES:

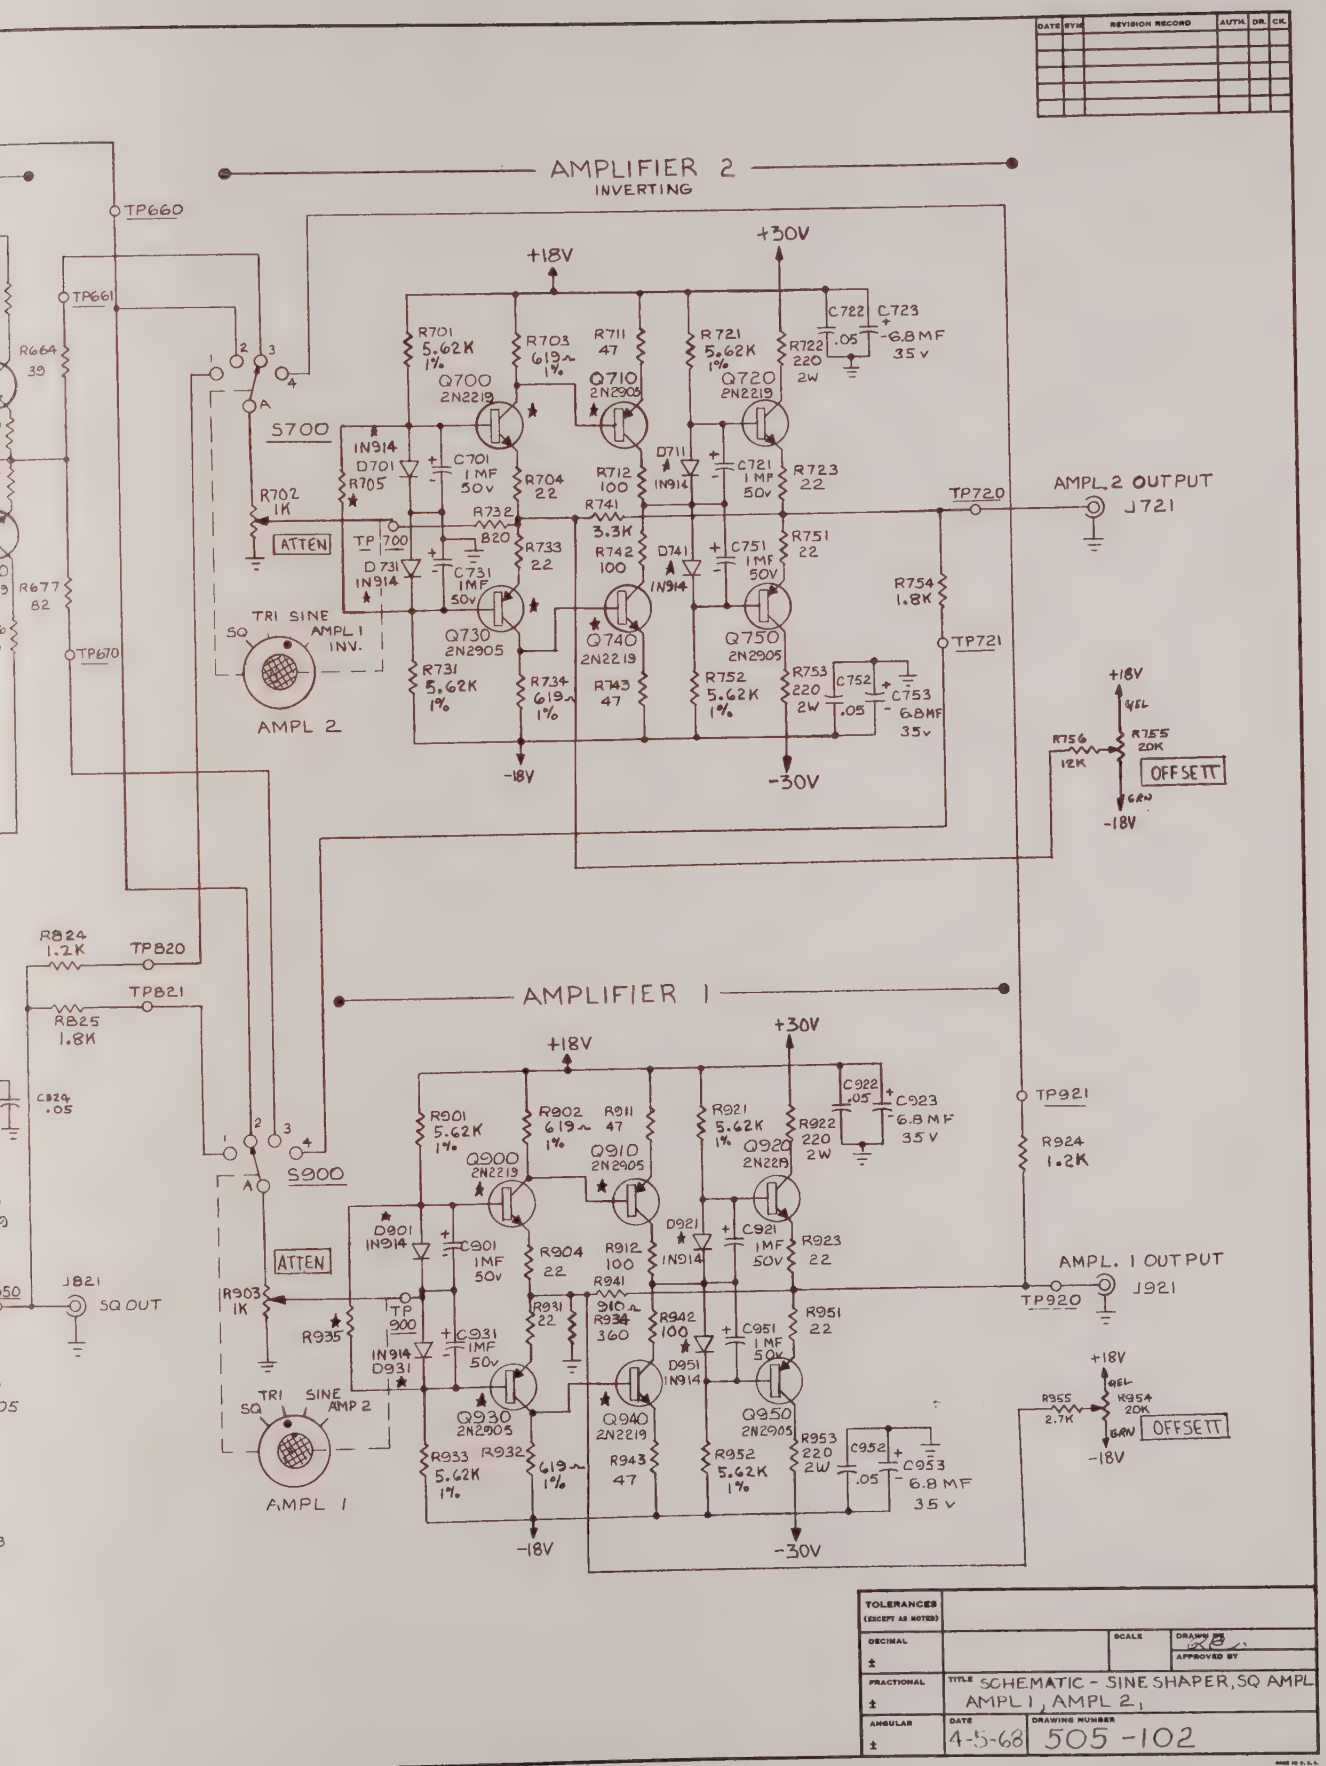
AMPLIFIER 2
INVERTING
+18V
+30V
TP660
TP661
TP670
R664 39
R677 82
S700
ATTEN
R702 1K
R701 5.62K 1%
R703 619Ω 1%
R711 47
R721 5.62K 1%
R722 220 2W
C722 .05
C723 6.8 MF 35 V
Q700 2N2219
Q710 2N2905
Q720 2N2219
IN914 D701
R705
C701 1 MF 50v
R704 22
D711 IN914
C721 1 MF 50v
R723 22
R732 820
R741 3.3K
TP 700
D731 IN914
C731 1MF 50v
R733 22
R742 100
D741 IN914
C751 1MF 50V
R751 22
TP720
AMPL 2 OUTPUT J721
R754 1.8K
TP721
TRI SINE SQ AMPL 1 INV.
AMPL 2
Q730 2N2905
Q740 2N2219
Q750 2N2905
R731 5.62K 1%
R734 619Ω 1%
R743 47
R752 5.62K 1%
R753 220 2W
C752 .05
C753 6.8MF 35v
-18V
-30V
+18V
YEL
R756 12K
R755 20K
OFFSETT
GRN
-18V
AMPLIFIER 1
+18V
+30V
RB24 1.2K
TPB20
TPB21
RB25 1.8K
C824 .05
S900
ATTEN
R901 5.62K 1%
R902 619Ω 1%
R911 47
R921 5.62K 1%
R922 220 2W
C922 .05
C923 6.8 MF 35 V
TP921
R924 1.2K
Q900 2N2219
Q910 2N2905
Q920 2N2219
D901 IN914
C901 1MF 50v
R904 22
R912 100
D921 IN914
C921 1MF 50V
R923 22
AMPL. 1 OUTPUT J921
TP920
J821 SQ OUT
R903 1K
R941 910Ω
R935
TP 900
R931 22
R934 360
R942 100
C931 1MF 50v
C951 1MF 50v
R951 22
IN914 D931
D951 IN914
TRI SINE SQ AMP 2
AMPL 1
Q930 2N2905
Q940 2N2219
Q950 2N2905
R933 5.62K 1%
R932 619Ω 1%
R943 47
R952 5.62K 1%
R953 220 2W
C952 .05
C953 6.8 MF 35 V
-18V
-30V
+18V
YEL
R955 2.7K
R954 20K
OFFSETT
GRN
-18V
DATE BY REVISION RECORD AUTH. DR. CK.
TOLERANCES (EXCEPT AS NOTED)
DECIMAL ±
FRACTIONAL ±
ANGULAR ±
SCALE
DRAWN
APPROVED BY
TITLE SCHEMATIC - SINE SHAPER, SQ AMPL AMPL 1, AMPL 2
DATE 4-5-68
DRAWING NUMBER 505-102

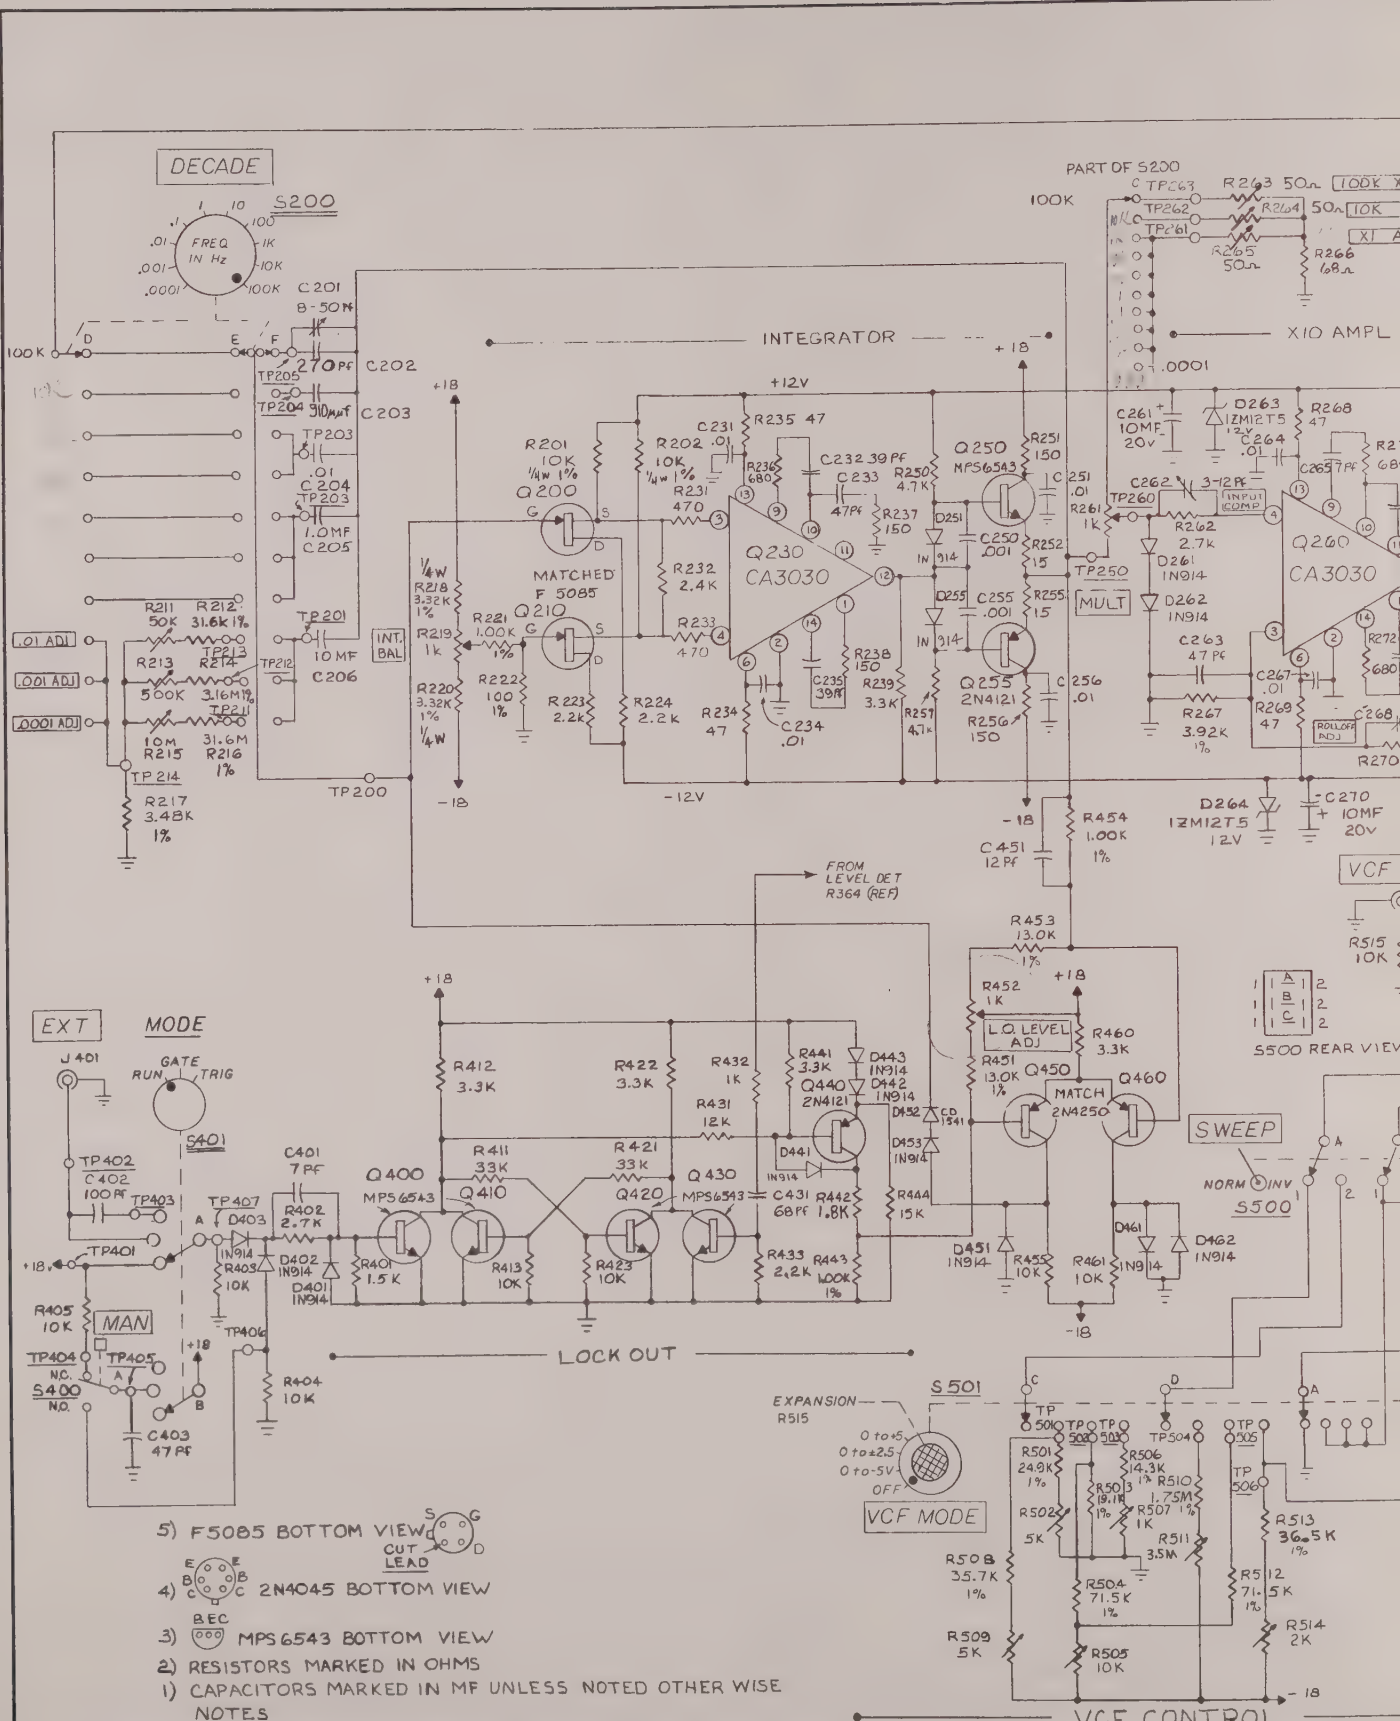
DECADE
S200
FREQ IN Hz
C201 8-50PF
C202 270PF
C203 910μμf
C204 .01
C205 1.0MF
C206 10MF
TP200
TP201
TP203
TP204
TP205
100K
INTEGRATOR
+18
-18
+12V
-12V
R201 10K 1/4W 1%
R202 10K 1/4W 1%
R231 470
R232 2.4K
R233 470
R234 47
R235 47
R236 680
R237 150
R238 150
R239 3.3K
R250 4.7K
R251 150
R252 15
R255 15
R256 150
R257 4.7K
C231 .01
C232 39PF
C233 47PF
C234 .01
C235 39PF
C250 .001
C251 .01
C255 .001
C256 .01
Q200
Q210
MATCHED F 5085
Q230 CA3030
Q250 MPS6543
Q255 2N4121
INT. BAL
R218 3.32K 1%
R219 1K
R220 3.32K 1%
R221 1.00K 1%
R222 100 1%
R223 2.2K
R224 2.2K
.01 ADJ
.001 ADJ
.0001 ADJ
R211 50K
R212 31.6K 1%
R213 500K
R214 3.16M 1%
R215 10M
R216 31.6M 1%
R217 3.48K 1%
TP212
TP213
TP214
TP211
PART OF S200
TP263
TP262
TP261
R263 50Ω 100K
R264 50Ω 10K
R265 50Ω
R266 68Ω
X10 AMPL
.0001
C261 10MF 20V
C262 3-12PF
C263 47PF
C264 .01
C265 7PF
C267 .01
C269 47
D263 IZM12T5 12V
D261 IN914
D262 IN914
R262 2.7K
R267 3.92K 1%
R268 47
R269 47
R270 680
Q260 CA3030
TP260
INPUT COMP
MULT
ROLLOFF ADJ
D264 IZM12T5 12V
C270 10MF 20V
R454 1.00K 1%
C451 12PF
VCF
R515 10K
FROM LEVEL DET R364 (REF)
R453 13.0K 1%
R452 1K
L.O. LEVEL ADJ
R460 3.3K
R451 13.0K 1%
Q450
Q460
MATCH 2N4250
S500 REAR VIEW
SWEEP
NORM INV
S500
EXT MODE
J401
GATE
RUN TRIG
S401
TP402
C402 100PF
TP403
TP407
C401 7PF
R402 2.7K
D402 IN914
D401 IN914
D403 IN914
TP401
R403 10K
R405 10K
MAN
TP404
TP405
S400
N.C.
N.O.
C403 47PF
TP406
R404 10K
R412 3.3K
R422 3.3K
R432 1K
R431 12K
R441 3.3K
R411 33K
R421 33K
R433 2.2K
R442 68PF 1.8K
R443 100K 1%
R444 15K
Q400 MPS6543
Q410
Q420
Q430 MPS6543
Q440 2N4121
D441 IN914
D442 IN914
D443 IN914
D452 CD1541
D453 IN914
D451 IN914
R401 1.5K
R413 10K
R423 10K
R451 10K
R455 10K
R461 10K
D461 IN914
D462 IN914
LOCK OUT
S501
EXPANSION R515
0 to +5
0 to ±2.5
0 to -5V
OFF
VCF MODE
TP 500
TP 501
TP 502
TP 503
TP 504
TP 505
TP 506
R501 24.9K 1%
R502 5K
R503 19.1K 1%
R504 71.5K 1%
R505 10K
R506 14.3K 1%
R507 1%
R508 35.7K 1%
R509 5K
R510 1.75M 1%
R511 3.5M
R512 71.5K 1%
R513 36.5K 1%
R514 2K
VCF CONTROL
5) F5085 BOTTOM VIEW
CUT LEAD
4) 2N4045 BOTTOM VIEW
B E C
3) MPS6543 BOTTOM VIEW
2) RESISTORS MARKED IN OHMS
1) CAPACITORS MARKED IN MF UNLESS NOTED OTHER WISE
NOTES

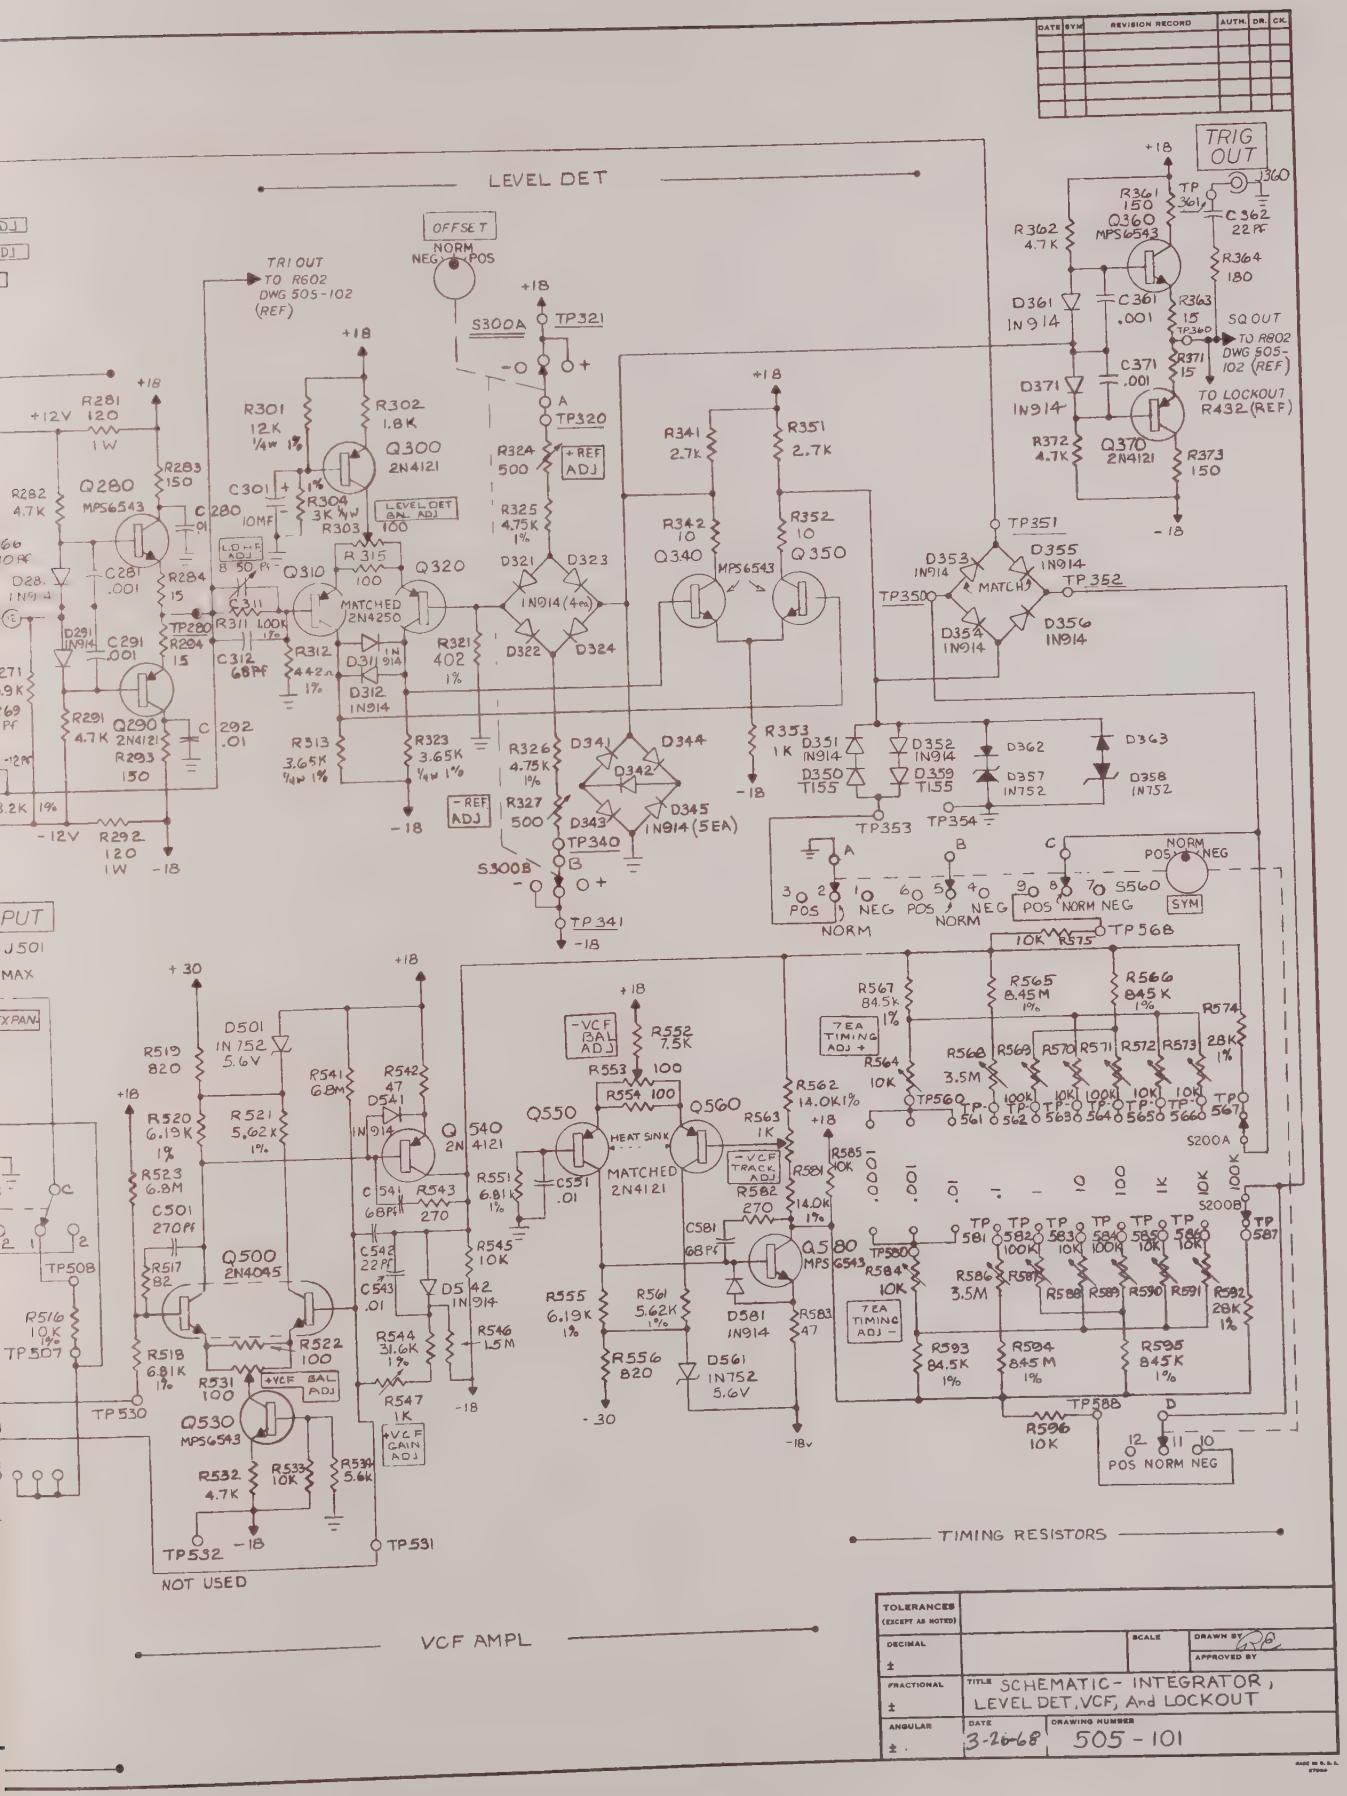
REVISION RECORD
DATE
SYM
AUTH.
DR.
CK.
LEVEL DET
TRIG OUT
TRI OUT TO R602 DWG 505-102 (REF)
OFFSET
NORM
NEG
POS
S300A
S300B
TP321
TP320
TP340
TP341
+REF ADJ
-REF ADJ
LEVEL DET BAL ADJ
LOW ADJ
Q280 MPS6543
Q290 2N4121
Q300 2N4121
Q310 MATCHED 2N4250
Q320
Q340 MPS6543
Q350
Q360 MPS6543
Q370 2N4121
D311 IN914
D312 IN914
D321 D323 IN914 (4ea)
D322 D324
D341 D342 D343 D344 D345 IN914 (5EA)
D350 T155
D351 IN914
D352 IN914
D353 IN914
D354 IN914
D355 IN914
D356 IN914
D357 IN752
D358 IN752
D359 T155
D361 IN914
D362
D363
D371 IN914
MATCH
TP350
TP351
TP352
TP353
TP354
TP360
TP361
SQ OUT TO R802 DWG 505-102 (REF)
TO LOCKOUT R432 (REF)
S560
SYM
POS NORM NEG
TP568
S200A
S200B
TP587
TP588
TIMING RESISTORS
VCF AMPL
-VCF BAL ADJ
-VCF TRACK ADJ
+VCF BAL ADJ
+VCF GAIN ADJ
7EA TIMING ADJ +
7EA TIMING ADJ -
Q500 2N4045
Q530 MPS6543
Q540 2N4121
Q550 MATCHED 2N4121
Q560
Q580 MPS6543
HEAT SINK
D501 IN752 5.6V
D541 IN914
D542 IN914
D561 IN752 5.6V
D581 IN914
TP507
TP508
TP530
TP531
TP532
NOT USED
TOLERANCES (EXCEPT AS NOTED)
DECIMAL ±
FRACTIONAL ±
ANGULAR ±
SCALE
DRAWN BY GRP
APPROVED BY
TITLE SCHEMATIC - INTEGRATOR, LEVEL DET, VCF, And LOCKOUT
DATE 3-26-68
DRAWING NUMBER 505-101

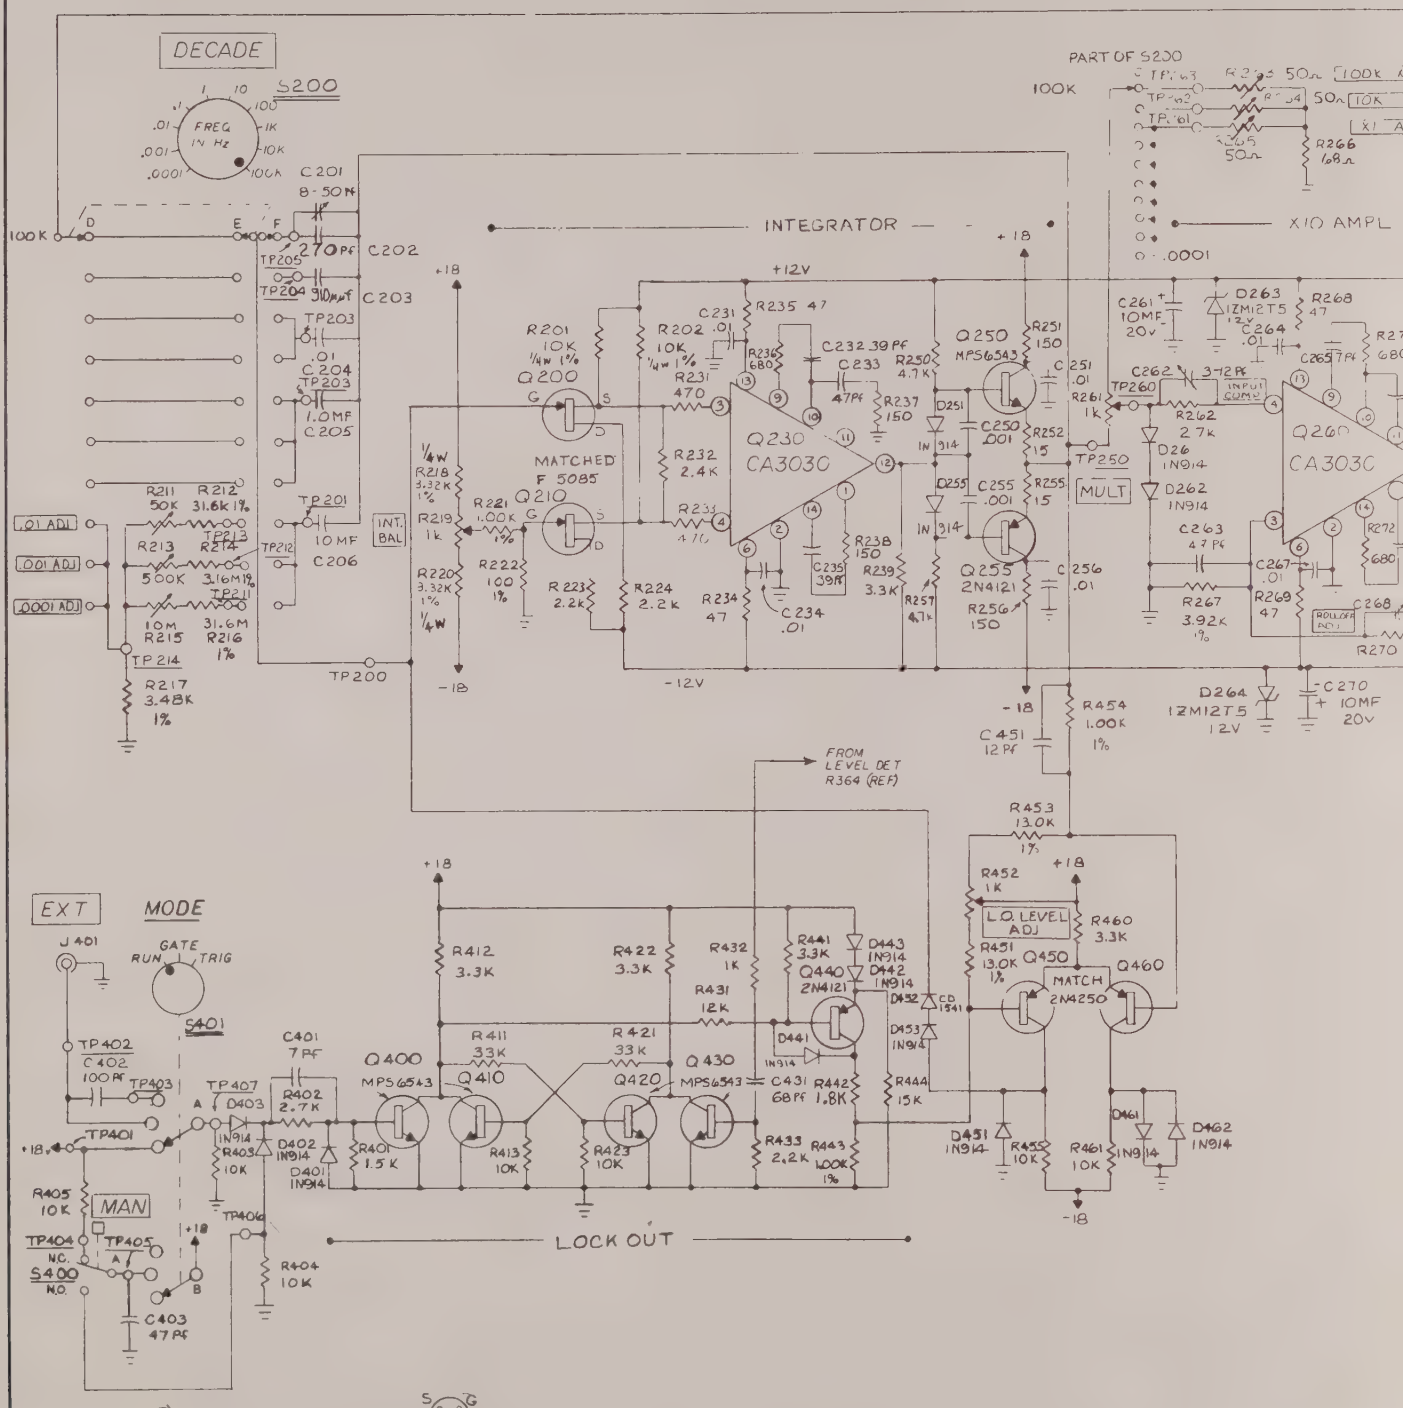

5) F5085 BOTTOM VIEW (S, G, D; CUT LEAD)

4) 2N4045 BOTTOM VIEW (E, B, C)

3) MPS6543 BOTTOM VIEW (B E C)

2) RESISTORS MARKED IN OHMS

1) CAPACITORS MARKED IN MF UNLESS NOTED OTHER WISE

NOTES

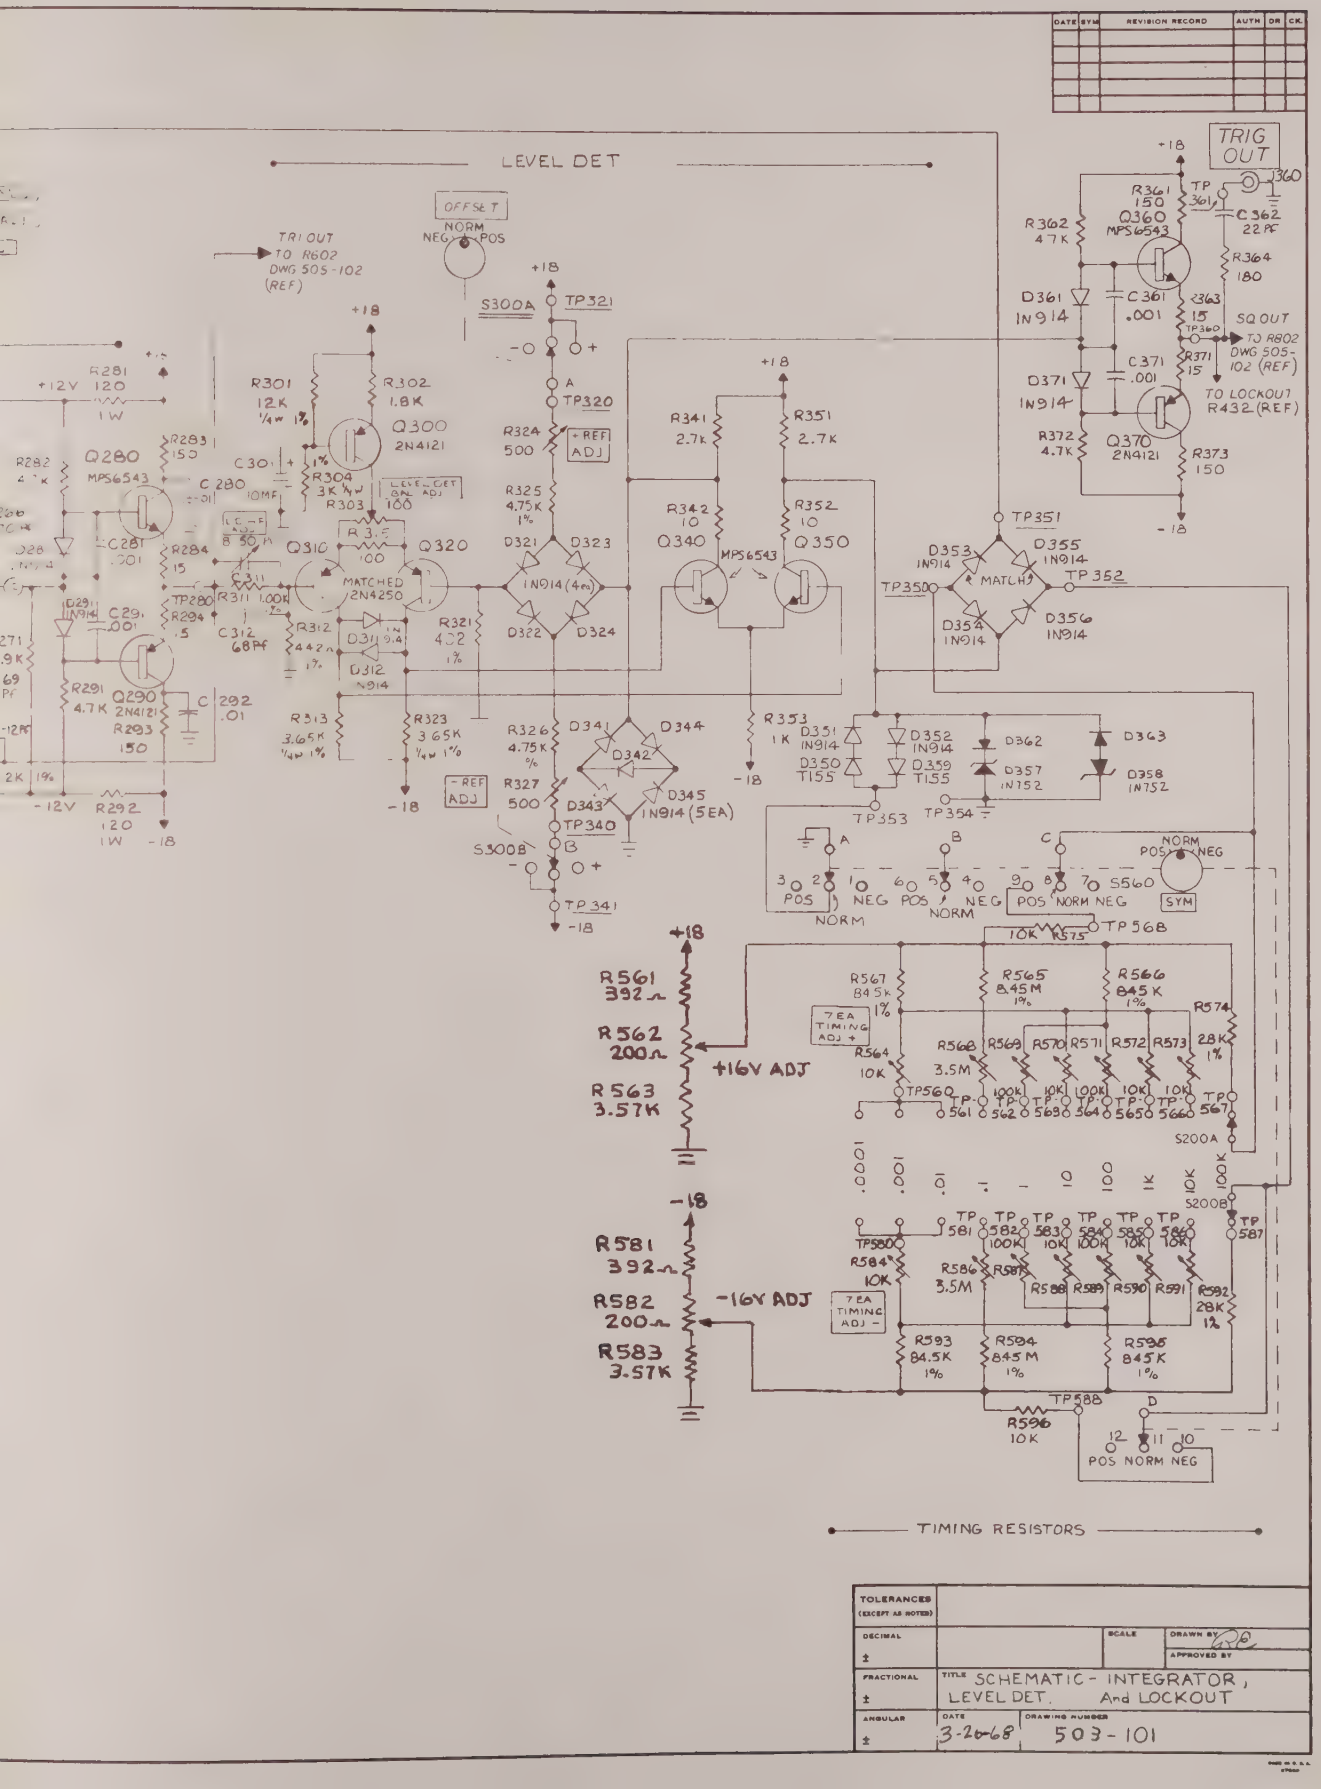

DATE	BY	REVISION RECORD	AUTH	DR	CK

TOLERANCES (EXCEPT AS NOTED)			
DECIMAL ±		SCALE	DRAWN BY / APPROVED BY
FRACTIONAL ±	TITLE SCHEMATIC - INTEGRATOR, LEVEL DET. And LOCKOUT		
ANGULAR ±	DATE 3-26-68	DRAWING NUMBER 503-101	

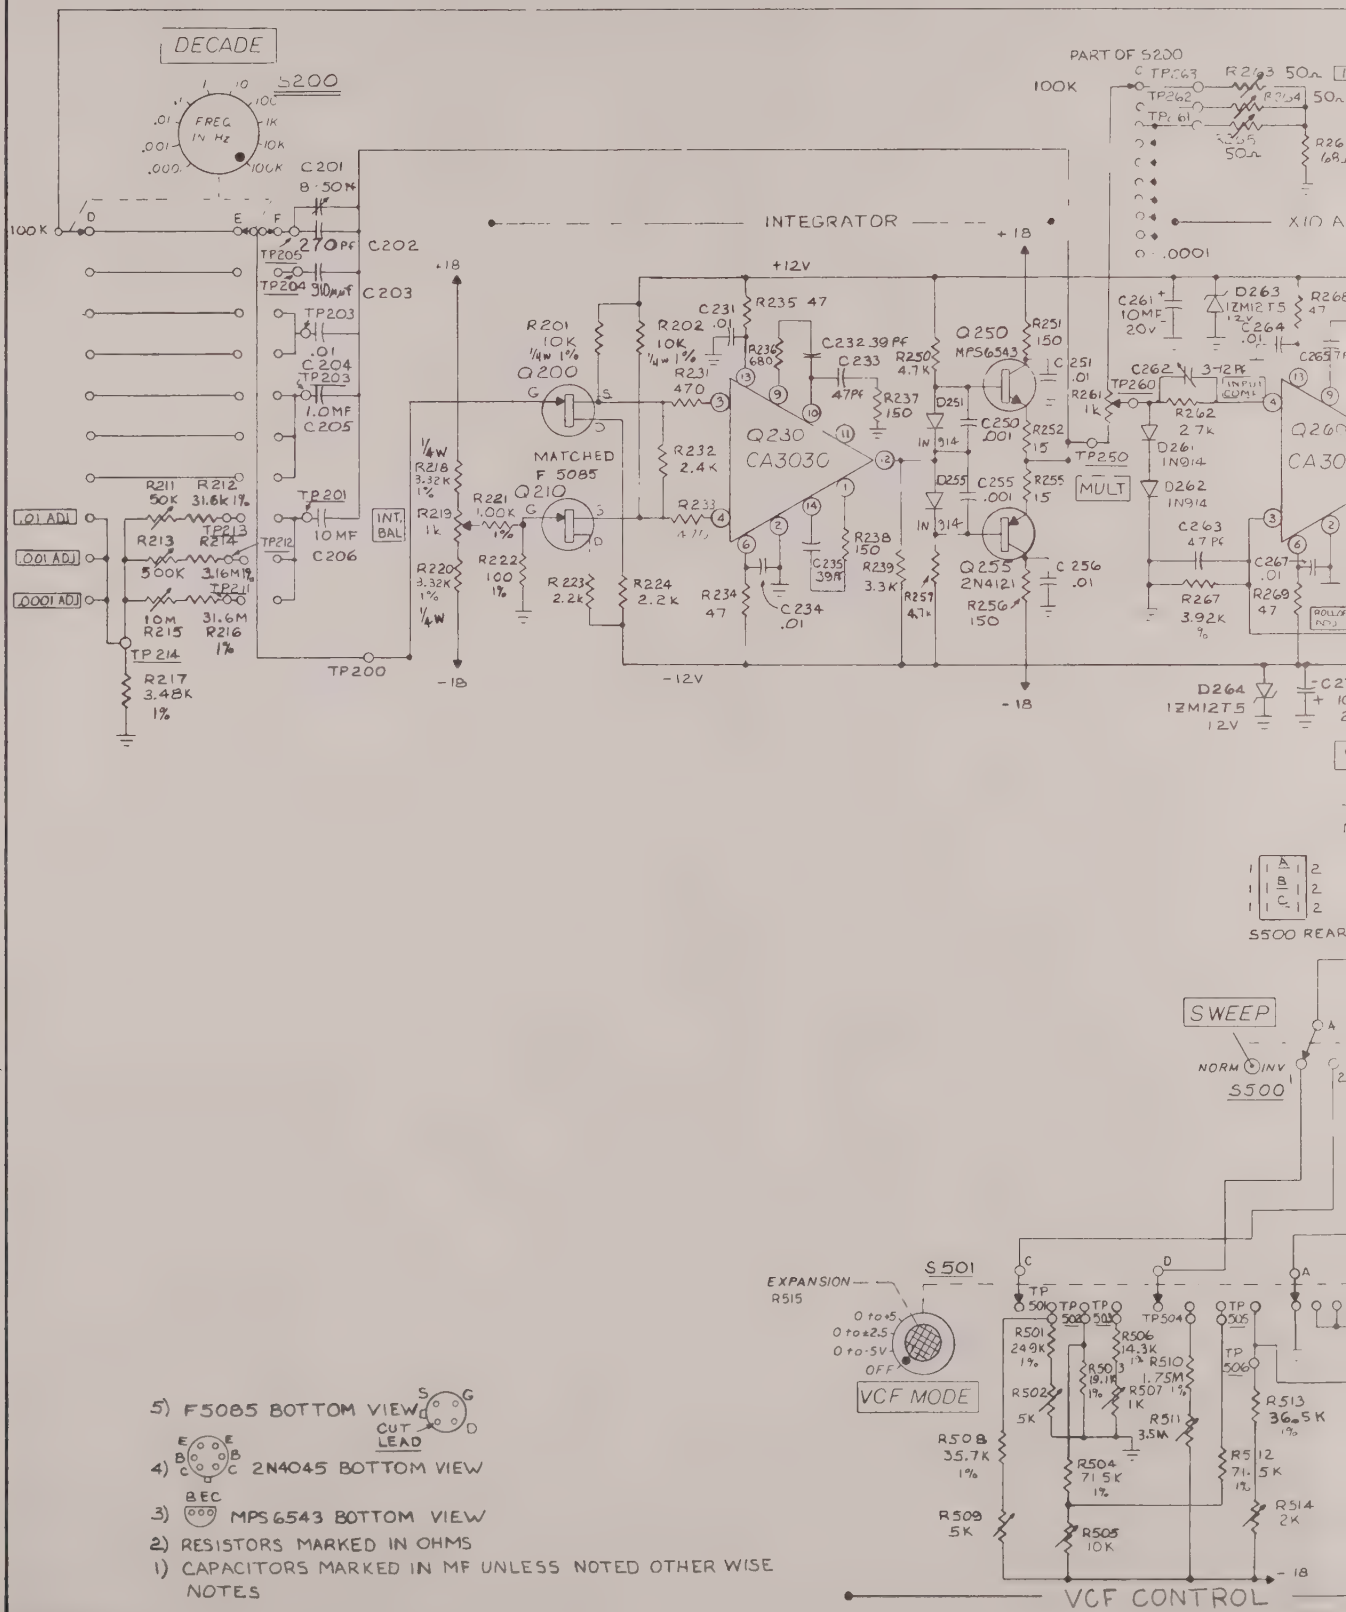
DECADE
S200
FREQ IN Hz
C201
.01 .001 .0001 ADJ
R211 50K
R212 31.6K 1%
R213 500K
R214 3.16M 1%
R215 10M
R216 31.6M 1%
R217 3.48K 1%
TP214
TP200
C202 270 PF
C203 910 PF
C204 .01
C205 1.0 MF
C206 10 MF
INTEGRATOR
+18
+12V
-12V
-18
R201 10K 1/4W 1%
Q200
R202 10K 1/4W 1%
C231 .01
R231 470
R232 2.4K
R233 4.7K
Q210 MATCHED F 5085
R218 3.32K 1%
R219 1K
R220 3.32K 1%
R221 1.00K 1%
R222 100 1%
R223 2.2K
R224 2.2K
R234 47
C234 .01
Q230 CA3030
R235 47
R236 680
C232 39 PF
C233 47PF
R237 150
R238 150
C235 39PF
R239 3.3K
R250 4.7K
Q250 MPS6543
R251 150
C251 .01
D251 IN914
C250 .001
R252 15
TP250
MULT
D255 IN914
C255 .001
R255 15
Q255 2N4121
C256 .01
R256 150
R257 4.7K
D261 IN914
D262 IN914
C261 10MF 20V
D263 1ZM12T5 12V
C264 .01
C262 3-12 PF
TP260
R261 1K
R262 2.7K
C263 47 PF
R267 3.92K
R269 47
C267 .01
D264 1ZM12T5 12V
PART OF S200
100K
50Ω
.0001
X10 A
S500 REAR
SWEEP
NORM INV
S500
S501
EXPANSION R515
0 to +5
0 to ±2.5
0 to -5V
OFF
VCF MODE
R501 249K 1%
R502 5K
R503 19.1K 1%
R504 71.5K 1%
R505 10K
R506 14.3K 1%
R507 1K 1%
R508 35.7K 1%
R509 5K
R510 1.75M 1%
R511 3.5M
R512 71.5K 1%
R513 36.5K 1%
R514 2K
TP 501
TP 502
TP 503
TP 504
TP 505
TP 506
VCF CONTROL
5) F5085 BOTTOM VIEW
CUT LEAD
4) 2N4045 BOTTOM VIEW
3) MPS6543 BOTTOM VIEW
2) RESISTORS MARKED IN OHMS
1) CAPACITORS MARKED IN MF UNLESS NOTED OTHER WISE
NOTES

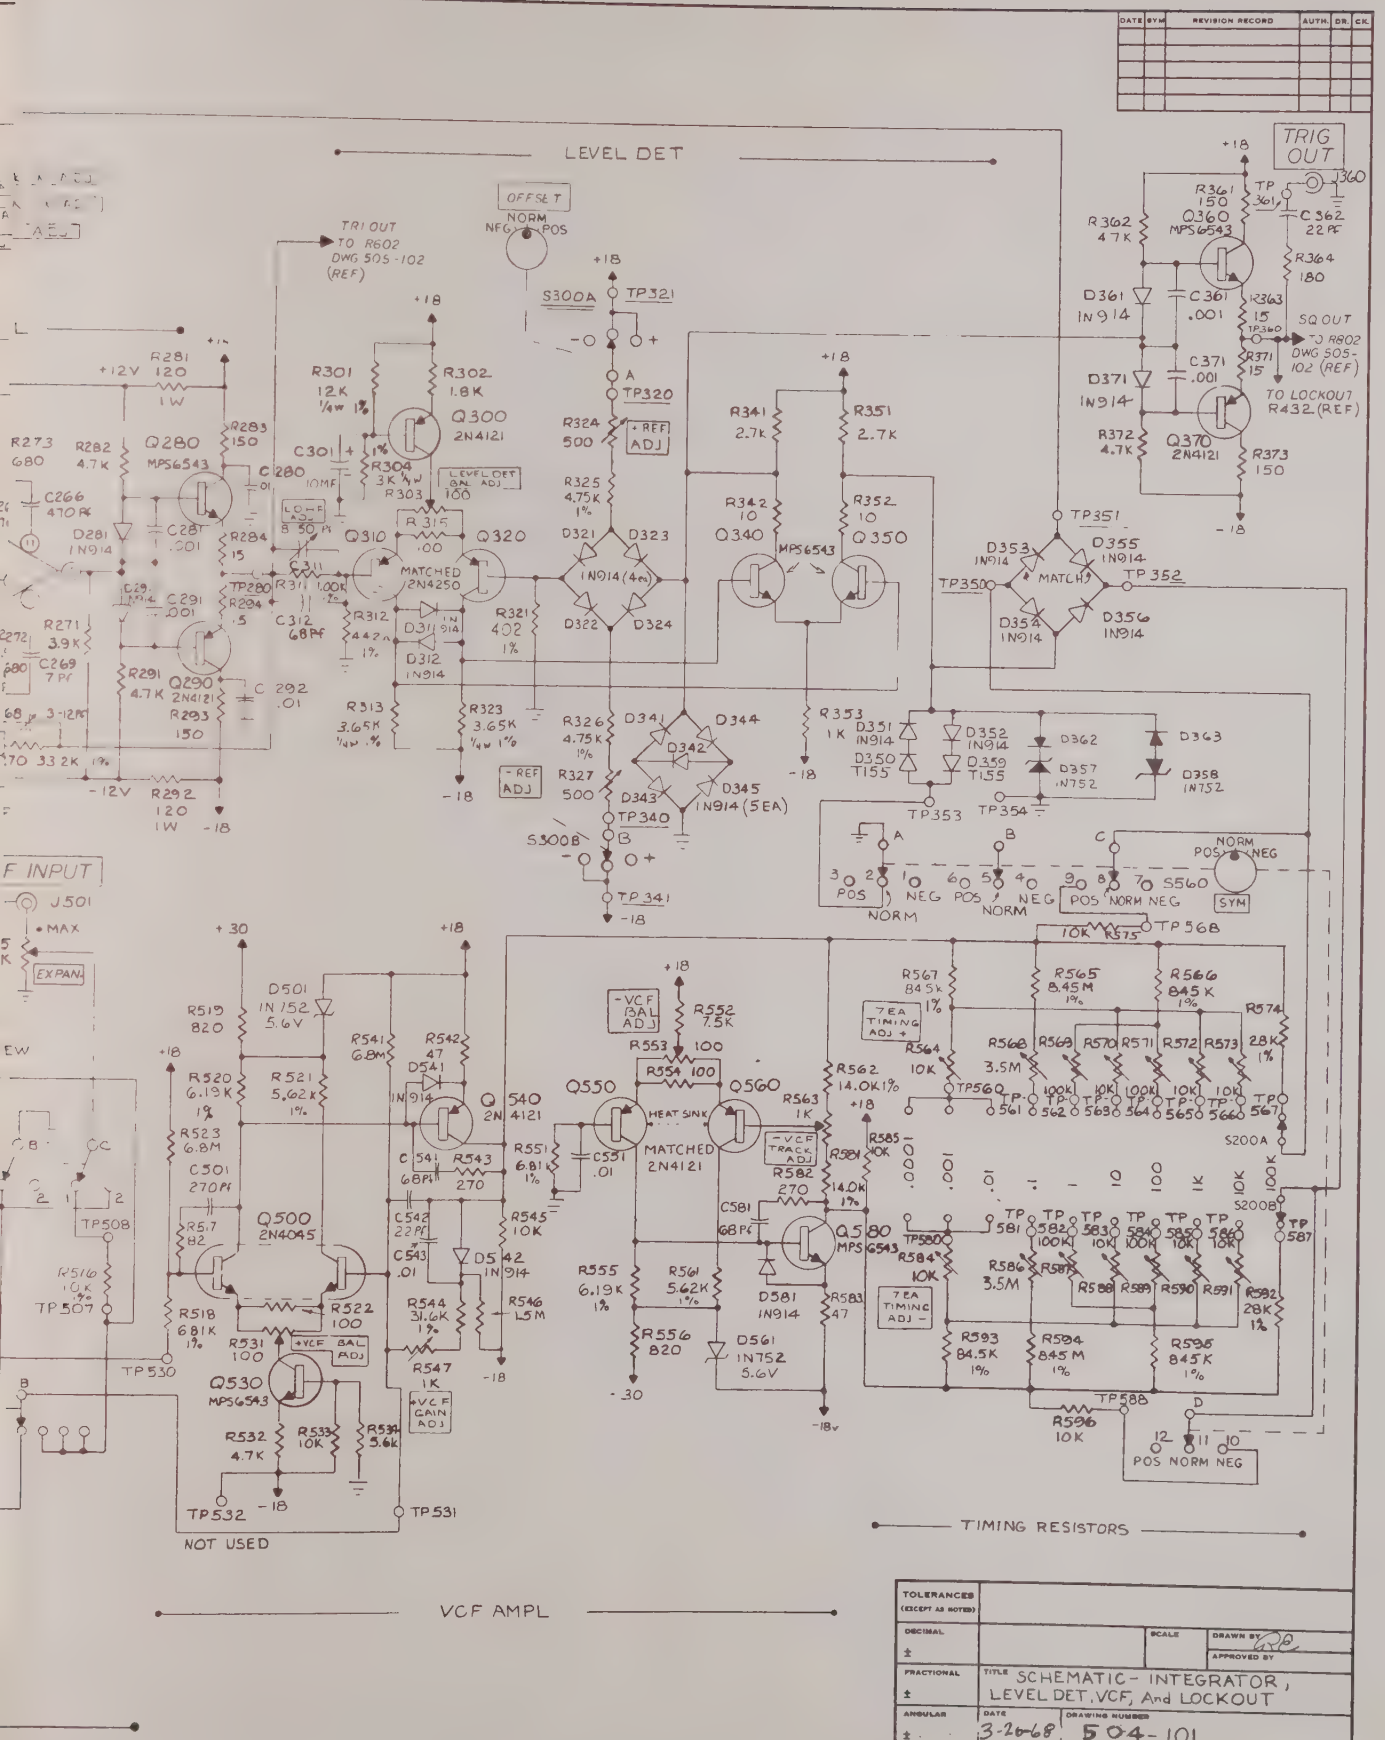
LEVEL DET
TRIG OUT
OFFSET
NORM
NEG
POS
S300A
TP321
TP320
TP340
TP341
S300B
TRI OUT TO R602 DWG 505-102 (REF)
+ REF ADJ
- REF ADJ
LEVEL DET GN ADJ
LO-F ADJ
MATCHED 2N4250
MATCHED 2N4121
MPS6543
1N914 (4ea)
1N914 (5EA)
TP351
TP352
TP353
TP354
TP3500
MATCH
S560
SYM
TP568
R575
SQ OUT TO R802 DWG 505-102 (REF)
TO LOCKOUT R432 (REF)
F INPUT
J501
EXPAN
MAX
S200A
S200B
TP507
TP508
TP530
TP531
TP532
NOT USED
VCF AMPL
TIMING RESISTORS
-VCF BAL ADJ
+VCF BAL ADJ
+VCF GAIN ADJ
-VCF TRACK ADJ
7EA TIMING ADJ +
7EA TIMING ADJ -
HEAT SINK
TOLERANCES (EXCEPT AS NOTED)
DECIMAL ±
FRACTIONAL ±
ANGULAR ±
SCALE
DRAWN BY
APPROVED BY
TITLE SCHEMATIC - INTEGRATOR, LEVEL DET, VCF, And LOCKOUT
DATE 3-26-68
DRAWING NUMBER 504-101

SECTION 8

REPRESENTATIVES, DISTRIBUTORS

EXACT ELECTRONICS, INC.

REPRESENTATIVES

EASTERN U.S.

Martin P. Andrews, Inc. 319 Mott Rd, Fayetteville, N.Y. 13066 (315) 637-6405	New York State (not NYC)
Beacon Electronic Associates, Inc. P. O. Box 1278, Maitland, Florida 32751 (305) 647-3498	Florida
P. O. Box 10212, Ft. Lauderdale, Fla. (305) 564-4298	Florida
2285 Peachtree Rd.,N.E. Suite 106, Atlanta, Georgia (404) 351-3654	Ala, Georgia, Mississippi, Tennessee
Instrument Representatives, Inc. 1046 Massachusetts Ave., Arlington, Mass 02174 (617) 646-1034	Massachusetts
P. O. Box 165, Glastonbury, Conn 06033 (203) 633-0777	Connecticut
Letronix 251 W. DeKalb Pk, King of Prussia, Pa. 19406 (215) 265-1020	Eastern Pa., Southern N.J.
Measurement Technology, Inc. 19 Danton St., Melville, New York 11746 (516) 692-2957	NYC, L.I., S. New Jersey
Scientific Marketing Associates 8817 Hunting Lane, Laurel, Maryland 20810 (301 776-5130	Delaware, Maryland,Wash DC, Loudon-Fairfax counties, Va.
Technical Marketing Associates 5100 N. Glen Dr, Raleigh, N. Carolina (919) 787-7244	N. & S. Carolinas Virginia

CENTRAL U.S.

Bard Associates, Inc. La Grange Industrial Park, La Grange, Ill. 60526 (312) 354-0660	Illinois, Iowa, S.E. Wisc.
4002 Meadows Drive, Indianapolis, Indiana 46205 (317) 849-2723	Indiana
7700 Morgan Ave. S., Minneapolis, Minn 55423 (612) 866-1700	Minnesota
Southwest Electronic Industries, Inc. 621 Meadows Bldg, Dallas, Tex 75206 (214) 363-1671	N. Texas N. La.
1405 S. Post Oak Rd, Houston Tex 77027 (713) 928-5251	S. Tex,S.La.
2015-C S. Lakewood, Tulsa, Okla 74112	Okla, Arkansas

EXACT ELECTRONICS, INC.

REPRESENTATIVES

WESTERN U.S.

D. E. Bond Associates
2149 Clermont St, Denver, Colo 80222 (303· 746-1234 — Colorado, Utah Idaho, Mont, Wyoming

P. O. Box 11331, Albuquerque, N.Mexico 87112
(505)-247-3442 — New Mexico, El Paso county Texas

The Abco Company
555 W. Ninth, San Pedro, California 90731
(213) 833-8333 — S. California

The Mauldin Company
441 California Avenue, Palo Alto, California 94306
(415) 326-5291 — N. California

Measurement Consultants
4430 N. 19th Avenue, Phoenix, Arizona 85015
(602) 264-7709 — Arizona, Clark county Nevada

Exact Electronics, Inc.
P. O. Box 160, Hillsboro, Oregon 97123
(503) 648-6661 — Oregon, Washing

CANADA

Atlas Instrument Corporation
50 Wingold Avenue, Toronto 19, Ontario
(416) 781-6174

3333 Cavendish Blvd, Montreal, Quebec
514-HU9-8495

342½ Elgin St., Ottawa, Ontario
.613-CE3-9471

10204 88th St., Edmonton, Alberta
403-424-9065

EXACT ELECTRONICS, INC.

OVERSEAS DISTRIBUTORS

COASIN, S.A., Virrey del Pinio 4071, Buenos Aires	Argentina
Electronic Associates, Pty, Ltd., 26 Albany St., St. Leonards, N.S.W., Sydney	Australia
Inglomark Markowitsch & Co., Mariahilfter Strasse 133 Wien XV	Austria
Regulation Mesure sprl, 22 Rue Saint-Hubert, Bruxelles 15	Belgium
Importacio Industria e Commercio, Ambries SA, Ave Grace Aranha, 226-6°, Rio de Janeiro	Brazil
Pentz & Cia, Ltda, Casilla 2839, Santiago	Chile
Oltronix A/S, Maltegaardsvej 18a, DK-2820, Gentofte	Denmark
Advance Electronics Ltd., Roebuck Rd., Hainault, Ilford	England
Into O/Y, P. O. Box 10153, 11 Maritullinkatu, Helsinki	Finland
S.E.R.I.E.L. (SA), 48, Avenue Victor Hugo, Clamart	France
Marios Dalleggio Representations, 2 Alopekis St, Athens 139,	Greece
Industrial Agencies, 11 Mahatma Gandhi Road, Bombay 1	India
Abdul Masih E. Jwaideh, 85, Saadun St., Bagdad	Iraq
Eastronics Ltd., 75 Haifa Rd., P. O. Box 21029, Tel Aviv,	Israel
Silverstar Ltd., Via Dei Gracchi 20, 1-20146 Milano	Italy
Fredin, SA, P. O. Box 53-958, Mexico 17, D.F.	Mexico
C. N. Rood, n.v., P. O. Box 4542, Rijswijk (Z.H.)	The Netherlands
W & K McLean Ltd., P. O. Box 3097, Auckland	New Zealand
Morgenstierne & Co., A/S Ingenirfirma, Wessels Gate 6, Oslo	Norway
Pakland Corp, Central Commercial Area, Karachi 29	Pakistan
Equipamentos de Laboratoria Lda, Rua Pedro Nunes 47, (also Angola, Mozambique, Africa) Lisbon 1	Portugal
Telco, S.L., Gravina 27, Madrid	Spain
Scandia Metric AB, S. Langgatan 22, Fack Solna 3, Stockholm	Sweden
Omni Ray AG, Dufourstrasse 56, Zurich 8008	Switzerland
Rohde and Schwarz Vertriebs - GmbH, Hohe Strasse 160-168 Koeln,	West Germany

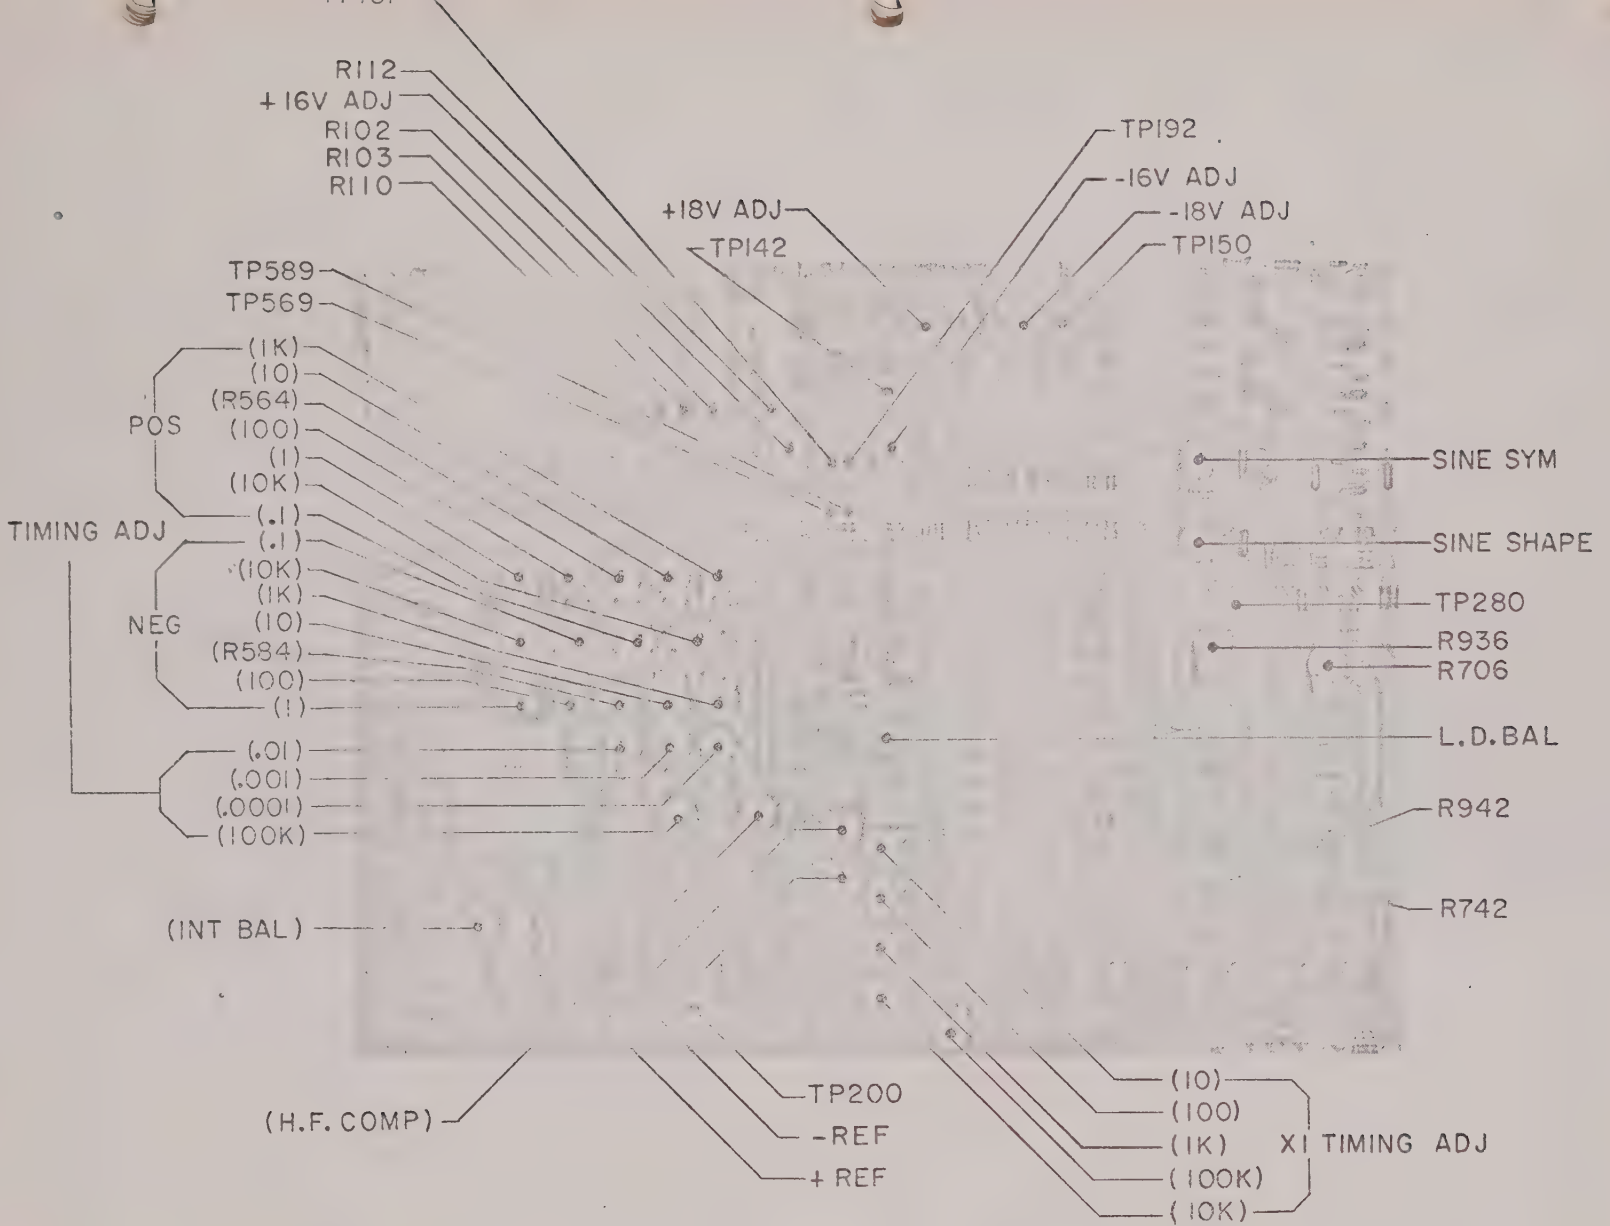

ADJUSTMENTS & TEST POINTS

MODEL 505B,504B,503B,500B

FIGURE 5.0.1

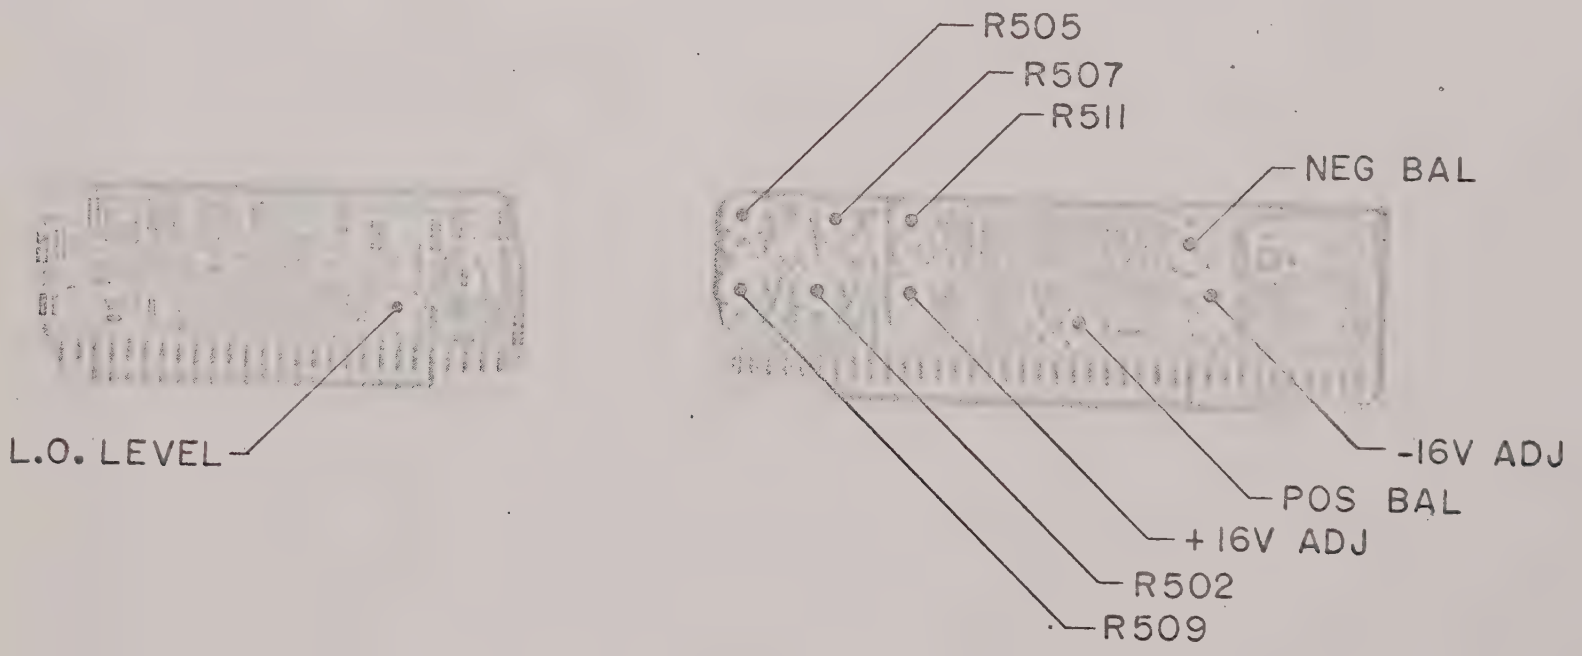

ADJUSTMENTS & TEST POINTS

LOCKOUT AMP & VCF AMP

FIGURE 5.0.2

5.3.12 TRIGGER OUT CHECK

Check trigger output for differentiated square wave of greater than open circuit.

5.3.13 SINE SHAPER CALIBRATION

A. Set Decade at 100 and Mult at 10.

B. Monitor the sine distortion at Amp 1 output.

C. Adjust Sine Shape and Sine Sym to obtain minimum distortion as indicated on distortion analyzer, <.6% .0001 to 10KHz, <1% 10KHz to 100KHz, <2% 100KHz to 1MHz.

5.3.14 SQUARE AMP CHECK (no calibration required)

A. Check for greater than 25V P-P square waveform into 600-ohm load.

B. Check negative and positive square for greater than 12.5V into 600 ohms.

C. Check D.C. reference level of 0 V ±100mv.

D. Check risetime and falltime for <50ns.

5.3.15 AMP 1 CALIBRATION

A. Set function generator controls as follows

MODE	RUN
DECADE	100
MULTIPLIER	10
VCF MODE	OFF
OFFSET	NORM
SYM	NORM
SWEEP	NORM
AMP 1 MODE	TRIANGLE
AMP 1 ATTEN	MAX

B. Monitor Amp 1 output.

C. Set Amp 1 attenuator to minimum amplitude, adjust Var Offset (front panel) to obtain 0 V ±50mv.

D. Set Amp 1 for a 28V P-P triangle and adjust R936 to obtain approximately 500 to 700mv voltage drop across R942 as measured with VOM.

E. Check all waveforms for greater than 25V P-P into 600 ohms.

F. Check square waveform rise and fall times for less than 50ns.

G. Check Var Offset for >±4V.

5.3.16 AMP 2 CALIBRATION

A. Set function generator Amp 2 mode to Tri, Amp 2 Atten to Max, other controls as in 5.3.15 A.

B. Monitor Amp 2 output

C. Set Amp 2 attenuator to minimum amplitude and adjust Var Offset (front panel) to obtain 10V ±50mv.

D. Set Amp 2 for a 28V P-P triangle and adjust R706 to obtain approximately 500 to 700mv voltage drop across R742 as measured with VOM.

E. Check all waveforms for greater than 25V P-P into 600 ohms.

F. Check square waveform rise and fall times for less than 105ns.

G. Check Var Offset for >±4V.

5.3.12 TRIGGER OUT CHECK

Check trigger output for differentiated square wave of greater than . open circuit.

5.3.13 SINE SHAPER CALIBRATION

A. Set Decade at 100 and Mult at 10.

B. Monitor the sine distortion at Amp 1 output.

C. Adjust Sine Shape and Sine Sym to obtain minimum distortion as indicated on distortion analyzer, <.6% .0001 to 10KHz, <1% 10KHz to 100KHz, <2% 100KHz to 1MHz.

5.3.14 SQUARE AMP CHECK (no calibration required)

A. Check for greater than 25V P-P square waveform into 600-ohm load.

B. Check negative and positive square for greater than 12.5V into 600 ohms.

C. Check D.C. reference level of 0 V ±100mv.

D. Check risetime and falltime for <50ns.

5.3.15 AMP 1 CALIBRATION

A. Set function generator controls as follows

MODE	RUN
DECADE	100
MULTIPLIER	10
VCF MODE	OFF
OFFSET	NORM
SYM	NORM
SWEEP	NORM
AMP 1 MODE	TRIANGLE
AMP 1 ATTEN	MAX

B. Monitor Amp 1 output.

C. Set Amp 1 attenuator to minimum amplitude, adjust Var Offset (front panel) to obtain 0 V ±50mv.

D. Set Amp 1 for a 28V P-P triangle and adjust R936 to obtain approximately 500 to 700mv voltage drop across R942 as measured with VOM.

E. Check all waveforms for greater than 25V P-P into 600 ohms.

F. Check square waveform rise and fall times for less than 50ns.

G. Check Var Offset for >±4V.

5.3.16 AMP 2 CALIBRATION

A. Set function generator Amp 2 mode to Tri, Amp 2 Atten to Max, other controls as in 5.3.15 A.

B. Monitor Amp 2 output

C. Set Amp 2 attenuator to minimum amplitude and adjust Var Offset (front panel) to obtain 10V ±50mv.

D. Set Amp 2 for a 28V P-P triangle and adjust R706 to obtain approximately 500 to 700mv voltage drop across R742 as measured with VOM.

E. Check all waveforms for greater than 25V P-P into 600 ohms.

F. Check square waveform rise and fall times for less than 105ns.

G. Check Var Offset for >±4V.

SET CONTROL CHECK (no calibration required)

Monitor the triangle waveform at TP280 X10 Amp output.

Place Offset switch in Pos position and note that the frequency is doubled and that the triangle has shifted up 4V and has decreased in amplitude from 8.4V P-P to 4.2V P-P (0 to +4.2V P).

Place the Offset switch in the Neg position and note an equal but opositite change (0 to -4.2V P).

LOCKOUT CALIBRATION (Models 504B and 505B only)

A. Insert the Lockout P.C. board, 443-112 and set function generator controls as follows

MODE	GATE
DECADE	100
MULT	10
OFFSET	NORM
SYM	NORM

B. Set the L.O. Level Adj mid-range and adjust level at TP280 (X10 Amp output) to 0 V with start level control on front panel. The start level should vary +4V by adjusting the start level control.

C. Depress the Man. pushbutton and note that the generator will free run as long as the button is depressed.

D. Place the Mode switch in the Trig position and note that the generator will complete one cycle each time the button is depressed.

NOTE: Scope triggering is very critical in order to observe single pulse.

E. Place the Mode switch in the Gate position. Apply an external gating signal of at least +3V. The generator will free run as long as gating signal is present.

NOTE: The external gating or triggering signal must be >+3V to "turn on" and must return to 0 V or less to "turn off."

F. Place the Mode switch in the Trig position. Apply an external signal as in previous step. The generator will complete one cycle each time the signal rises above +3V.

NOTE: As in previous step, the signal must return to 0 V or less before another signal is applied.

G. Set function generator controls as follows

MODE	GATE
DECADE	100K
MULT	10
OFFSET	NORM
SYM	NORM

Apply an external gating signal at a frequency of 990KHz and note that the generator will gate on and off.

H. Repeat previous step in Trig position, again noting that scope triggering is very critical when observing a single pulse.

SET CONTROL CHECK (no calibration required)

A. Monitor the triangle waveform at TP280 X10 Amp output.

B. Offset switch in Pos position and note that the frequency is doubled and that the triangle has shifted up 4V and has decreased in amplitude from 8.4V P-P to 4.2V P-P (0 to +4.2V P).

C. Place the Offset switch in the Neg position and note an equal but opposite change (0 to -4.2V P).

LOCKOUT CALIBRATION (Models 504B and 505B only)

A. Insert the Lockout P.C. board, 443-112 and set function generator controls as follows

MODE	GATE
DECADE	100
MULT	10
OFFSET	NORM
SYM	NORM

B. Set the L.O. Level Adj mid-range and adjust level at TP280 (X10 Amp output) to 0 V with start level control on front panel. The start level should vary +4V by adjusting the start level control.

C. Depress the Man. pushbutton and note that the generator will free run as long as the button is depressed.

D. Place the Mode switch in the Trig position and note that the generator will complete one cycle each time the button is depressed.

NOTE: Scope triggering is very critical in order to observe single pulse.

E. Place the Mode switch in the Gate position. Apply an external gating signal of at least +3V. The generator will free run as long as gating signal is present.

NOTE: The external gating or triggering signal must be >+3V to "turn on" and must return to 0 V or less to "turn off."

F. Place the Mode switch in the Trig position. Apply an external signal as in previous step. The generator will complete one cycle each time the signal rises above +3V.

NOTE: As in previous step, the signal must return to 0 V or less before another signal is applied.

G. Set function generator controls as follows

MODE	GATE
DECADE	100K
MULT	10
OFFSET	NORM
SYM	NORM

Apply an external gating signal at a frequency of 990KHz and note that the generator will gate on and off.

H. Repeat previous step in Trig position, again noting that scope triggering is very critical when observing a single pulse.

5.3.8 B. 0 to ±2.5V (continued)

4. Set function generator controls as follows

VCF MODE	0 to ±2.5V
SWEEP	NORM
INPUT VOLTAGE	+2.5V ±3mv

Adjust VCF Expansion control to obtain 200Hz ±1%.

5. Apply -2.5V ±3mv at VCF input. The output frequency should now be within ±2% of dialed frequency, 10KHz.

6. Set function generator controls as follows

VCF MODE	0 to ±2.5V
SWEEP	INV
INPUT VOLTAGE	-2.5V ±3mv

Adjust VCF Expansion control to obtain 200Hz ±1%.

7. Apply +2.5V ±3mv at VCF input. The output frequency should be approximately 10KHz ±.5%.

C. 0 to -5V

1. Set function generator controls as follows

VCF MODE	0 to -5V
SWEEP	INV
EXP	FULL CW
INPUT VOLTAGE	GND

2. Adjust R509 to obtain 10KHz ±.5%.

3. Apply -5V ±3mv at VCF input and adjust R502 for 200Hz ±1%.

4. Set function generator controls as follows

SWEEP	NORM
INPUT VOLTAGE	-5V ±3mv

Adjust Expansion control to obtain 10KHz ±1%.

5. Apply 0 V ±3mv to VCF input and adjust R511 to obtain 200Hz ±1%.

5.3.9 SYMMETRY CONTROL CHECK (no calibration required)

A. Monitor the triangle waveform at TP280 X10 Amp output.

B. Place the Sym switch in the Pos position and note that the ramp rises positive.

C. Place the SYM switch in the Neg position and note that the ramp rises negative.

D. Note that the ramp falltime is less than 10% of the total period of the waveform from .0001Hz to 10KHz.

E. Place Sym switch in Norm position.

5.3.8 B. 0 to ±2.5V (continued)

4. Set function generator controls as follows

VCF MODE	0 to ±2.5V
SWEEP	NORM
INPUT VOLTAGE	+2.5V ±3mv

Adjust VCF Expansion control to obtain 200Hz ±1%.

5. Apply -2.5V ±3mv at VCF input. The output frequency should now be within ±2% of dialed frequency, 10KHz.

6. Set function generator controls as follows

VCF MODE	0 to ±2.5V
SWEEP	INV
INPUT VOLTAGE	-2.5V ±3mv.

Adjust VCF Expansion control to obtain 200Hz ±1%.

7. Apply +2.5V ±3mv at VCF input. The output frequency should be approximately 10KHz ±.5%.

C. 0 to -5V

1. Set function generator controls as follows

VCF MODE	0 to -5V
SWEEP	INV
EXP	FULL CW
INPUT VOLTAGE	GND

2. Adjust R509 to obtain 10KHz ±.5%.

3. Apply -5V ±3mv at VCF input and adjust R502 for 200Hz ±1%.

4. Set function generator controls as follows

SWEEP	NORM
INPUT VOLTAGE	-5V ±3mv

Adjust Expansion control to obtain 10KHz ±1%.

5. Apply 0 V ±3mv to VCF input and adjust R511 to obtain 200Hz ±1%.

5.3.9 SYMMETRY CONTROL CHECK (no calibration required)

A. Monitor the triangle waveform at TP280 X10 Amp output.

B. Place the Sym switch in the Pos position and note that the ramp rise positive.

C. Place the SYM switch in the Neg position and note that the ramp rises negative.

D. Note that the ramp falltime is less than 10% of the total period of the waveform from .0001Hz to 10KHz.

E. Place Sym switch in Norm position.

...MING (continued)

... X1 Timing for Decades 100K, 10K, 1K, 100, 10

1. Switch Decade to 100K, Multiplier to 1. Adjust 100K X1 Timing Adj to 100KHz ±.5% as read on counter.

2. Switch Decade to 10K. Adjust 10K Timing Adj to 10KHz ±.5% as read on counter.

3. Switch Decade to 1K. Adjust 1K Timing Adj to 1KHz ±.5% as read on counter.

4. Switch Decade to 100. Adjust 100 Timing Adj to 100Hz ±.5% as read on counter.

5. Switch Decade to 10. Adjust 10 Timing Adj to 10Hz ±.5% as read on counter.

S. Check the remaining decades on the Multiplier X1 end to insure that frequency is within ±3%. If it is not, repeat steps 3.5.7 N through R.

T. Check Multiplier dial tracking on all decades to insure that tracking is within ±3% of absolute.

3.5.8 VCF MODE CALIBRATION (Models 503B and 505B only)

A. 0 to +5V

1. Set function generator controls as follows

DECADE	1K
MULTIPLIER	10
VCF MODE	0 to +5V
SWEEP	NORM
VCF INPUT VOLTAGE	+5V ±2mv

2. Adjust EXP control to obtain 1/50 of dial frequency, 200Hz ±1%.

3. Set function generator controls as follows

SWEEP	INV
INPUT VOLTAGE	+5V ±2mv

Adjust R507 until the output frequency is within ±.5% of the dial frequency, 10KHz ±.5%.

B. 0 to ±2.5V

1. Set function generator controls as follows

VCF MODE	0 to ±2.5V
SWEEP	NORMAL
EXP	FULL CW
INPUT VOLTAGE	GND

2. Adjust R505 to obtain one-half the dial frequency, 5KHz ±.5%.

3. Set function generator controls as follows

SWEEP	INV
INPUT VOLTAGE	GND

The frequency should be approximately 5% to 15% higher than in Step 2. This is normal.

TIMING (continued)

X1 Timing for Decades 100K, 10K, 1K, 100, 10

1. Switch Decade to 100K, Multiplier to 1. Adjust 100K X1 Timing Adj to 100KHz ±.5% as read on counter.

2. Switch Decade to 10K. Adjust 10K Timing Adj to 10KHz ±.5% as read on counter.

3. Switch Decade to 1K. Adjust 1K Timing Adj to 1KHz ±.5% as read on counter.

4. Switch Decade to 100. Adjust 100 Timing Adj to 100Hz ±.5% as read on counter.

5. Switch Decade to 10. Adjust 10 Timing Adj to 10Hz ±.5% as read on counter.

S. Check the remaining decades on the Multiplier X1 end to insure that frequency is within ±3%. If it is not, repeat steps 3.5.7 N through R.

T. Check Multiplier dial tracking on all decades to insure that tracking is within ±3% of absolute.

5.3.8 VCF MODE CALIBRATION (Models 503B and 505B only)

A. 0 to +5V

1. Set function generator controls as follows

DECADE	1K
MULTIPLIER	10
VCF MODE	0 to +5V
SWEEP	NORM
VCF INPUT VOLTAGE	+5V ±2mv

2. Adjust EXP control to obtain 1/50 of dial frequency, 200Hz ±1%.

3. Set function generator controls as follows

SWEEP	INV
INPUT VOLTAGE	+5V ±2mv

Adjust R507 until the output frequency is within ±.5% of the dial frequency, 10KHz ±.5%.

B. 0 to ±2.5V

1. Set function generator controls as follows

VCF MODE	0 to ±2.5V
SWEEP	NORMAL
EXP	FULL CW
INPUT VOLTAGE	GND

2. Adjust R505 to obtain one-half the dial frequency, 5KHz ±.5%.

3. Set function generator controls as follows

SWEEP	INV
INPUT VOLTAGE	GND

The frequency should be approximately 5% to 15% higher than in Step 2. This is normal.

5.3.7 L. Decade 100 X10 Timing (continued)

2. Set counter to Time function and while adjusting 100 positive and 100 negative timing potentiometers, switch Function knob from A-B to B-A until time is adjusted to one-half of dial frequency (counter should read 500 and 500). Set counter to Freq. and counter should read 1KHz ±.5%.

M. Decade 10 X10 Timing

1. Set Decade to 10, Multiplier to 10.

2. Connect counter to Sq. Amp.

3. Set counter to Time function and while adjusting 10 positive and 10 negative timing potentiometers, switch Function knob from A-B to B-A until time is adjusted to one half of dial frequency. Counter should read 500 and 500. Set counter to Frequency and check that frequency is 100KHz ±.5%.

N. Decade 1 X10 Timing

1. Set Decade to 1, Multiplier to 10.

2. Connect counter to Sq. Amp.

3. Set counter to Time function and while adjusting 1 positive and 1 negative timing potentiometers, switch function knob from A-B to B-A until time is adjusted to one half of dial setting. Counter should read 500 and 500. Check to see that frequency is 10Hz ±.5%.

P. .1 X10 Timing

1. Set Decade to .1, Multiplier to 10.

2. Connect counter to Sq. Amp.

3. Set counter to Time function and while adjusting .1 positive and .1 negative timing potentiometers, switch Function knob from A-B to B-A until time is adjusted to one-half of dial frequency. Counter should read 500 and 500. Check to see that frequency is 1Hz ±.5%.

Q. Decades .01, .001 and .0001 Timing

1. Set Decade to .01, Multiplier to 10.

2. Connect counter to Sq. Amp.

3. Set counter to Time function and while adjusting .01 positive and .01 negative timing potentiometers, switch Function knob from A-B to B-A until time is adjusted to one-half of dial frequency. Counter should read 500 and 500.

4. Adjust .01 Timing adjust for .1Hz ±.5%.

5. Switch Decade to .001, adjust .001 Timing to .01Hz ±.5%.

6. Switch Decade to .0001. Adjust .0001 Timing to a frequency .001Hz ±.5%.

:G (continued)

100K X10 Timing

1. Set Decade to 100K, Multiplier to X10.

2. Monitor TP280 with oscilloscope. Adjust (H.F. Comp) for a triangle of 8.4V P-P ±100mv.

3. Monitoring square output with counter, adjust 100K timing capacitor for 1MHz ±.5%.

Decade 10K X10 Timing

1. Set function generator controls as follows

DECADE	10K
MULTIPLIER	X10
SQUARE AMP	NORM
ATTENUATOR	MAX CW
AMP 1	SQ
ATTENUATOR	MAX CW

2. Connect counter to Sq. Amp.

3. Connect oscilloscope to Amp 1, set scope controls as follows:

TIME/CM	1µSEC
SWEEP MAGNIFIER	X10
TRIG SOURCE	INT
TRIG SLOPE	+

4. Adjust positive and negative 10K timing potentiometers while switching the Trig slope from + to - on scope until the square risetime and square falltime cross the center line of the scope within one-half a major division, while at the same time adjusting for 100KHz ±.5% on counter. This adjusts the square symmetry so that A and B are of equal time ±.5% and frequency is 100K ±.5%.

K. Decade 1K X10 Timing

1. Set function generator Decade to 1K, other controls same as in paragraph J-1.

2. Connect counter to Sq. Amp.

3. Connect oscilloscope to Amp 1 with scope controls same as in J-3.

4. Adjust the positive and negative 1K timing potentiometers while switching the scope Trig Slope from + to - until the square risetime and square falltime cross the center line of the scope within one-half a major division while at the same time adjusting for 10KHz ±.5%. This adjusts the square symmetry so that A and B are of equal time ±.5% and frequency is 10K ±.5%.

L. Decade 100 X10 Timing

1. Set Decade to 100, Multiplier to 10. Connect counter to Sq. Amp.

TIMING (continued)

I. 100K X10 Timing

1. Set Decade to 100K, Multiplier to X10.

2. Monitor TP280 with oscilloscope. Adjust (H.F. Comp) for a triangle of 8.4V P-P ±100mv.

3. Monitoring square output with counter, adjust 100K timing capacitor for 1MHz ±.5%.

J. Decade 10K X10 Timing

1. Set function generator controls as follows

DECADE	10K
MULTIPLIER	X10
SQUARE AMP	NORM
ATTENUATOR	MAX CW
AMP 1	SQ
ATTENUATOR	MAX CW

2. Connect counter to Sq. Amp.

3. Connect oscilloscope to Amp 1, set scope controls as follows:

TIME/CM	1µSEC
SWEEP MAGNIFIER	X10
TRIG SOURCE	INT
TRIG SLOPE	+

4. Adjust positive and negative 10K timing potentiometers while switching the Trig slope from + to - on scope until the square risetime and square falltime cross the center line of the scope within one-half a major division, while at the same time adjusting for 100KHz ±.5% on counter. This adjusts the square symmetry so that A and B are of equal time ±.5% and frequency is 100K ±.5%.

K. Decade 1K X10 Timing

1. Set function generator Decade to 1K, other controls same as in paragraph J-1.

2. Connect counter to Sq. Amp.

3. Connect oscilloscope to Amp 1 with scope controls same as in J-3.

4. Adjust the positive and negative 1K timing potentiometers while switching the scope Trig Slope from + to - until the square risetime and square falltime cross the center line of the scope within one-half a major division while at the same time adjusting for 10KHz ±.5%. This adjusts the square symmetry so that A and B are of equal time ±.5% and frequency is 10K ±.5%.

L. Decade 100 X10 Timing

1. Set Decade to 100, Multiplier to 10. Connect counter to Sq. Amp.

5.3.6 VCF AMP (continued)

B. Set function generator controls as follows

VCF MODE	OFF
SWEEP	NORM
EXPANSION	FULL CW
INPUT VOLTAGE	GROUND

C. Ground Pin 19 on VCF board connector and adjust +VCF balance with differential voltmeter to zero volts at TP569 (+16V supply).

D. Remove ground and adjust +16V adjust (R514) for +16V ±3mv at TP 5 (+16V supply).

E. Adjust -16V Adj (R563) to obtain -16V ±3mv at TP589 (-16V supply).

F. Set function generator controls as follows

VCF MODE	0 to +5V
SWEEP	INV
EXPANSION	FULL CW

G. Adjust -VCF Bal to obtain equal voltages at TP569 and TP589 ±3mv using differential voltmeter.

H. Repeat steps E through G until both conditions are met.

5.3.7 TIMING

A. Set function generator controls as follows

MODE	RUN
DECADE	100
SYM	NORM
VCF MODE	OFF
OFFSET	NORM
SQ AMP	NORM

TRIG OUT TO SCOPE EXT TRIG IN

B. Monitor Square Amp output with counter.

NOTE: Steps C, D and E are not required for normal calibration, only the timing potentiometer has been replaced or if steps H through cannot be met.

C. Remove Multiplier dial and turn multiplier potentiometer full CCW.

D. Monitoring output frequency, turn multiplier pot CW until frequ has increased 7% to 10%.

E. Replace multiplier dial carefully without moving multiplier cont shaft and tighten both set screws with "1" on dial skirt directly line with index mark on front panel.

F. Set Multiplier to 10 and adjust 100 neg adjust and 100 pos adju obtain 1KHz ±.5% symmetrical <.5%. Symmetry can be checked with function on a counter or an oscilloscope.

G. Set Multiplier to 1 and adjust (100) X1 timing adjust to obtain ±.5%.

5.3.6 VCF AMP (continued)

B. Set function generator controls as follows

VCF MODE	OFF
SWEEP	NORM
EXPANSION	FULL CW
INPUT VOLTAGE	GROUND

C. Ground Pin 19 on VCF board connector and adjust +VCF balance with differential voltmeter to zero volts at TP569 (+16V supply).

D. Remove ground and adjust +16V adjust (R514) for +16V ±3mv at TP (+16V supply).

E. Adjust -16V Adj (R563) to obtain -16V ±3mv at TP589 (-16V supply).

F. Set function generator controls as follows

VCF MODE	0 to +5V
SWEEP	INV
EXPANSION	FULL CW

G. Adjust -VCF Bal to obtain equal voltages at TP569 and TP589 ±3mv using differential voltmeter.

H. Repeat steps E through G until both conditions are met.

5.3.7 TIMING

A. Set function generator controls as follows

MODE	RUN
DECADE	100
SYM	NORM
VCF MODE	OFF
OFFSET	NORM
SQ AMP	NORM
TRIG OUT TO SCOPE EXT TRIG IN	

B. Monitor Square Amp output with counter.

NOTE: Steps C, D and E are not required for normal calibration, only the timing potentiometer has been replaced or if steps H through cannot be met.

C. Remove Multiplier dial and turn multiplier potentiometer full CCW.

D. Monitoring output frequency, turn multiplier pot CW until frequ has increased 7% to 10%.

E. Replace multiplier dial carefully without moving multiplier cont shaft and tighten both set screws with "1" on dial skirt directly line with index mark on front panel.

F. Set Multiplier to 10 and adjust 100 neg adjust and 100 pos adjust obtain 1KHz ±.5% symmetrical <.5%. Symmetry can be checked with function on a counter or an oscilloscope.

G. Set Multiplier to 1 and adjust (100) X1 timing adjust to obtain ±.5%.

5.3.2 INTEGRATOR BALANCE

A. Monitor TP280 (X10 Amp output) with oscilloscope.

B. Ground TP200 (summing junction)

C. Adjust Int Bal (R219) until the output level remains near zero volts.

Noise and 60-cycle ripple will be noticed when adjusted properly.

5.3.3 +16V CALIBRATION (Models 500B and 504B only, or 503B and 505B if VCF board is removed and jumpers installed between TP181-TP569 and TP191-TP589. This would be done only if instrument was required to be put in quick operation and the VCF board was defective.

Connect differential voltmeter to +16V supply, TP181. Adjust +16V adjust R188 to obtain +16V ±3mv.

5.3.4 -16V CALIBRATION (same models as in 5.3.3)

Connect differential voltmeter to -16V supply, TP191 or 192. Adjust -16V adjust, R195, to obtain -16V ±3mv.

5.3.5 LEVEL DETECTOR BALANCE

A. Set oscilloscope controls as follows, using a differential plug-in as Tektronix Type W or equivalent.

VERTICAL SENSITIVITY	MAX SENSITIVITY DIFFERENTIAL MODE
INPUT COUPLING	DC
SWEEP TIMING	.1msec/cm
TRIGGER	EXT POS
MONITOR TEST POINT 280 (triangle waveform at X10 Amp output	

B. Set function generator controls as follows

MODE	RUN
MULTIPLIER	10
DECADE	1K
OFFSET	NORM
SYM	NORM

C. While switching the offset switch from Pos to Neg, notice approximately zero volts reference at the peaks of the triangle in Neg and Pos positions.

D. Adjust Level Detector Bal (LD adjust) until these peaks are equally centered about ground ±50mv.

E. Place Offset switch to Norm position.

F. Adjust L.D. Pos and Neg Ref adj. to obtain a +4.2V peak ±50mv and a -4.2V peak ±50mv at TP280.

5.3.6 VCF AMP (Models 503B and 505B only)

A. Check to see that VCF plug-board, 443-111, is inserted and that jumpers between +16V (TP181-TP569) and -16V (TP191-TP589) are removed.

5.3.2 INTEGRATOR BALANCE

A. Monitor TP280 (X10 Amp output) with oscilloscope.

B. Ground TP200 (summing junction)

C. Adjust Int Bal (R219) until the output level remains near zero volts.

Noise and 60-cycle ripple will be noticed when adjusted properly.

5.3.3 +16V CALIBRATION (Models 500B and 504B only, or 503B and 505B if VCF board is removed and jumpers installed between TP181-TP569 and TP191-TP589. This would be done only if instrument was required to be put in quick operation and the VCF board was defective.

Connect differential voltmeter to +16V supply, TP181. Adjust +16V adjust R188 to obtain +16V ±3mv.

5.3.4 -16V CALIBRATION (same models as in 5.3.3)

Connect differential voltmeter to -16V supply, TP191 or 192. Adjust -16V adjust, R195, to obtain -16V ±3mv.

5.3.5 LEVEL DETECTOR BALANCE

A. Set oscilloscope controls as follows, using a differential plug-in as Tektronix Type W or equivalent.

VERTICAL SENSITIVITY	MAX SENSITIVITY DIFFERENTIAL MODE
INPUT COUPLING	DC
SWEEP TIMING	.1msec/cm
TRIGGER	EXT POS
MONITOR TEST POINT 280 (triangle waveform at X10 Amp output	

B. Set function generator controls as follows

MODE	RUN
MULTIPLIER	10
DECADE	1K
OFFSET	NORM
SYM	NORM

C. While switching the offset switch from Pos to Neg, notice approximately zero volts reference at the peaks of the triangle in Neg and Pos positions.

D. Adjust Level Detector Bal (LD adjust) until these peaks are equally centered about ground ±50mv.

E. Place Offset switch to Norm position.

F. Adjust L.D. Pos and Neg Ref adj. to obtain a +4.2V peak ±50mv and a -4.2V peak ±50mv at TP280.

5.3.6 VCF AMP (Models 503B and 505B only)

A. Check to see that VCF plug-board, 443-111, is inserted and that jumpers between +16V (TP181-TP569) and -16V (TP191-TP589) are removed.

Before proceeding, set waveform generator controls as follows

MODE	RUN
MULTIPLIER	10
DECADE	1K
VCF	OFF
SYMMETRY	NORM
SWEEP	NORM
OFFSET	NORM

5.3.1 POWER SUPPLY

NOTE: Instrument should be ON for at least thirty minutes before any of the following adjustments is made.

A. With instrument running, monitor the voltage across R103 (2Ω resistor) with VOM

B. With a jumper lead, short the +18V supply, TP142, to ground. Adjust R102 to obtain 1.2V ±500mv as indicated on VOM and remove short.

NOTE: DO NOT short circuit +18V supply longer than necessary, as damage may occur to Q100.

C. With instrument running, monitor the voltage across R110 (2Ω resistor) with VOM.

D. With a jumper lead, short the -18V supply, TP150, to ground and adjust R112 to obtain 1.2V ±500mv as indicated on VOM and remove short.

NOTE: DO NOT short circuit -18V supply longer than necessary, as damage may occur to Q110.

E. +18V supply calibration: Connect differential voltmeter to +18V supply, TP142. Adjust +18V adjust to obtain +18V ±2mv.

F. -18V supply calibration: Connect differential voltmeter to -18V supply, TP150. Adjust -18V adjust to obtain -18V ±2mv.

G. Line regulation check

1. Connect differential voltmeter to +18V test point, TP142.

2. Using Variac, vary line voltage from 105V to 125V while monitoring supply voltage. Supply voltage should remain constant ±10mv.

3. Connect differential voltmeter to -18V supply, TP150

4. Using Variac, vary line voltage from 105V to 125V while monitoring supply voltage. Supply voltage should remain constant ±10mv.

H. Power supply ripple check

1. Set oscilloscope controls as follows

VERTICAL SENSITIVITY	MAX
INPUT COUPLING	AC
SWEEP TIME	10msec/cm
TRIGGER	LINE

2. Measure 120Hz ripple content of the +18V, TP142, and -18V supplies. Ripple on each supply should be less than 1mv.

Before proceeding, set waveform generator controls as follows 5.3.2

MODE	RUN
MULTIPLIER	10
DECADE	1K
VCF	OFF
SYMMETRY	NORM
SWEEP	NORM
OFFSET	NORM

5.3.1 POWER SUPPLY 5.3.3

NOTE: Instrument should be ON for at least thirty minutes before any of the following adjustments is made.

A. With instrument running, monitor the voltage across R103 (2Ω resistor) with VOM.

B. With a jumper lead, short the +18V supply, TP142, to ground. Adjust R102 to obtain 1.2V ±500mv as indicated on VOM and remove short. 5.3.4

NOTE: DO NOT short circuit +18V supply longer than necessary, as damage may occur to Q100.

C. With instrument running, monitor the voltage across R110 (2Ω resistor) with VOM. 5.3.5

D. With a jumper lead, short the -18V supply, TP150, to ground and adjust R112 to obtain 1.2V ±500mv as indicated on VOM and remove short.

NOTE: DO NOT short circuit -18V supply longer than necessary, as damage may occur to Q110.

E. +18V supply calibration: Connect differential voltmeter to +18V supply, TP142. Adjust +18V adjust to obtain +18V ±2mv.

F. -18V supply calibration: Connect differential voltmeter to -18V supply, TP150. Adjust -18V adjust to obtain -18V ±2mv.

G. Line regulation check

1. Connect differential voltmeter to +18V test point, TP142.

2. Using Variac, vary line voltage from 105V to 125V while monitoring supply voltage. Supply voltage should remain constant ±10mv.

3. Connect differential voltmeter to -18V supply, TP150

4. Using Variac, vary line voltage from 105V to 125V while monitoring supply voltage. Supply voltage should remain constant ±10mv.

H. Power supply ripple check

1. Set oscilloscope controls as follows

VERTICAL SENSITIVITY	MAX
INPUT COUPLING	AC
SWEEP TIME	10msec/cm
TRIGGER	LINE

5.3

2. Measure 120Hz ripple content of the +18V, TP142, and -18V supplies. Ripple on each supply should be less than 5mv.

5.1.0 FAILURE TO OPERATE

Read operating instructions to insure a thorough understanding of all front panel controls.

Should instrument fail to have an output from any of three amplifier outputs, check the following.

A. Unplug instrument and check 117V 3AG 1/2 amp fuse, or 3AG 1/4 amp for 220V operation, located on rear panel.

B. Remove cover and check for 117V AC between TP100 and 102. This checks power line cord.

Measure between TP104 and TP107 for 117V AC. This check is for power on/off switch and associated wire. It insures that power is going into power transformer.

If trouble is not located in above steps, follow calibration procedure until trouble is located.

5.2.0 FAILURE TO MEET FACTORY SPECIFICATIONS

Check the following.

A. Proper operating instructions in Section 3 to insure a thorough understanding of all front panel controls.

B. Perform all steps of calibration procedure. If instrument still does not meet specifications, contact factory and arrange to return for a complete check-out and evaluation.

5.3.0. CALIBRATION PROCEDURE

The following test equipment or suitable equivalents of known accuracy are required for complete calibration of the Models 500B, 503B, 504B and 505B function generators.

A. Oscilloscope, D.C. to 50MHz, Tektronix 547 with 1A1 and W plug-ins

B. Distortion Analyzer, Hewlett Packard 333A

C. Variac Powerstat

D. Frequency Counter, CMC 607A

E. Constant voltage DC source accurate to 1mv

F. Differential voltmeter, Medistor A-75.

G. 600-ohm purely resistive load

H. VOM, Simpson 260

CALIBRATION PROCEDURE APPLIES TO MODELS 500B, 503B, 504B, and 505B unless otherwise indicated.

5.1.0 FAILURE TO OPERATE

Read operating instructions to insure a thorough understanding of all front panel controls.

Should instrument fail to have an output from any of three amplifier outputs, check the following.

A. Unplug instrument and check 117V 3AG 1/2 amp fuse, or 3AG 1/4 amp for 220V operation, located on rear panel.

B. Remove cover and check for 117V AC between TP100 and 102. This checks power line cord.

Measure between TP104 and TP107 for 117V AC. This check is for power on/off switch and associated wire. It insures that power is going into power transformer.

If trouble is not located in above steps, follow calibration procedure until trouble is located.

5.2.0 FAILURE TO MEET FACTORY SPECIFICATIONS

Check the following

A. Proper operating instructions in Section 3 to insure a thorough understanding of all front panel controls.

B. Perform all steps of calibration procedure. If instrument still does not meet specifications, contact factory and arrange to return for a complete check-out and evaluation.

5.3.0 CALIBRATION PROCEDURE

The following test equipment or suitable equivalents of known accuracy are required for complete calibration of the Models 500B, 503B, 504B and 505B function generators.

A. Oscilloscope, D.C. to 50MHz, Tektronix 547 with 1A1 and W plug-ins

B. Distortion Analyzer, Hewlett Packard 333A

C. Variac Powerstat

D. Frequency Counter, CMC 607A

E. Constant voltage DC source accurate to 1mv

F. Differential voltmeter, Medistor A-75.

G. 600-ohm purely resistive load

H. VOM, Simpson 260

CALIBRATION PROCEDURE APPLIES TO MODELS 500B, 503B, 504B, and 505B unless otherwise indicated.

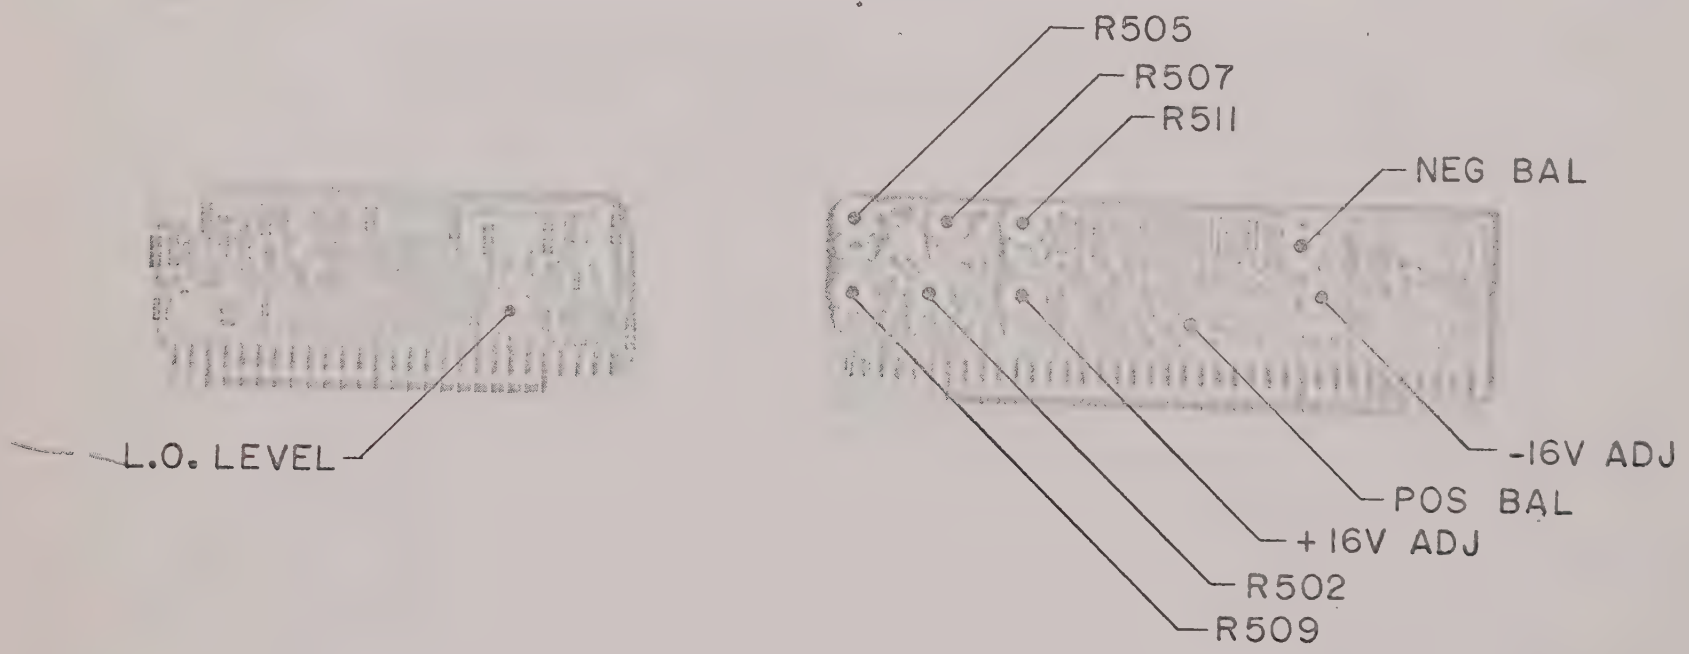

ADJUSTMENTS & TEST POINTS

LOCKOUT AMP & VCF AMP

FIGURE 5.0.2

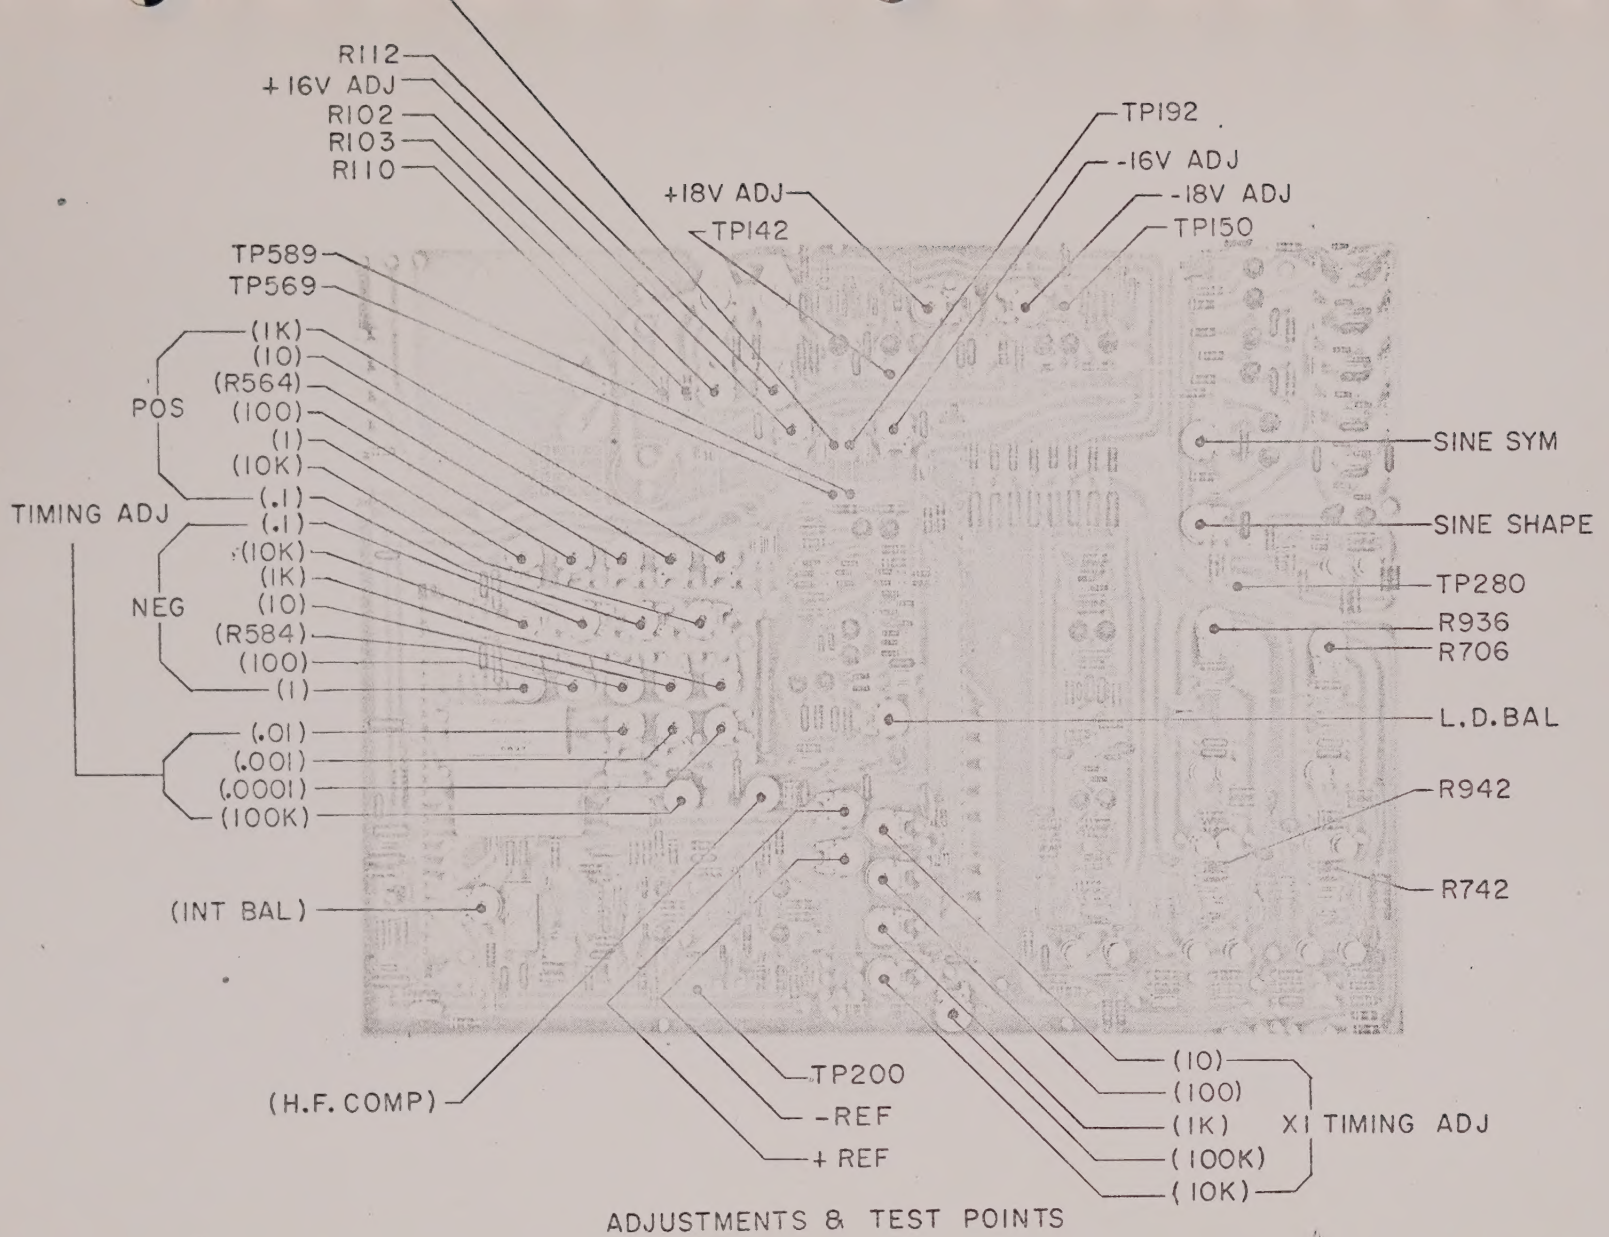

ADJUSTMENTS & TEST POINTS

MODEL 505B,504B,503B,500B

FIGURE 5.0.1

82818